

[Manuals.plus](#) /

> [Jojoka](#) /

> Jojoka 63-inch Long Dresser and TV Stand (Model PHK_36SS6RYNIcR) User Manual

Jojoka PHK_36SS6RYNIcR

Jojoka 63-inch Long Dresser and TV Stand User Manual

Model: PHK_36SS6RYNIcR

INTRODUCTION

Thank you for purchasing the Jojoka 63-inch Long Dresser and TV Stand. This versatile furniture piece combines ample storage with a functional surface for your television, suitable for screens ranging from 55 to 70 inches. This manual provides essential information for safe assembly, proper use, and maintenance to ensure the longevity of your product.

SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembly and use. Failure to follow these instructions may result in injury or product damage.

- **Anti-Tip Device:** Always install the included anti-tip device to securely anchor the dresser to the wall. This is crucial to prevent tipping, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the top surface or drawers. Overloading can compromise stability and cause damage.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten fasteners.
- **Placement:** Place the dresser on a level surface. Adjustable leveling feet are provided to ensure stability on uneven floors.
- **Children and Pets:** Keep small parts and packaging materials away from children and pets during assembly. Do not allow children to climb on or play with the dresser.

Premium 3-Layer Fabric



Hardwearing



Breathable



Easy-to-Clean

Image: Illustration of the anti-tip device installation. The top diagram shows correct installation with the dresser secured to the wall, while the bottom diagram shows an incorrect, unsecured dresser tipping over. Always use the anti-tip device for safety.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Steel Frame Components
- Wooden Tabletop Panels
- 12 Fabric Drawers
- Adjustable Leveling Feet
- Anti-Tip Kit
- Assembly Hardware (screws, wrenches, etc.)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly typically requires one person. Follow the numbered steps in the included illustrated instructions. A soft surface is recommended for assembly to prevent damage.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface. Verify against the package contents list.
2. **Assemble Frame:** Connect the steel frame components according to the diagrams in the separate assembly guide. Ensure all connections are secure but do not fully tighten screws until the frame is complete.
3. **Attach Tabletop:** Secure the wooden tabletop panels to the top of the assembled steel frame using the provided hardware.
4. **Install Leveling Feet:** Screw the adjustable leveling feet into the bottom of the frame. Adjust them to ensure the dresser is stable and level on your floor.
5. **Insert Drawers:** Unfold the fabric drawers and insert the bottom panels. Place the assembled drawers into their designated slots within the frame.
6. **Install Anti-Tip Device:** Following the instructions provided with the anti-tip kit, securely attach the device to the back of the dresser and to a wall stud.



12 Fabric Drawers & Large Storage

Image: The fully assembled Jojoka 63-inch Long Dresser and TV Stand, showcasing its rustic brown finish and overall structure in a living room environment.



Image: A diagram illustrating the product dimensions, including the overall length (63 inches), height (30.7 inches), and individual drawer dimensions (14.88"L x 11.81"W x 7.09"H).

OPERATING INSTRUCTIONS

This unit functions as both a storage dresser and a TV stand.

- **Drawers:** The 12 fabric drawers are designed for organizing clothing, blankets, toys, and other household items. Pull the arch handles gently to open and push to close. Avoid forcing drawers if they feel stuck.
- **Open Shelf:** The integrated open shelf is suitable for media devices such as cable boxes, game consoles, or decorative items. Ensure proper ventilation for electronic devices.
- **TV Placement:** The top surface is designed to accommodate flat-screen televisions up to 70 inches. Center the TV on the surface for optimal stability.

Stability by Design: Steel & Wood Rack



Wooden Tabletop



Adjustable Feet



Image: An overhead view of the dresser with all 12 drawers pulled out, demonstrating the ample storage capacity for clothes, accessories, and other items.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your Jojoka dresser.

- **Cleaning the Frame and Tabletop:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Cleaning Fabric Drawers:** The 3-layer composite fabric drawers are wear-resistant and easy to clean. Most spills can be wiped clean with a damp cloth. For deeper cleaning, spot clean with a mild detergent and allow to air dry completely. Do not machine wash.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration of the wood finish and fabric.



Image: A cutaway view of the premium 3-layer fabric drawer material, showing the fabric, MDF board, and arch handle. Icons indicate its hardwearing, breathable, and easy-to-clean characteristics.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly/unstable.	Uneven floor; loose fasteners; leveling feet not adjusted.	Adjust the leveling feet until stable. Check and tighten all assembly screws. Ensure the anti-tip device is installed correctly.
Drawers do not slide smoothly.	Drawer not inserted correctly; obstruction; drawer overloaded.	Remove the drawer and re-insert, ensuring it's properly aligned. Check for any items obstructing the drawer path. Reduce the weight in the drawer.

Problem	Possible Cause	Solution
Missing parts during assembly.	Packaging error; parts overlooked.	Double-check all packaging materials. Contact Jojoka customer support with the specific part number from the assembly guide.

SPECIFICATIONS

- **Brand:** Jojoka
- **Model Number:** PHK_36SS6RYNIcR
- **Material:** Engineered Wood (tabletop), Steel (frame), 3-Layer Composite Fabric (drawers)
- **Color:** Rustic Brown
- **Overall Dimensions (L x W x H):** 63"L x 13.8"W x 29.5"H
- **Number of Drawers:** 12
- **Drawer Dimensions (L x W x H):** Approximately 14.88"L x 11.81"W x 7.09"H
- **Item Weight:** 44.3 Pounds
- **Assembly Required:** Yes
- **TV Size Compatibility:** 55/65/70 Inch TVs

WARRANTY INFORMATION

Jojoka products are manufactured with quality and care. For specific warranty details, please refer to the warranty card included with your purchase or contact Jojoka customer support. Standard return policy is 30 days from purchase date.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Jojoka customer service. Our team is ready to provide quick, helpful support.
For support, please visit the official Jojoka store on Amazon:[Jojoka Amazon Store](#)