

[Manuals.plus](#) /

› [ActiveTrail](#) /

› ActiveTrail 12 ft x 16 ft Heavy Duty Wooden Gazebo Instruction Manual

ActiveTrail HPaEZ0vihF6e97mKSgTfcQeU0S

ActiveTrail 12 ft x 16 ft Heavy Duty Wooden Gazebo Instruction Manual

Model: HPaEZ0vihF6e97mKSgTfcQeU0S

1. INTRODUCTION

Thank you for choosing the ActiveTrail 12 ft x 16 ft Heavy Duty Wooden Gazebo. This gazebo is designed to provide a durable and elegant outdoor living space, featuring a robust spruce wood frame and a double-layered galvanized steel hardtop roof. It includes integrated netting and curtains for enhanced comfort and privacy. This manual provides essential information for safe assembly, operation, and maintenance of your gazebo.



Image: The ActiveTrail wooden gazebo providing a sheltered outdoor space in various weather conditions.

2. IMPORTANT SAFETY INFORMATION

Read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or property damage.

- **Secure Installation:** Ensure the gazebo is securely anchored to the ground using appropriate hardware for your specific surface (e.g., concrete, wood deck, soil). Consult local building codes for anchoring requirements.
- **Site Selection:** Choose a level surface for installation, clear of overhead obstructions like power lines or tree branches.
- **Assembly Personnel:** Assembly requires at least two to three adults. Do not attempt to assemble alone.
- **Weather Conditions:** Do not assemble in high winds, heavy rain, or lightning conditions.
- **Weight Limits:** Do not hang heavy objects from the gazebo frame. Do not climb on the gazebo structure.
- **Snow Load:** While designed for heavy snow loads, it is recommended to clear excessive snow accumulation from the roof to prevent structural damage.
- **Fire Safety:** Keep all heat sources and open flames away from the gazebo fabric (curtains and netting).

3. PACKAGE CONTENTS

Before beginning assembly, carefully unpack all components and compare them with the packing list provided in your product packaging. Ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

4. SETUP AND ASSEMBLY

Assembly typically takes approximately 6 hours with two to three adults. About 95% of screw holes are pre-drilled for convenience. For optimal weatherproofing, 5% of the assembly requires self-tapping screws.

4.1 Tools Required

- Ladder
- Drill (with appropriate bits for self-tapping screws)
- Hex Keys (often included)
- Wrench/Socket Set
- Measuring Tape
- Safety Glasses and Gloves

4.2 Assembly Steps

1. **Site Preparation:** Clear and level the chosen installation area. Ensure adequate space around the gazebo for assembly and future use.
2. **Frame Assembly:** Begin by assembling the main wooden posts and beams according to the detailed diagrams in your separate assembly guide. Ensure all connections are secure.
3. **Roof Structure Installation:** Attach the roof support beams and then carefully install the galvanized steel roof panels. Ensure proper overlap and sealing for weather resistance.
4. **Curtain and Netting Attachment:** Install the curtain and netting rails, then hang the khaki polyester curtains and fine mesh netting.
5. **Final Inspection:** Double-check all bolts, screws, and connections to ensure they are tight and secure.

SIZE DETAILS

12'x16' Wood Gazebo

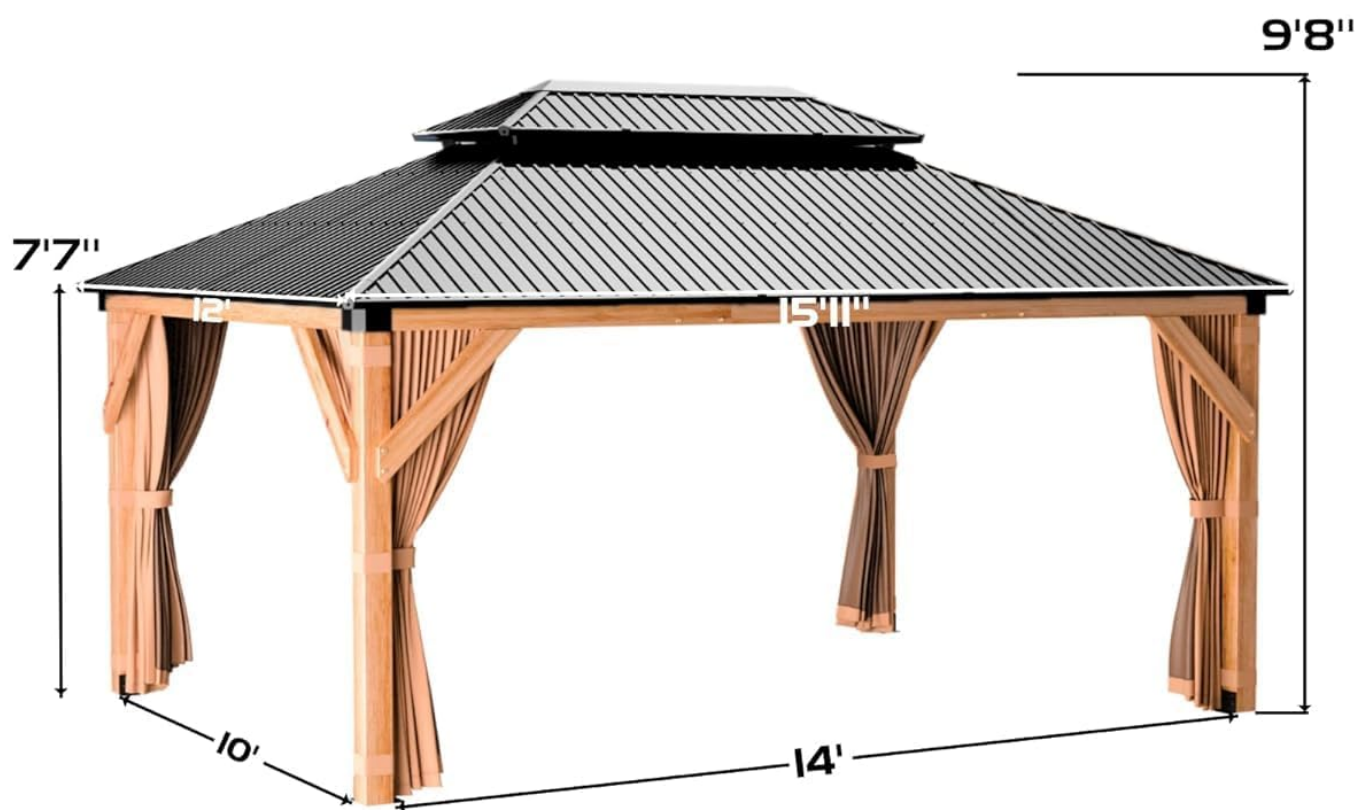


Image: An illustration showing the various components of the gazebo during the assembly process.



Image: Detail of the robust construction, highlighting the 27-gauge galvanized steel roof and 4.7" x 4.7" reinforced wooden posts.

5. OPERATING INSTRUCTIONS

5.1 Using the Curtains and Netting

Your gazebo is equipped with both privacy curtains and insect netting, designed for versatile use. The khaki polyester fabric curtains offer light blocking and rain protection, while the fine mesh netting provides a mosquito-proof barrier.

- **Fully Open:** Tie back both curtains and netting to the posts for maximum airflow and an unobstructed view.
- **Netting Only:** Close the netting to keep insects out while maintaining visibility and airflow.
- **Semi-Open:** Close curtains partially for shade or privacy on one or more sides.
- **Fully Closed:** Close all curtains for complete privacy, sun protection, or light rain protection.

Image: Various configurations of the gazebo's curtains and netting, demonstrating options for privacy and insect protection.

6. MAINTENANCE

Regular maintenance will extend the life and appearance of your ActiveTrail gazebo.

6.1 Wood Frame Care

- Inspect the wood frame annually for any signs of wear, cracks, or rot.
- Clean the wood with a mild soap and water solution. Rinse thoroughly and allow to dry completely.
- Reapply a weather-resistant wood sealant or stain every 1-3 years, or as needed, to protect against UV damage and moisture.
- Check all bolts and screws periodically and tighten if necessary.

6.2 Roof Care

- The galvanized steel roof is designed for durability and weather resistance. Clean with water and a soft brush to remove debris, leaves, or dirt.
- Inspect the roof panels for any damage or loose fasteners, especially after severe weather.
- Ensure the built-in efficient rainwater drainage system is clear of obstructions to prevent water pooling.

Image: The gazebo's leak-proof roof and efficient drainage system ensuring long-term performance.

6.3 Fabric Care (Curtains & Netting)

- The khaki polyester fabric is fade-resistant and easy to clean. Hand wash with mild soap and cold water, or spot clean as needed.
- Allow fabric to air dry completely before storing or closing to prevent mildew.
- For prolonged periods of non-use or during severe weather, it is recommended to remove and store the curtains and netting indoors.

6.4 Winter Maintenance

- While the gazebo is designed for all-weather use, regularly clear heavy snow accumulation from the roof to prevent excessive stress on the structure.
- Ensure the ground anchors remain secure throughout the winter months.

WOOD GAZEBO

What's the difference?

Featured high-density spruce and galvanized steel roof - this gazebo will accompany you for decades



Image: The gazebo's robust construction allows it to withstand winter conditions.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your gazebo.

- **Issue: Water Leakage from Roof.**

Solution: Check roof panel overlaps and ensure all screws are tightened. Verify that the drainage system is clear of debris.

- Issue: Gazebo Feels Unstable.**
Solution: Re-check all frame connections and ensure all bolts are securely tightened. Confirm that the gazebo is properly anchored to a level surface.
- Issue: Curtains/Netting Not Sliding Smoothly.**
Solution: Inspect the rails for any obstructions or damage. Clean the rails and fabric runners.
- Issue: Wood Discoloration or Cracking.**
Solution: This is normal wear for outdoor wood. Apply a wood sealant or stain as part of regular maintenance to protect and restore appearance.

8. SPECIFICATIONS

8.1 Product Dimensions



Image: Detailed dimensions of the 12 ft x 16 ft gazebo.

- Overall Footprint:** 12 ft (W) x 16 ft (L) (144"W x 192"L)
- Overall Height:** Approximately 116" (9'8")
- Entry Height:** Approximately 91" (7'7")
- Post Dimensions:** 4.7" x 4.7" reinforced posts
- Item Weight:** 425.1 Pounds

8.2 Material Specifications

Feature	Specification
Brand	ActiveTrail
Model Number	HPaEZ0vihF6e97mKSgTfcQeU0S
Frame Material	Spruce Wood (Pine Wood)
Roof Material	27-gauge Galvanized Steel
Curtain/Netting Material	Khaki Polyester Fabric
Water Resistance Level	Waterproof
UV Protection	No UV Protection (for roof, wood is treated)
Assembly Required	Yes
GTIN (UPC)	822200751465

9. WARRANTY INFORMATION

For detailed warranty information, including coverage, terms, and conditions, please refer to the warranty card included with your product packaging or visit the official ActiveTrail website. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing or damaged parts, please contact

ActiveTrail customer support. Contact information can typically be found on the product packaging, the manufacturer's website, or your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question