



[Manuals.plus](#) /

› [Oakwonder](#) /

› Oakwonder 14L Automatic Dog Feeder Instruction Manual

Oakwonder DOGS-119

Oakwonder 14L Automatic Dog Feeder Instruction Manual

Model: DOGS-119

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Oakwonder 14L Automatic Dog Feeder. This device is designed to provide consistent and scheduled feeding for medium to large and extra-large dog breeds, ensuring your pet receives appropriate portions even when you are away.

The 14L Large Capacity is ideal For Feeding Multiple Pets.

The 14L large-capacity automatic feeder is perfect for feeding multiple pets. It stores more food at once, eliminating the need for daily refills, making feeding more convenient and hassle-free.



Image: The Oakwonder 14L Automatic Dog Feeder, shown with two dogs, emphasizing its large 14L capacity suitable for multiple or large pets.

PRODUCT COMPONENTS

The Oakwonder 14L Automatic Dog Feeder consists of the following main parts:

- Food Storage Container (14L capacity)
- Feeder Base with Dispensing Mechanism
- Removable Food Bowl
- Control Panel
- Lid with Moisture-Proof Bag Compartment
- USB Power Cable (for primary power)
- Rechargeable Lithium Battery (internal, for backup power)



Image: The Oakwonder 14L Automatic Dog Feeder, showing its main body, food bowl, and a cat using it. Insets show the battery compartment and USB power port.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Cleaning:** Before first use, clean the food storage container and removable food bowl with mild soap and water. Ensure all parts are completely dry before assembly.
3. **Assembly:** Place the food storage container securely onto the feeder base. Attach the removable food bowl to the front of the feeder.
4. **Power Supply:**
 - **Primary Power:** Connect the USB power cable to the feeder and plug it into a standard wall adapter (not included).
 - **Backup Power:** The feeder includes an internal 1200mAh rechargeable lithium battery. Ensure the appliance is fully charged before initial use. This battery provides power during outages, maintaining feeding schedules. Avoid charging with more than 2A current to prevent battery damage.
5. **Fill Food Container:** Open the lid and fill the 14L food storage container with dry pet food. Ensure the lid is securely closed to activate the moisture-proof seal.



Image: Illustration highlighting the 1200mAh long-lasting rechargeable battery and the built-in desiccant compartment within the lid, designed to keep food dry and fresh.

OPERATING INSTRUCTIONS

Setting Meal Schedules and Portion Sizes

The feeder allows for up to 4 daily feeding times with adjustable portion sizes.

1. **Access Control Panel:** Locate the control panel on the feeder.
2. **Set Time:** Adjust the current time on the feeder's display. Refer to the specific button functions on the control panel for time setting.
3. **Program Feeding Times:** Use the programming buttons to set up to four distinct feeding times for each day.
4. **Adjust Portion Sizes:** For each feeding time, select the desired portion size. The feeder dispenses dry food in measured units. Consult the manual's appendix for a guide on portion unit to weight conversion if available.
5. **Save Settings:** Ensure all settings are saved according to the control panel instructions.

Voice Recording Function

You can record a personalized voice message (up to 10 seconds) that will play at each scheduled mealtime.

1. **Activate Recording Mode:** Press and hold the "Record" button on the control panel.
2. **Record Message:** Speak clearly into the microphone. The recording will automatically stop after 10 seconds or when the button is released.
3. **Test Playback:** Press the "Play" button to listen to your recorded message.
4. **Delete/Re-record:** To change the message, simply re-record over the existing one.

This feature helps comfort your pet and signals mealtime, even when you are not present.

14L Large Capacity

Pet health starts with diet



Image: The automatic feeder displaying key features such as 14L large capacity, timed feeding, easy cleaning, and power failure protection.



Image: The automatic feeder in a home setting, with inset images of people traveling and working, illustrating how the feeder provides convenience for pet owners.

MAINTENANCE

Cleaning the Feeder

Regular cleaning ensures hygiene and proper functioning of the feeder.

1. **Unplug and Empty:** Disconnect the feeder from power and empty any remaining food from the container and bowl.
2. **Disassemble:** Remove the food storage container and the food bowl from the base.
3. **Wash Components:** Wash the food storage container and food bowl with mild soap and water. Avoid using abrasive cleaners.
4. **Clean Base:** Wipe the feeder base with a damp cloth. Do not submerge the base in water, as it contains electronic components.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling and refilling with food.

Moisture-Proof Lid

The feeder features a secure locking lid with a moisture-proof design to keep food fresh.

- Ensure the lid is always securely closed after refilling to maintain food freshness and prevent humidity.
- The lid may contain a desiccant packet. Replace this packet periodically as recommended by the manufacturer (if applicable) to optimize moisture absorption.

Special feeding design ensures no food shortages.

Removable food bowl for easy cleaning and healthy eating.



Image: The feeder demonstrating the food dispensing mechanism and the easily removable food bowl for convenient cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder not dispensing food.	Food hopper is empty. Food chute is blocked. Incorrect schedule settings. No power.	Refill food hopper. Check and clear any blockages in the chute. Verify feeding schedule and portion settings. Ensure power adapter is connected and working, or check battery level.

Problem	Possible Cause	Solution
Food is not fresh or appears damp.	Lid not securely closed. Moisture-proof bag needs replacement (if applicable).	Ensure the lid is fully sealed after refilling. Check and replace the desiccant packet in the lid if present and saturated.
Voice recording not playing.	No message recorded. Volume too low.	Record a new voice message. Adjust the volume setting on the control panel.
Feeder lost settings after power outage.	Backup battery is low or depleted.	Ensure the internal rechargeable battery is fully charged. The feeder has a power outage memory feature, but a depleted backup battery will not retain settings.

SPECIFICATIONS

Model Number: DOGS-119

Brand: Oakwonder

Capacity: 14 Liters (approximately 60 cups of dry food)

Product Dimensions (L x W x H): 18.11 x 9.64 x 14.37 inches

Item Weight: 3.97 Pounds

Power Source: USB (primary), 1200mAh Rechargeable Lithium Battery (backup)

Daily Feeding Times: Up to 4 programmable meals

Voice Recording: Up to 10 seconds

Special Features: Moisture-Proof Locking Lid, Power Outage Memory

Target Species: Dog (suitable for medium to large and extra-large breeds)

14L Large Capacity



Fully charge the appliance before use.

Avoid charging with more than 2A current to prevent battery damage, and store it in a cool, dry place.



Image: A visual representation of the feeder's dimensions: 18.11 inches (length), 9.64 inches (width), and 14.37 inches (height), highlighting its 14L capacity.

SAFETY INFORMATION

- This appliance is for indoor use only.
- Do not immerse the feeder base in water or other liquids.
- Use only dry pet food with this feeder. Do not use wet food, canned food, or treats.
- Keep out of reach of children and pets when not in use or during cleaning.
- Ensure the power cord is placed where pets cannot chew on it.
- Do not attempt to repair or modify the feeder yourself. Contact customer support for assistance.
- Always unplug the feeder before cleaning or maintenance.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact Oakwonder customer service directly. The product includes an instruction manual for further details.

