

[Manuals.plus](#) /

› [Legami](#) /

› Legami Click&Clack Ladybug Two-Color Pen User Manual

Legami CLICK0030

Legami Click&Clack Ladybug Two-Color Pen User Manual

Model: CLICK0030

INTRODUCTION

Thank you for choosing the Legami Click&Clack Ladybug Two-Color Pen. This pen is designed for ease of use, offering both black and red ink with a simple click mechanism. Its 1mm tip provides a smooth writing experience, suitable for various tasks at school, home, or the office. This manual provides essential information for the proper use and care of your pen.



Image: The Legami Click&Clack Ladybug Two-Color Pen, featuring its distinctive red barrel with black spots and a ladybug character at the top.

SETUP

The Legami Click&Clack pen is ready for immediate use upon removal from its packaging. No assembly or special preparation is required.

1. **Unpack:** Carefully remove the pen from its packaging.
2. **Inspect:** Check the pen for any visible damage.
3. **Ready to Use:** The pen is now ready for writing.

OPERATING INSTRUCTIONS

This pen features a convenient Click&Clack mechanism to switch between two ink colors: black and red.

1. **Select Color:** To extend the black ink tip, press down on the black button located at the top of the pen.

2. **Switch Color:** To switch to red ink, press down on the red button. The previously extended tip will retract automatically.
3. **Retract Tip:** To retract the currently extended tip, press the opposite color button.



Image: A child's hands holding the Legami Click&Clack Ladybug pen, actively writing in a spiral-bound notebook, demonstrating its use.

MAINTENANCE

Proper care will ensure the longevity and optimal performance of your Legami pen.

- **Storage:** Store the pen with the tip retracted when not in use to prevent accidental marks and ink drying.
- **Temperature:** Avoid exposing the pen to extreme temperatures (very hot or very cold), as this can affect ink flow and pen materials.
- **Cleaning:** If the pen barrel becomes dirty, wipe it gently with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Refills:** This model is not designed for user-replaceable ink refills.

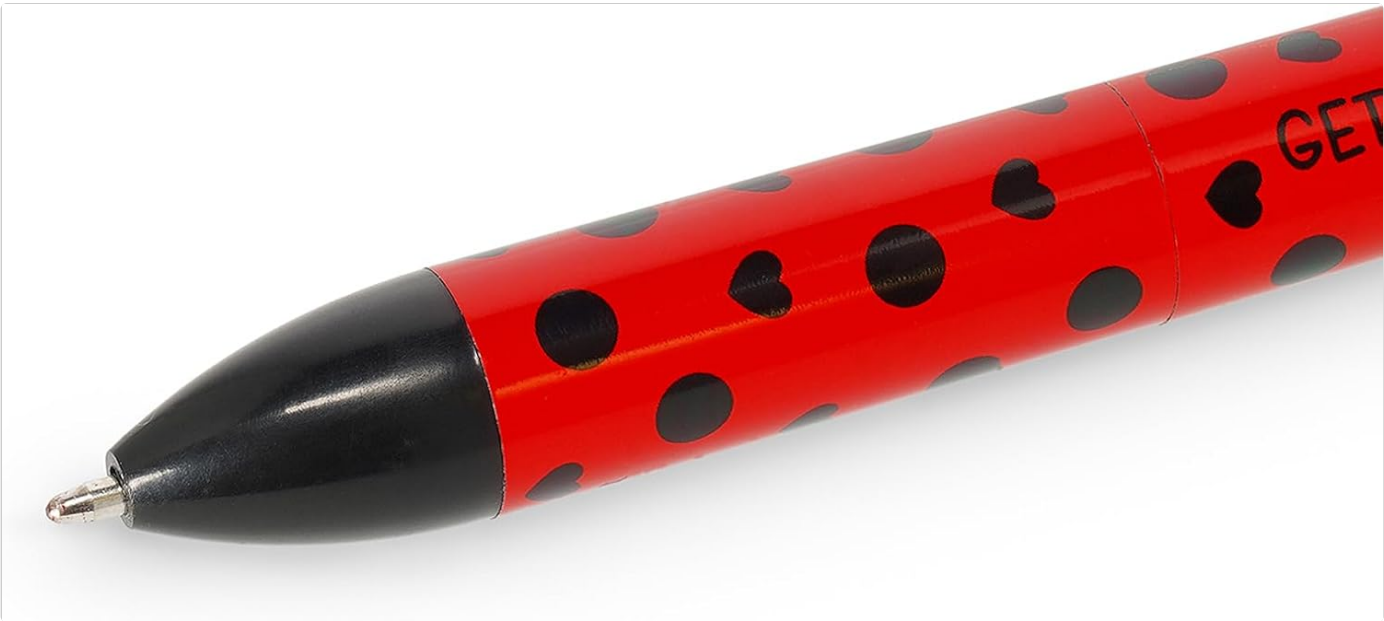


Image: A close-up view of the pen's tip, showing the fine 1mm ballpoint, highlighting the precision for writing and the importance of keeping it clean.

TROUBLESHOOTING

If you encounter issues with your pen, refer to the following common solutions:

Problem	Possible Cause	Solution
Ink not flowing smoothly.	Dried ink on the tip, or air bubble in the ink cartridge.	Try scribbling on a piece of scrap paper to restart ink flow. Ensure the pen has not been stored with the tip exposed.
Tip does not retract.	Mechanism jam or foreign object.	Gently press the other color button firmly. Avoid forcing the mechanism.
Pen body is damaged.	Physical impact or excessive force.	Discontinue use if the pen is broken or leaking ink.

SPECIFICATIONS

- **Brand:** Legami
- **Model:** CLICK0030
- **Writing Instrument Type:** Ballpoint Pen
- **Ink Colors:** Black, Red
- **Tip Size:** 1 mm (Fine)
- **Mechanism:** Click&Clack
- **Dimensions (LxWxH):** 12 x 12 x 140 mm
- **Item Weight:** 15.5 Grams
- **Character Theme:** Ladybug
- **Country of Origin:** China

WARRANTY AND SUPPORT

For information regarding warranty coverage or product support, please refer to the official Legami website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Legami

Website: www.legami.com (Please note: This is a general placeholder link, refer to product packaging for specific support contact information.)

