

[Manuals.plus](#) /

› [Teamson Home](#) /

› Teamson Home 52.56-inch Outdoor Two-Tier Water Fountain Instruction Manual

Teamson Home B0GK9YCT1

Teamson Home 52.56-inch Outdoor Two-Tier Water Fountain Instruction Manual

Model: B0GK9YCT1

INTRODUCTION

Thank you for choosing the Teamson Home 52.56-inch Outdoor Two-Tier Water Fountain. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your new water fountain. Please read these instructions thoroughly before installation and retain them for future reference.

This outdoor fountain features a durable polyresin construction with a realistic icy stone texture, designed to enhance your outdoor living space with the soothing sound of cascading water.



Image: The Teamson Home 52.56-inch Outdoor Two-Tier Water Fountain positioned in a lush garden environment.

SAFETY INFORMATION

Observe the following safety precautions to reduce the risk of injury, electric shock, or damage to the product.

- **Electrical Safety:** Ensure the power outlet is a grounded, outdoor-rated receptacle. Do not operate the pump if the power cord is damaged. Always disconnect power before performing any maintenance or assembly.
- **Water Safety:** Use clean water only. Do not allow children or pets to drink from the fountain. Never operate the pump dry; ensure it is fully submerged in water.
- **Placement:** Place the fountain on a firm, level surface to prevent tipping. Ensure it is located away from electrical outlets that are not outdoor-rated and out of reach of children.
- **Weather Conditions:** This fountain is weather-resistant. However, during freezing temperatures, drain the fountain completely and store the pump indoors to prevent damage.

PACKAGE CONTENTS


Verify that all components are present before beginning assembly:

- Fountain Body (Multi-piece assembly)
- Water Pump with Power Cord
- Instruction Manual

SETUP INSTRUCTIONS

Follow these steps for proper assembly and initial setup:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Assemble Fountain Body:** Connect the fountain sections according to the diagram. Ensure all connections are secure and stable. The design features sculpted details and a small footprint.
3. **Install Pump:** Place the water pump inside the designated reservoir at the bottom of the fountain. Connect the pump's tubing to the water inlet pipe of the fountain.
4. **Position Fountain:** Move the assembled fountain to its desired outdoor location. Ensure it is on a level surface and within reach of a grounded outdoor power outlet.
5. **Fill with Water:** Fill the fountain with clean distilled water until the pump is fully submerged. Do not overfill.
6. **Connect Power:** Plug the pump's power cord into the outdoor-rated electrical outlet.

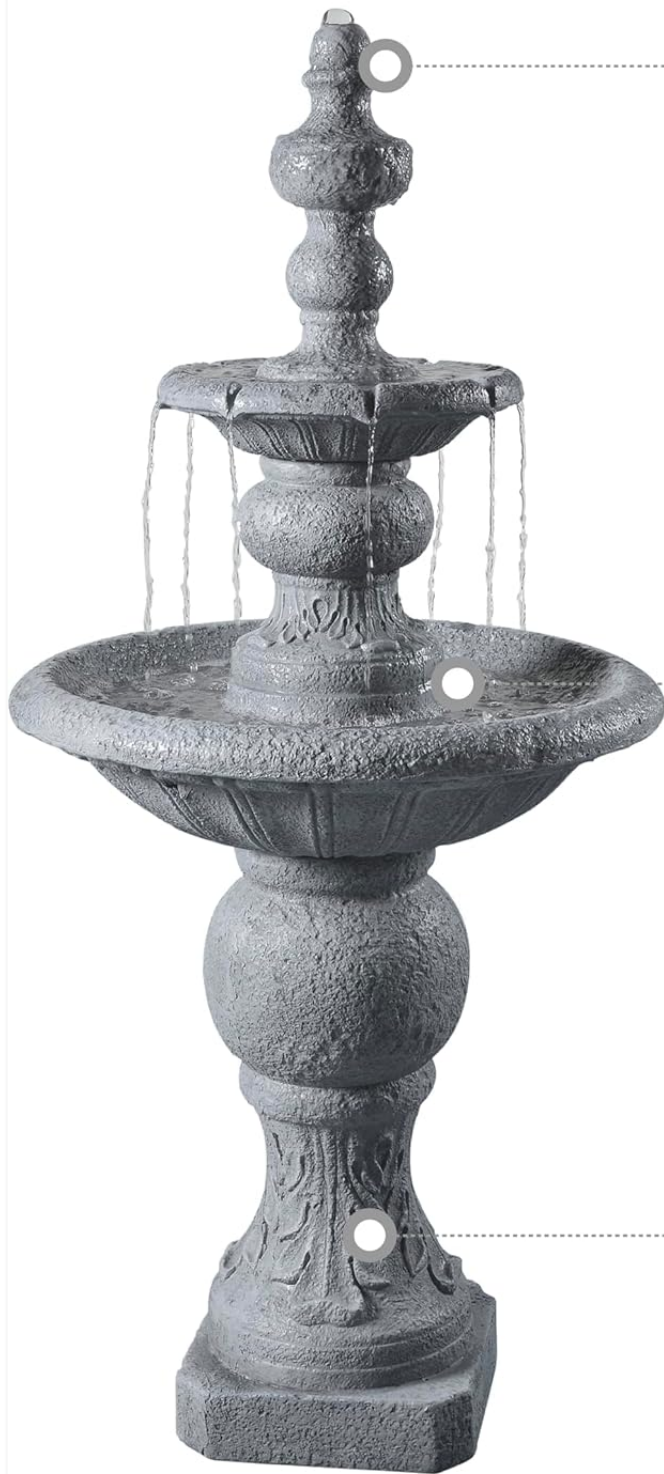

Cascading Water



Sculpted Details



Small Footprint

Image: Close-up views highlighting the cascading water effect, intricate sculpted details on the fountain's tiers, and the compact base design.

OPERATING INSTRUCTIONS

Once assembled and filled, operating your fountain is straightforward:

- **Turning On:** Plug the power cord into a suitable outdoor electrical outlet. The pump will immediately begin circulating water, creating a cascading effect.
- **Water Level:** Regularly check the water level. Due to evaporation and splashing, water levels will decrease over time.

Refill with clean distilled water as needed to ensure the pump remains fully submerged. Operating the pump without sufficient water can cause damage.

- **Adjusting Flow:** Some pumps may have an adjustable flow rate switch. If available, adjust to your preferred water flow.
- **Turning Off:** To turn off the fountain, simply unplug the power cord from the electrical outlet.



Image: A detailed view of the fountain's upper basin and tier, showing water gently flowing and collecting.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your fountain.

- **Cleaning the Fountain:** Periodically drain the fountain and clean the interior and exterior surfaces. Use a soft brush and mild soap if necessary. Rinse thoroughly to remove any soap residue.
- **Pump Cleaning:** Disconnect the pump from power. Remove the pump from the fountain and disassemble it according to its specific instructions (usually involves removing the impeller cover). Clean any debris, mineral buildup, or algae from the impeller and pump housing. Rinse with clean water.
- **Water Treatment:** To prevent algae growth and mineral buildup, consider using non-toxic fountain algaecides or water clarifiers. Follow product instructions carefully.
- **Winterization:** Before the first freeze, completely drain all water from the fountain and pump. Clean the fountain thoroughly. Store the pump indoors in a dry, frost-free location. Cover the fountain or store it indoors if possible to protect the polyresin material from harsh winter conditions.

TROUBLESHOOTING

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Fountain not working / No water flow	• Power cord unplugged • No power to outlet • Pump clogged • Water level too low	• Ensure power cord is securely plugged in. • Check circuit breaker or test outlet with another device. • Disconnect power, clean pump impeller and housing. • Add water until pump is fully submerged.
Low water flow	• Water level too low • Pump clogged • Kink in tubing	• Add water to the fountain. • Disconnect power, clean pump impeller and housing. • Check tubing for kinks or obstructions.
Excessive pump noise	• Water level too low • Pump not sitting flat • Debris in pump	• Add water to the fountain. • Adjust pump position to sit flat on the reservoir bottom. • Disconnect power, clean pump impeller and housing.

SPECIFICATIONS

Key specifications for the Teamson Home 52.56-inch Outdoor Two-Tier Water Fountain:

Feature	Detail
Model Number	B0GK9YCT1
Brand	Teamson Home
Material	Resin
Product Dimensions (L x W x H)	24.21" x 24.21" x 52.56" (61.5cm x 61.5cm x 133.5cm)
Item Weight	28.66 Pounds
Power Source	Corded Electric
Special Feature	Weather Resistant
UPC	810213980118

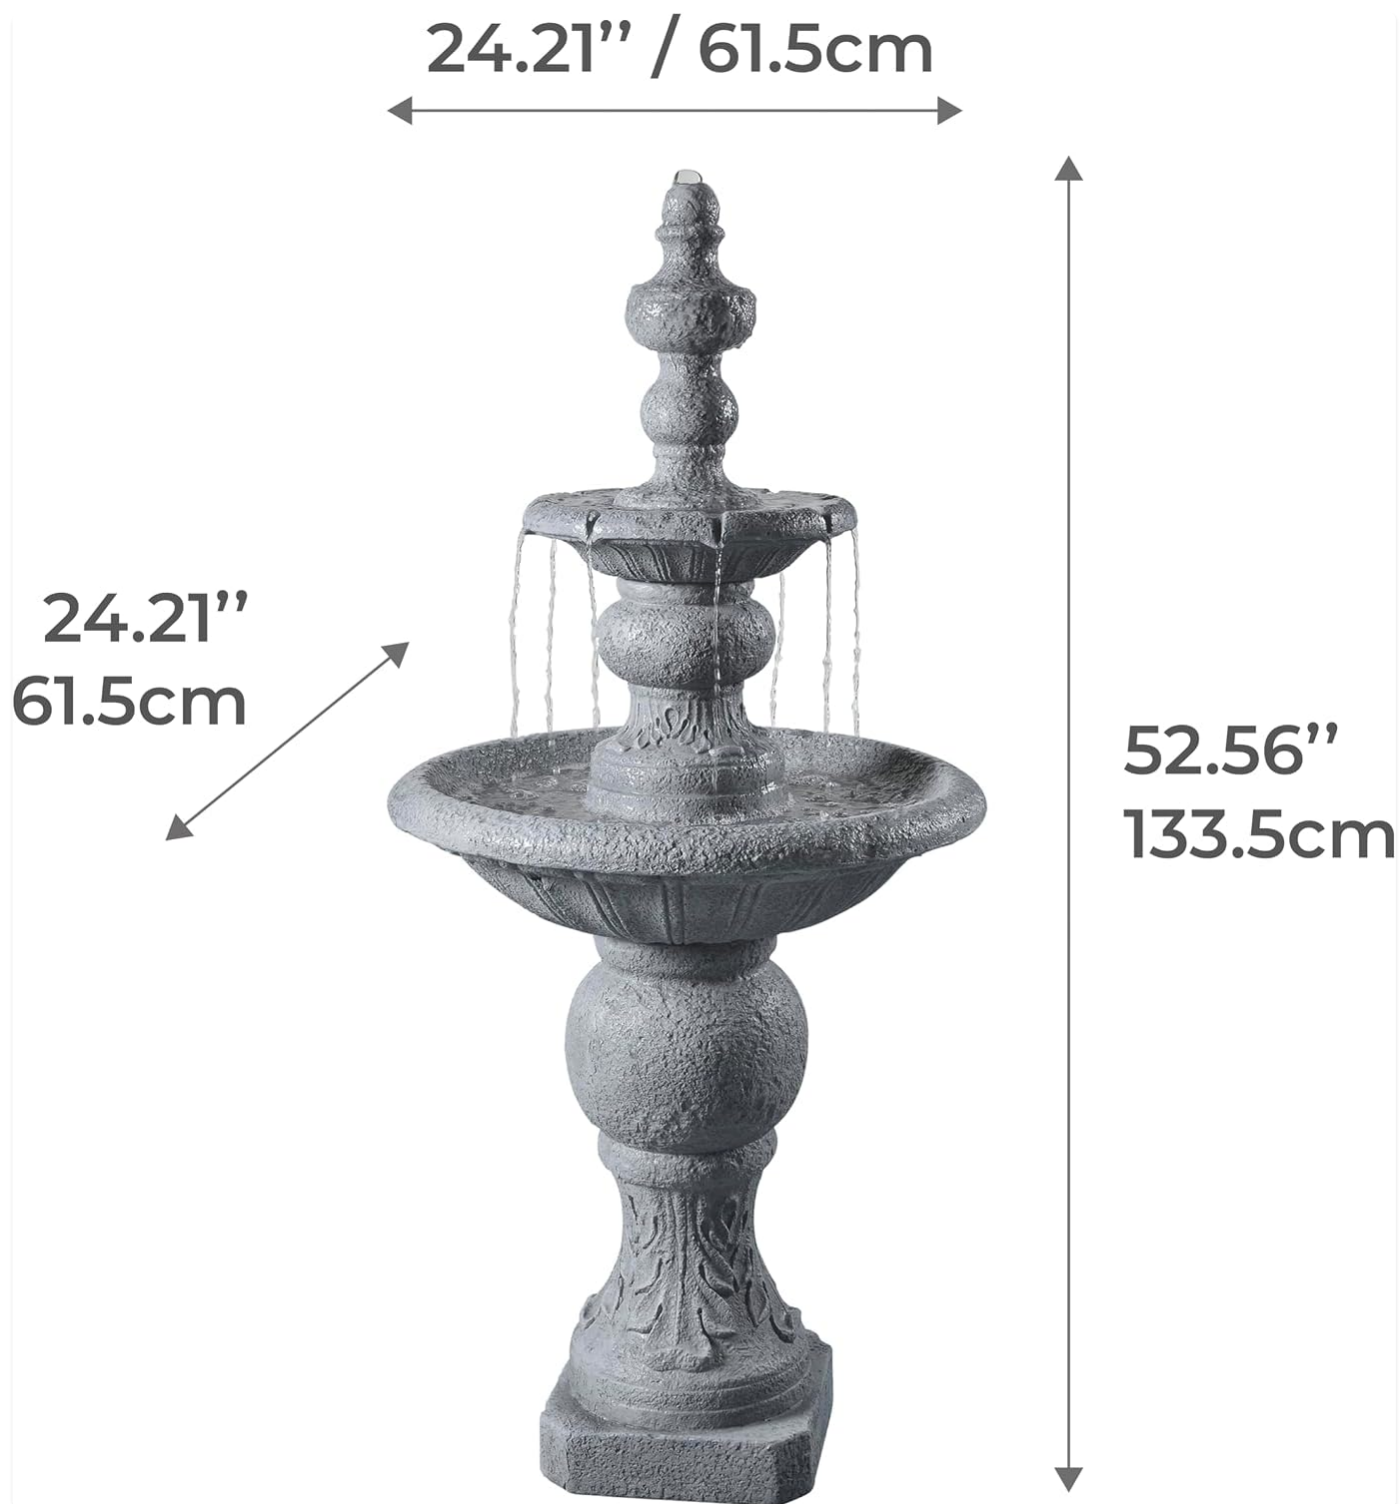


Image: A visual representation of the fountain's dimensions, indicating a width of 24.21 inches (61.5 cm) and a height of 52.56 inches (133.5 cm).

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your Teamson Home water fountain, please contact Teamson Home customer support. Refer to your purchase documentation or the Teamson Home website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question