

[Manuals.plus](#) /

› [Simple Deluxe](#) /

› Simple Deluxe 9.5-Qt Dual Basket Air Fryer Instruction Manual

Simple Deluxe AH-KZG2QSS-9GY-ZF

Simple Deluxe 9.5-Qt Dual Basket Air Fryer Instruction Manual

Model: AH-KZG2QSS-9GY-ZF

INTRODUCTION

Thank you for choosing the Simple Deluxe 9.5-Qt Dual Basket Air Fryer. This appliance is designed to provide efficient and versatile cooking with its dual-basket system, digital controls, and multiple preset functions. Please read this manual thoroughly before use to ensure safe and optimal operation.



The Simple Deluxe 9.5-Qt Dual Basket Air Fryer, featuring a sleek gray finish and dual cooking zones.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the air fryer on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Ensure proper ventilation around the air fryer during use.
- Do not block any ventilation openings.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged.
- Avoid using abrasive cleaners or scouring pads on nonstick surfaces.
- Always handle hot baskets with oven mitts.

SETUP AND FIRST USE

Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

Initial Cleaning

- Wipe the exterior of the air fryer with a damp cloth.
- Wash the removable baskets and crisper plates with hot, soapy water. Rinse thoroughly and dry completely. These parts are dishwasher safe.
- Do not use abrasive cleaning materials.

Placement and Power

- Place the air fryer on a flat, stable, heat-resistant surface, ensuring at least 6 inches of space around the appliance for proper air circulation.
- Plug the power cord into a grounded electrical outlet (120V AC).

Go Extra Crispy

Powerful, Even Heat for Faster Crisping



Up to 450°F



1600W Power



Air Circulation



The dual baskets of the air fryer, ready for initial cleaning or food placement.

OPERATING INSTRUCTIONS

Control Panel Overview

The air fryer features a digital touch control panel with preset functions, temperature, and time adjustments for each basket.

10-IN-1 FUNCTIONS



The digital control panel displaying the 10-in-1 preset functions and temperature/time settings.

Basic Operation

1. **Power On:** Plug in the air fryer. The display will illuminate.
2. **Place Food:** Insert the crisper plates into the baskets, then place your food into the baskets. Do not overfill.
3. **Select Basket:** Choose Basket 1 or Basket 2 on the control panel to set its cooking parameters.
4. **Choose Preset:** Select one of the 10 preset functions (Chips, Shrimp, Steak, Pizza, Dehydrate, Fish, Vegetable, Chicken, Bake, Defrost) or manually adjust temperature and time.
5. **Adjust Settings:** Use the temperature and time buttons to set desired cooking parameters. The maximum temperature is 450°F.
6. **Start Cooking:** Press the Start/Pause button to begin cooking.
7. **Shake Reminder:** For certain presets or longer cooking times, the air fryer may beep to remind you to shake the basket for even cooking.



MATCH COOK

**MATCH
COOK**

User-Friendly
Features

**SYNC
FINISH**

Sync your cooking settings
across all levels to use the full
9.5-qt capacity at once



The air fryer's display showing a "Shake" reminder during cooking, indicating it's time to agitate the food for even crisping.

Dual Basket Features

- **Independent Control:** Each basket can be set to different temperatures and times, allowing you to cook two different dishes simultaneously.
- **Match Cook:** Use the "Match Cook" function to apply the same cooking settings (temperature and time) to both baskets, utilizing the full 9.5-quart capacity for a single large batch.
- **Sync Finish:** The "Sync Finish" feature automatically adjusts the cooking times of two different programs so that both baskets complete cooking at the same time.



SYNC Technology



**MATCH
COOK**

User-Friendly
Features

**SYNC
FINISH**

Automatically syncs cooking programs so different foods finish at the same time

Illustration of the "Match Cook" function, allowing identical settings for both baskets.

9.5QT Dual Family Size Capacity



Illustration of "Sync Technology" ensuring different foods finish cooking simultaneously.

Video Demonstrations

Your browser does not support the video tag.

Video demonstrating the dual basket functionality and smart cooking features of the air fryer.

Your browser does not support the video tag.

Video showcasing the 10-in-1 functions of the air fryer oven.

Your browser does not support the video tag.

Video highlighting the suitability of the air fryer for large families.

CARE AND MAINTENANCE

Cleaning

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The nonstick baskets and crisper plates are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge.
- Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
- Ensure all parts are completely dry before storing or next use.

Storage

Store the air fryer in a cool, dry place. Ensure the baskets are clean and dry before storing. Do not wrap the power cord tightly around the appliance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Food is not cooked evenly.	Baskets overloaded; food not shaken.	Do not overload baskets. Shake or flip food halfway through cooking, especially when prompted by the "Shake Reminder".
White smoke coming from appliance.	Grease residue; fatty foods.	Clean baskets and crisper plates thoroughly. For fatty foods, drain excess oil from the basket.
Instructions confusing.	Unclear interpretation of features.	Refer to the "Operating Instructions" section for detailed explanations of functions like Sync Cook and Sync Finish. Contact customer support if further clarification is needed.

SPECIFICATIONS

Model Number: AH-KZG2QSS-9GY-ZF

Brand: Simple Deluxe

Capacity: 9.5 Quarts (Dual Style)

Product Dimensions: 15.94"D x 11.46"W x 13.94"H

Item Weight: 15.1 Pounds

Color: Gray

Material: Plastic, Stainless Steel

Output Wattage: 1700 Watts

Voltage: 120 Volts (AC)

Control Method: Touch

Controller Type: Digital with Buttons/Touch

Max Temperature Setting: 450 Degrees Fahrenheit

Air Frying Technology: Rapid Air Circulation

Nonstick Coating: Yes

Dishwasher Safe Parts: Yes (Baskets and Crisper Plates)

Recommended Uses: Air Fry, Roast, Bake, Reheat, Dehydrate, Fries, Chicken, Steam, Custard Tart, Wings, Seafood, Vegetables

UPC: 198401110104

Warranty Information

For detailed warranty information regarding your Simple Deluxe 9.5-Qt Dual Basket Air Fryer, please refer to the warranty card included with your product packaging or visit the official Simple Deluxe website. Keep your purchase receipt as proof of purchase for any warranty claims.

Customer Support

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Simple Deluxe customer service. Contact details can typically be found on the product packaging, the official Simple Deluxe website, or through your retailer.

For more information, visit the [Simple Deluxe Store on Amazon](#).

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question