



Manuals.plus /

› Monster /

› Monster BC300 Open Ear Sport Headphones User Manual

Monster BC300

Monster BC300 Open Ear Sport Headphones User Manual

Model: BC300 (E129)

1. INTRODUCTION

Thank you for choosing the Monster BC300 Open Ear Sport Headphones. These headphones are designed to provide a comfortable and secure audio experience while keeping you aware of your surroundings. Featuring bone conduction technology, IPX8 waterproofing, 32GB of built-in memory, and a long-lasting battery, the BC300 is ideal for various sports and outdoor activities.

Please read this manual carefully before using your headphones to ensure proper operation and to maximize their lifespan.

2. PACKAGE CONTENTS

Ensure all items are present in your package:

- Monster BC300 Open Ear Sport Headphones
- USB Charging Cable
- User Manual

3. PRODUCT FEATURES

- **Open Ear Design:** Rests comfortably outside your ears, providing a secure fit without pressure. This design allows you to remain aware of your surroundings, enhancing safety during outdoor activities.
- **Bone Conduction Technology:** Sound is transmitted through your cheekbones, keeping your ear canals open. This minimizes ear fatigue and offers a natural listening experience.
- **Bluetooth 6.0 Connectivity:** Ensures a stable, low-latency connection for reliable audio streaming and clear calls.
- **IPX8 Waterproof Rating:** Designed to resist heavy sweat, rain, and temporary submersion, making

them suitable for intense training, trail running, and even swimming.

- **32GB Built-in Memory:** Store thousands of songs directly on the headphones for true wire-free listening without needing a phone, perfect for swimming or gym workouts.
- **10-Hour Battery Life:** Provides extended playtime for all-day use.

4. SETUP

4.1 Charging the Headphones

Before first use, fully charge the headphones. Connect the USB charging cable to the charging port on the headphones and to a standard USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off or change color when fully charged.

A full charge provides approximately 10 hours of playtime.

4.2 Power On/Off

- **Power On:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator flashes and you hear a power-on prompt.
- **Power Off:** Press and hold the Power/Multi-function button for approximately 5 seconds until the LED indicator turns off and you hear a power-off prompt.

4.3 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power/Multi-function button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Monster BC300" from the list of devices.
5. Once connected, the LED indicator will flash blue slowly, and you will hear a connection confirmation.

Note: The headphones will automatically attempt to reconnect to the last paired device when powered on.

4.4 Using Built-in Memory (MP3 Mode)

The BC300 headphones feature 32GB of internal storage for music playback without a connected device.

- **Transferring Music:** Connect the headphones to your computer using the USB charging cable. The headphones will appear as a removable disk. Drag and drop your audio files (e.g., MP3, WAV, FLAC) into the headphone's storage folder.
- **Switching to MP3 Mode:** While the headphones are on, press the Mode button (if available, or a combination of buttons as per specific model design) to switch between Bluetooth mode and MP3 player mode. Refer to the specific button layout for your model.



Image: Monster BC300 headphones connected to a laptop via USB cable, illustrating the 32GB built-in memory feature for standalone music playback.

5. OPERATING INSTRUCTIONS

5.1 Button Functions (General)

The headphones typically feature a Power/Multi-function button, Volume Up (+), and Volume Down (-) buttons. Specific functions may vary slightly.

Button	Function
Power/Multi-function Button	Press & Hold (3s): Power On Press & Hold (5s): Power Off / Pairing Mode Single Press: Play/Pause Music, Answer/End Call Double Press: Redial Last Number
Volume Up (+)	Single Press: Increase Volume Press & Hold: Next Track
Volume Down (-)	Single Press: Decrease Volume Press & Hold: Previous Track
Mode Button (if present)	Single Press: Switch between Bluetooth Mode and MP3 Mode

5.2 Call Functions

- **Answer Call:** Press the Power/Multi-function button once.
- **End Call:** Press the Power/Multi-function button once during a call.
- **Reject Call:** Press and hold the Power/Multi-function button for 2 seconds during an incoming call.
- **Redial:** Double-press the Power/Multi-function button to redial the last number.

5.3 Music Playback


- **Play/Pause:** Press the Power/Multi-function button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Adjustment:** Press Volume Up (+) or Volume Down (-) buttons to adjust the volume.

Bluetooth 6.0

Next-gen Bluetooth for more stable connections, lower power use, and extended range.



Image: Man wearing Monster BC300 headphones, demonstrating the bone conduction technology that keeps ear canals open.

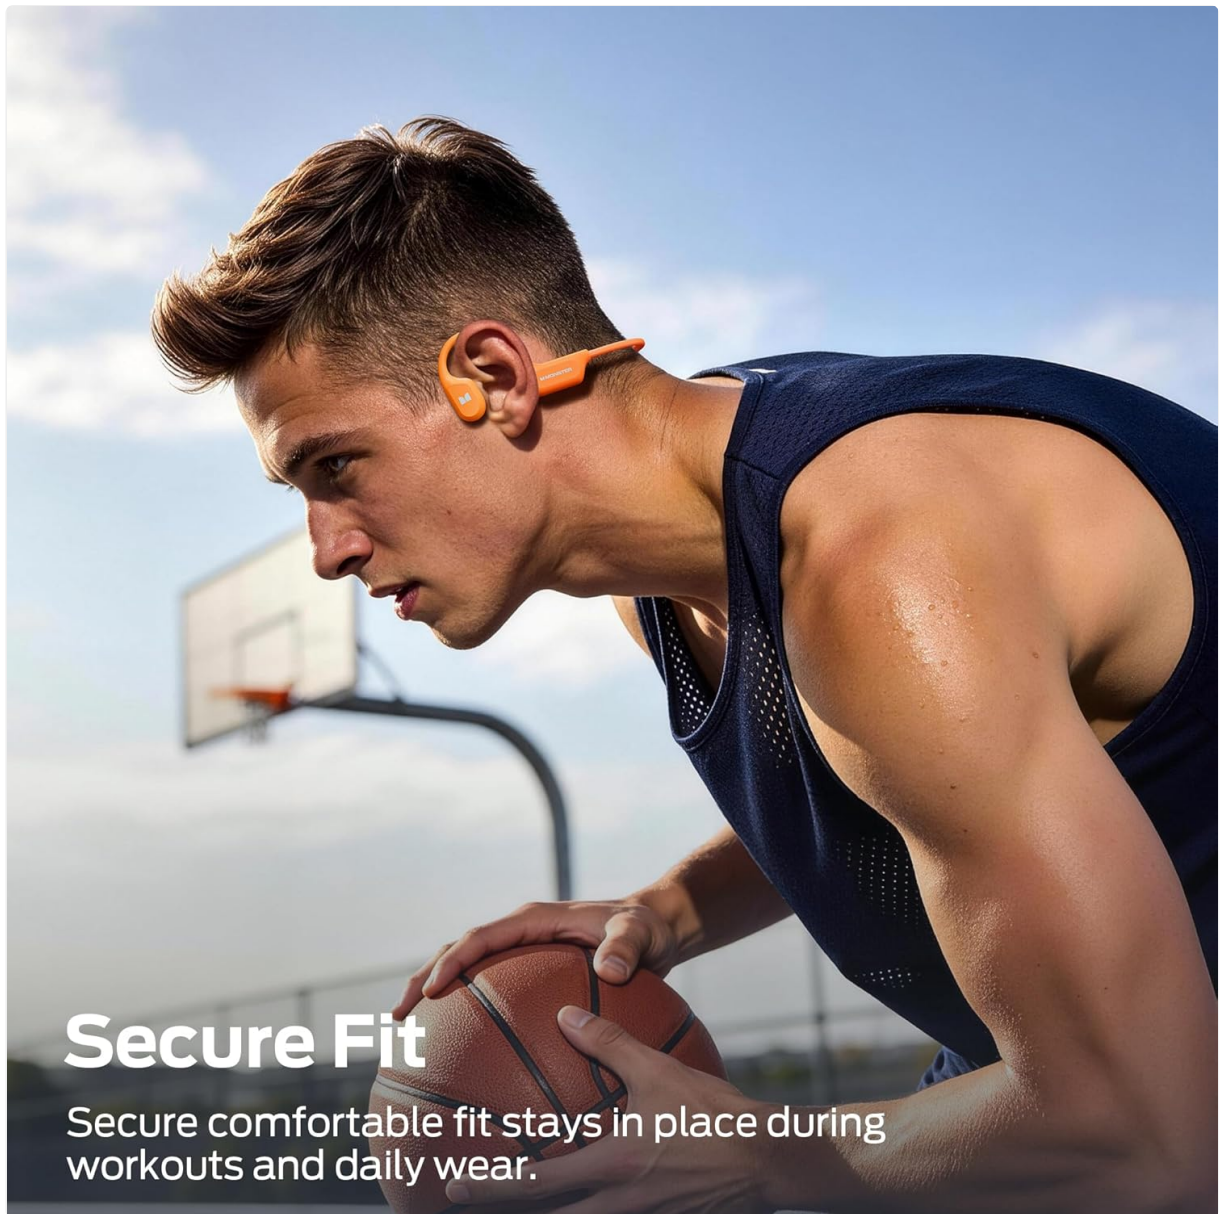

Secure Fit

Secure comfortable fit stays in place during workouts and daily wear.

Image: Close-up view of the Monster BC300 headphone's internal components, emphasizing the Bluetooth 6.0 chip for stable connections.



Open Awareness

Open ear design keeps you aware of surroundings for safety.

Image: A man playing basketball while wearing Monster BC300 headphones, demonstrating their secure and comfortable fit during workouts.

 **MONSTER®**



Pure Monster Sound

Legendary audio with deep bass and
crisp clarity for immersive listening.

Image: A woman cycling on a road wearing Monster BC300 headphones, highlighting the open-ear design that maintains awareness of surroundings for safety.



IPX8 Waterproof

Designed to handle high-intensity workouts and outdoor use, deliver reliable performance even in wet conditions.

Image: Monster BC300 headphones depicted with abstract sound waves, symbolizing the 'Pure Monster Sound' quality with deep bass and crisp clarity.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the headphones with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The headphones are IPX8 waterproof. This means they can withstand continuous immersion in water up to 1.5 meters for 30 minutes. Rinse with fresh water after exposure to saltwater or chlorinated water and allow to dry completely before charging.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the headphones regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.



32GB Built-in Memory

Store your music directly on the headphones and enjoy true standalone playback—no phone required.

Image: A man swimming underwater while wearing Monster BC300 headphones, showcasing their IPX8 waterproof capability for aquatic activities.

7. TROUBLESHOOTING

Problem	Solution
Headphones do not power on.	Ensure the headphones are charged. Connect to a power source and try again after a few minutes.
Cannot pair with device.	Ensure headphones are in pairing mode (LED flashing red/blue). Turn off Bluetooth on your device and turn it back on. Clear previous Bluetooth connections on your device. Move closer to your device (within 10 meters).
No sound or low volume.	Increase volume on both the headphones and your connected device. Ensure headphones are properly connected via Bluetooth or in MP3 mode. Check if the audio source is playing.
Music not playing from built-in memory.	Ensure the headphones are switched to MP3 mode. Verify that audio files are correctly transferred to the headphone's internal storage. Check if the audio file format is supported.

8. SPECIFICATIONS

Feature	Detail
Brand	Monster
Model Number	E129 (BC300)
Ear Placement	Open Ear
Connectivity Technology	Bluetooth
Bluetooth Version	5.0 (Product description mentions 6.0)
Water Resistance Level	IPX8 Waterproof
Built-in Memory	32GB
Battery Life	Up to 10 Hours
Frequency Range	20 Hz - 20,000 Hz
Material	Silicone
Control Method	App (and physical buttons)

9. WARRANTY AND SUPPORT

The Monster BC300 Open Ear Sport Headphones come with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims or technical support, please contact Monster customer service through their official website or the retailer where the product was purchased. Please have your proof of purchase and product model number (E129) ready.