

[Manuals.plus](#) /

› [Ouaken](#) /

› Ouaken 3L Electric Kitchen Composter Instruction Manual

## Ouaken 3L Indoor Kitchen Waste Composter

# Ouaken 3L Electric Kitchen Composter Instruction Manual

Model: 3L Indoor Kitchen Waste Composter

## 1. INTRODUCTION

---

The Ouaken 3L Electric Kitchen Composter is designed to efficiently transform kitchen food waste into nutrient-rich compost. This compact countertop appliance reduces waste volume by up to 90% and operates with minimal noise and odor, making it suitable for any home kitchen. This manual provides essential information for safe operation, maintenance, and optimal performance of your composter.

# Odor-Free Kitchen Composter



**3L** Large Capacity



**90%** Waste Reduction



**Self-Cleaning**



**4~6H**  
Fast Composting



**One-Touch**  
Operation



**Whisper-Quiet**

Image 1.1: Ouaken 3L Electric Kitchen Composter with its output.

## 2. SAFETY INSTRUCTIONS

- Always use caution when handling sharp objects and hot surfaces.
- Ensure proper ventilation when the composter is in use.
- Keep the appliance out of reach of children and pets.
- Do not compost hazardous materials, non-food items, or large bones.

- Do not immerse the main unit in water or other liquids.
- Unplug the composter before cleaning or performing maintenance.

## 3. PRODUCT OVERVIEW

---

### 3.1 Key Features

- **3-Liter Capacity:** Accommodates daily family food waste.
- **Compact Design:** Saves valuable countertop space.
- **Fast Composting:** Transforms food waste into compost in 4-6 hours.
- **Waste Reduction:** Reduces waste volume by up to 90%.
- **Intelligent Operation:** Intuitive LED display and one-touch controls.
- **Odor-Free:** Equipped with dual filters to eliminate unpleasant smells.
- **Quiet Operation:** Operates at less than 48dB.
- **Auto-Clean Function:** Convenient self-cleaning mode for easy maintenance.

### 3.2 Dimensions

# Compact Countertop Food Recycler



Image 3.1: Product dimensions of the Ouaken Electric Composter.

The composter measures approximately 12.8 inches (L) x 11.6 inches (W) x 10.6 inches (H).

## 4. SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Placement:** Place the composter on a stable, flat, and heat-resistant surface in your kitchen. Ensure adequate ventilation around the unit.

- 3. **Power Connection:** Plug the power cord into a grounded electrical outlet.
- 4. **Initial Cleaning:** Before first use, it is recommended to run the self-cleaning cycle (refer to Section 6.1).

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Adding Food Waste

- 1. Open the lid of the composter.
- 2. Add appropriate food waste into the internal bucket. Do not overfill beyond the maximum fill line.
- 3. Close the lid securely.

# Eliminate Most of Kitchen Food Waste



Image 5.1: Adding food waste to the composter.

## 5.2 Starting the Composting Cycle

1. Press the power button to turn on the unit.
2. Select the desired composting mode (e.g., Quick, Standard, Ferment) using the 'Mode' button. The LED display will show the estimated cycle time.
3. Press the 'Start' button to begin the composting process. The unit will operate for 4-6 hours, depending on the mode and food waste type.

## Composting Has Never Been This Easy



### 1 Add:

Simply load your kitchen food waste.



### 2 Process:

Choose preset mode and wait for just 4-6 hours.



### 3 Fertilize:

Add an organic compost starter to create garden-ready compost.

Image 5.2: Simple three-step operation for composting.

### 5.3 Acceptable and Unacceptable Waste

The Ouaken Electric Composter can process a wide variety of organic materials. Refer to the guidelines below:

#### What Types of Food Waste Can Be Process



#### Always

Fruit and vegetable scraps / Tea & Coffee / Food leftovers / Plants&Fallen Leaves



#### Limited

Fibrous Waste / Sticky foods



#### Never

Hard bones / Soiled diapers / General plastics / Glass

Image 5.3: Guidelines for acceptable food waste.

- **Always:** Fruit and vegetable scraps, tea and coffee grounds, most food leftovers, plants, and fallen leaves.
- **Limited:** Fibrous waste (e.g., corn cobs, artichokes) and sticky foods (e.g., excessive jam, syrup). These can be processed in smaller quantities.
- **Never:** Hard bones, soiled diapers, general plastics, glass, metal, cooking oils, or harsh chemicals.

### 5.4 Composting Results

After the cycle is complete, the food waste will be transformed into a dry, soil-like material, significantly reduced in volume. This material can be used as a soil amendment for plants or gardens.

# Ultra-Fast Composting 90% in 4-6 Hours

**BEFORE**

**3L**  
Large Capacity



**AFTER**

**90%**  
Reduce



Image 5.4: Visual representation of waste reduction after composting.

Your browser does not support the video tag.


Video 5.1: An official video demonstrating the Ouaken 3L Electric Composter in action, showing food waste being added and the composting process.

## 6. MAINTENANCE

### 6.1 Self-Cleaning Mode

1. Ensure the internal bucket is empty.
2. Add approximately 1 cup of water to the internal bucket.
3. Press and hold the 'Mode' and 'Start' buttons simultaneously for 3 seconds to activate the self-cleaning mode. The cycle typically lasts 30 minutes.
4. Once complete, discard the water and wipe the bucket clean.

## Self-Cleaning for Effortless Maintenance

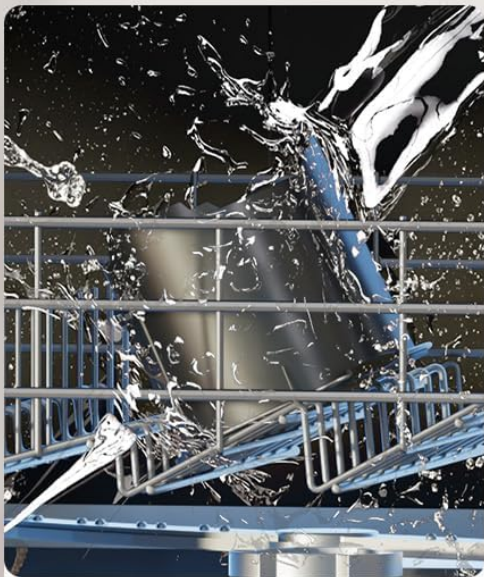

**Dishwasher Safe Parts**



**Self-Cleaning**



Image 6.1: The self-cleaning function for effortless maintenance.

### 6.2 Filter Replacement

The composter is equipped with dual filters to neutralize odors. These filters should be replaced periodically, typically every 3-6 months, depending on usage. Refer to the product packaging for specific filter replacement instructions.



Image 6.2: Illustration of the dual filter system for odor control.

6.3 Cleaning the Internal Bucket

The internal bucket and mixing blades are dishwasher safe. For manual cleaning, wash with warm soapy water and a non-abrasive sponge. Ensure all parts are completely dry before reassembling.

7. TROUBLESHOOTING

- **Unit not powering on:** Ensure the power cord is securely plugged into a working outlet. Check the power button.
- **Unusual odors during operation:** Verify that the filters are correctly installed and not expired. Replace filters if necessary. Ensure only acceptable food waste is being processed.
- **Compost material is too wet/sticky:** Reduce the amount of high-moisture food waste. Ensure the lid is properly sealed during operation.
- **Compost material is too dry/powdery:** This is generally acceptable. The material can be moistened before use in gardens if desired.
- **Excessive noise:** Ensure the unit is placed on a flat, stable surface. Check that the internal bucket and mixing blades are correctly seated.

8. SPECIFICATIONS

| Feature                        | Detail                |
|--------------------------------|-----------------------|
| Brand                          | Ouaken                |
| Capacity                       | 3 Liters              |
| Product Dimensions (L x W x H) | 12.8" x 11.6" x 10.6" |
| Material                       | Plastic               |
| Color                          | White                 |
| UPC                            | 644197483811          |

## 9. WARRANTY AND SUPPORT

Every Ouaken electric composting machine undergoes strict quality inspection to ensure your complete satisfaction. If you have any questions, require assistance, or encounter issues with your product, please contact Ouaken customer support. We are committed to responding to inquiries within 24 hours.

For further support, please visit the [Ouaken Store on Amazon](#).

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GKFM57X3>

More documents and user manuals: <https://manuals.plus/>