

[Manuals.plus](#) /

› [Ultima Cosa](#) /

› Ultima Cosa Presto Luxe 6L Air Fryer Instruction Manual

## Ultima Cosa UC-AF0012V6B

# Ultima Cosa Presto Luxe 6L Air Fryer Instruction Manual

Model: UC-AF0012V6B

## INTRODUCTION

Thank you for choosing the Ultima Cosa Presto Luxe 6L Digital Air Fryer. This appliance is designed to simplify your meal preparation, offering convenience and versatility for healthier cooking. With its spacious 6-liter capacity, intuitive touch control panel, and multiple cooking presets, you can achieve perfectly cooked meals with less oil.

Key features include:

- Large Touch Panel with 8 preset options for various foods like fries, chicken, and fish.
- Additional functions: Preheat, Keep Warm, and Shake Reminder.
- Non-Stick and Dishwasher Safe components for easy cleaning.
- 65 cm Power Cord for flexible placement in your kitchen.

Please read this manual thoroughly before first use to ensure safe and optimal operation of your air fryer.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- **Read all instructions:** Familiarize yourself with the appliance before operation.
- **Hot surfaces:** Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot components.
- **Electrical safety:** To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Unplug when not in use:** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not operate with damaged cord or plug:** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- **Avoid accessories:** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- **Outdoor use:** Do not use outdoors.
- **Power cord:** Do not let cord hang over edge of table or counter, or touch hot surfaces.
- **Placement:** Do not place on or near a hot gas or electric burner, or in a heated oven.

- **Moving hot oil:** Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- **Disconnect:** To disconnect, turn any control to 'off', then remove plug from wall outlet.
- **Intended use:** Do not use appliance for other than intended use.
- **Proper ventilation:** Ensure adequate air circulation around the air fryer during operation. Do not block any ventilation openings.
- **Food quantity:** Do not overfill the air fryer basket.

## PRODUCT OVERVIEW

The Ultima Cosa Presto Luxe Air Fryer features a sleek design with an intuitive digital interface for easy operation.



Figure 1: Front view of the Ultima Cosa Presto Luxe 6L Air Fryer, showcasing its digital display and handle.



Figure 2: Detailed view of the digital control panel, showing temperature, time, and preset icons.

### Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital touch screen for setting time, temperature, and selecting presets.
- **Air Fryer Basket:** Removable, non-stick basket for holding food.
- **Crisper Tray:** Inserted into the basket to allow air circulation around food.
- **Handle:** For safely pulling out the air fryer basket.

### SETUP

Before using your air fryer for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the air fryer basket and crisper tray with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the inside and outside of the main unit with a damp cloth.

3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (400°F) to burn off any manufacturing residues. A slight odor may be present, which is normal. Allow the unit to cool completely afterward.

## OPERATING INSTRUCTIONS

Operating your Ultima Cosa Presto Luxe Air Fryer is straightforward with its digital touch controls.

### Basic Operation:

1. **Prepare Food:** Place your ingredients into the air fryer basket, ensuring not to overfill. For best results, food should be in a single layer or shaken periodically.
2. **Insert Basket:** Slide the air fryer basket firmly into the main unit.
3. **Power On:** Press the Power button (**U**) on the control panel to turn on the appliance.
4. **Set Temperature and Time:** Use the temperature (+/- **TEMP**) and time (+/- **TIME**) buttons to adjust to your desired settings. The temperature range is typically 100°F to 400°F (38°C to 200°C).
5. **Start Cooking:** Press the Start/Pause button (**▶ ||**) to begin the cooking cycle.
6. **Shake Reminder:** For some foods, the air fryer may beep to remind you to shake the basket for even cooking. Carefully remove the basket, shake the contents, and reinsert it. The cooking will resume automatically.
7. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.

### Using Presets:

The air fryer comes with 8 one-touch cooking presets for common foods:

- Fries
- Chicken
- Fish
- And more (refer to the control panel icons for specific presets).

To use a preset, simply press the corresponding icon on the control panel after powering on. The air fryer will automatically set the optimal temperature and time. You can adjust these settings manually if needed before pressing Start.

### Preheat Function:

For best results with certain recipes, use the Preheat function. Press the Preheat button, set your desired temperature, and press Start. The air fryer will heat up and notify you when it's ready to add food.

### Keep Warm Function:

After cooking, you can use the Keep Warm function to maintain your food's temperature. Press the Keep Warm button after the cooking cycle is complete or select it manually.



Figure 3: The air fryer in a kitchen setting, demonstrating its use for preparing crispy foods.

## CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Basket and Tray:** The air fryer basket and crisper tray are non-stick and dishwasher safe. For manual cleaning, wash them in hot soapy water using a non-abrasive sponge. For stubborn food residue, soak them in warm water for about 10 minutes before cleaning.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Heating Element:** If necessary, use a cleaning brush to remove any food residue from the heating element inside the air fryer.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

| Problem                                | Possible Cause                                                 | Solution                                                                                                        |
|----------------------------------------|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Air fryer does not turn on.            | Not plugged in; power outlet issue; basket not fully inserted. | Ensure the power cord is securely plugged into a working outlet. Push the basket in completely until it clicks. |
| Food is not cooked evenly.             | Basket is overcrowded; food not shaken or flipped.             | Cook food in smaller batches. Shake or flip food halfway through cooking.                                       |
| White smoke coming from the appliance. | Grease residue from previous use; fatty food being cooked.     | Clean the basket and crisper tray thoroughly. Remove excess oil from food before air frying.                    |
| Food is not crispy.                    | Too much moisture; not enough oil; basket overcrowded.         | Pat food dry before cooking. Lightly spray with oil. Cook in smaller batches.                                   |

SPECIFICATIONS

Detailed specifications for the Ultima Cosa Presto Luxe 6L Air Fryer:

| Feature                        | Detail                               |
|--------------------------------|--------------------------------------|
| Model Name                     | Ultima Cosa Presto Luxe air fryer 6L |
| Model Number                   | UC-AF0012V6B                         |
| Capacity                       | 6 Liters                             |
| Output Wattage                 | 1550 Watts                           |
| Voltage                        | 120 Volts                            |
| Min Temperature Setting        | 100 Degrees Fahrenheit               |
| Max Temperature Setting        | 400 Degrees Fahrenheit               |
| Control Method                 | Push Button / Touch Panel            |
| Product Dimensions (D x W x H) | 32.7D x 32.7W x 32.8H Centimetres    |
| Item Weight                    | 10.36 Pounds                         |
| Material                       | Plastic                              |
| Non-stick Coating              | Yes                                  |
| Dishwasher Safe Parts          | Yes (Basket and Tray)                |
| Recommended Uses               | Bake, Reheat, Roast                  |
| UPC                            | 746964625704                         |

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Ultima Cosa Presto Luxe 6L Air Fryer, please contact the

manufacturer directly.

**Manufacturer Contact Information:**

- Evagroups inc.
- Email: [contact@ultimacosa.com](mailto:contact@ultimacosa.com)

Please have your model number (UC-AF0012V6B) and proof of purchase ready when contacting support.

© 2025 Ultima Cosa. All rights reserved.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GKJ4R327>

More documents and user manuals: <https://manuals.plus/>