

[Manuals.plus](#) /

› [Decofy](#) /

› Decofy DC-BG19 Nightstand with Charging Station, One Drawer, One Door (White + Walnut) - Instruction Manual

Decofy DC-BG19

Decofy DC-BG19 Nightstand with Charging Station

Model: DC-BG19 | Brand: Decofy

PRODUCT OVERVIEW

The Decofy DC-BG19 Nightstand is a functional and stylish furniture piece designed for bedrooms. It features a built-in charging station, a spacious drawer, and a cabinet with a door, providing convenient storage and power access right at your bedside.

Perfect for Small Bedrooms



Image: The Decofy DC-BG19 Nightstand positioned next to a bed, showcasing its design and utility in a bedroom environment.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Ensure all screws and fasteners are securely tightened during assembly. Periodically check and re-tighten as needed.
- Do not overload the nightstand or its drawer/cabinet. Adhere to weight limits to prevent tipping or damage.
- For the charging station:
 - Do not expose the charging station to water or excessive moisture.
 - Do not attempt to disassemble or modify the charging unit.
 - Ensure the power cord is not pinched or damaged.
 - Plug the nightstand into a properly grounded electrical outlet.

- Avoid plugging in high-power appliances that exceed the charging station's capacity (125V-12A for AC outlets).
- Place the nightstand on a flat, stable surface.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Top Panel (1)
- Side Panels (2)
- Bottom Panel (1)
- Back Panel (1)
- Drawer Components (Front, Back, Sides, Bottom)
- Door Panel (1)
- Charging Station Unit (1)
- Hardware Pack (Screws, dowels, cam locks, drawer slides, hinges, handles)
- Assembly Guide (1)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended to have a screwdriver for the assembly process. Follow the included assembly guide step-by-step. Lay out all parts on a soft, clean surface to prevent scratches.

1. **Prepare the Workspace:** Clear a spacious area and lay down a blanket or cardboard to protect the furniture pieces and your floor.
2. **Identify Components:** Unpack all parts and hardware. Refer to the assembly guide's parts list to identify each piece.
3. **Assemble the Frame:** Attach the side panels to the bottom panel using the provided hardware (dowels and cam locks).
4. **Install Drawer Slides:** Secure the drawer slides to the inner side panels of the nightstand frame.
5. **Assemble the Drawer:** Construct the drawer box using its front, back, side, and bottom panels. Attach the drawer handle.
6. **Insert Drawer:** Carefully slide the assembled drawer onto the installed drawer slides.
7. **Attach the Door:** Secure the hinges to the door and then attach the door to the nightstand frame. Ensure the door opens and closes smoothly. Attach the door handle.
8. **Install Back Panel:** Fasten the back panel to the rear of the nightstand frame.
9. **Place Top Panel:** Secure the top panel to the assembled frame.
10. **Integrate Charging Station:** Carefully place the charging station unit into its designated cutout on the top panel. Ensure it sits flush and is securely connected.
11. **Final Checks:** Verify all connections are tight and the nightstand is stable.

More Storage & Less Clutter

1 Drawers + Closed door



Image: The nightstand with its drawer pulled out and cabinet door open, illustrating the available storage space for various items.

OPERATING INSTRUCTIONS (CHARGING STATION)

The Decofy DC-BG19 Nightstand includes a convenient built-in charging station to power your electronic devices.

1. **Power Connection:** Locate the power cord extending from the back of the charging station. Plug this cord into a standard, grounded 125V AC wall outlet.
2. **AC Outlets:** The charging station features two 125V-12A AC outlets. These are suitable for lamps, alarm clocks, laptops, or other small appliances.
3. **USB Ports:** One standard USB-A port (5V-2A) is available for charging smartphones, tablets, and other USB-powered devices.
4. **Type-C Port:** One USB Type-C port (5V-2A) is provided for newer devices that utilize this connection type.
5. **Charging Devices:** Connect your devices to the appropriate port or outlet. The charging station will automatically begin supplying power.

Important: Do not exceed the maximum electrical load for the AC outlets (12A total). Avoid using the charging station in wet environments.

Built-in Charging Station



2 AC Outlets
125V-12A



1 USB Ports
5V-2A



1 Type-C Port
5V-2A



Power Cord
4.9 Feet



Image: A detailed view of the integrated charging station on the nightstand's top surface, showing the AC outlets, USB-A, and USB-C ports in use with various electronic devices.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage to the wood.
- **Hardware Check:** Periodically check all screws, bolts, and fasteners to ensure they remain tight. Re-tighten as necessary to maintain stability.
- **Charging Station:** Keep the charging ports free of dust and debris. Do not insert foreign objects into the ports.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Nightstand is wobbly.	Loose fasteners; uneven floor.	Check and tighten all screws and bolts. Move to a level surface or use furniture pads to stabilize.
Drawer does not slide smoothly.	Improperly installed slides; obstruction; loose screws.	Ensure drawer slides are correctly aligned and securely fastened. Check for any objects blocking the drawer path.
Charging station is not working.	No power to the unit; faulty device cable; overloaded circuit.	• Verify the nightstand's power cord is securely plugged into a live wall outlet. • Test the wall outlet with another device. • Try a different charging cable for your device. • Unplug some devices from the AC outlets to check for overload.
Door does not close properly.	Misaligned hinges; loose screws.	Adjust hinge screws to align the door. Ensure all hinge screws are tight.

SPECIFICATIONS



Image: A technical diagram illustrating the overall dimensions of the nightstand (Height: 23.62", Width: 16.85", Depth: 15.24"), including internal drawer dimensions.

Feature	Detail
Brand	Decofy
Model Name	DC-BG19
Product Dimensions (D x W x H)	44.5 cm x 45 cm x 59.9 cm (approx. 17.5" x 17.7" x 23.6")
Item Weight	20.46 lbs (9.28 kg)
Frame Material	Engineered Wood, Plywood
Color	White + Walnut

Feature	Detail
Style	Farmhouse
Number of Drawers	1
Charging Station	• 2 AC Outlets (125V-12A) • 1 USB-A Port (5V-2A) • 1 Type-C Port (5V-2A) • Power Cord Length: 4.9 feet
Assembly Required	Yes
Recommended Tools for Assembly	Screwdriver
Usage Environment	Indoor

WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact Decofy customer service. Refer to your purchase documentation for specific contact details or visit the official Decofy website. Please have your model number (DC-BG19) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question