

JUSTHERO B0GKP35Y1G

JUSTHERO 4-Wheel Folding Mobility Scooter User Manual

Model: B0GKP35Y1G

1. INTRODUCTION

Thank you for choosing the JUSTHERO 4-Wheel Folding Mobility Scooter. This manual provides important information regarding the safe operation, assembly, maintenance, and troubleshooting of your scooter. Please read this manual thoroughly before using the product to ensure proper function and to prevent injury or damage.

2. SAFETY INFORMATION

Your safety is paramount. Always adhere to the following safety guidelines:

- **Read All Instructions:** Familiarize yourself with all controls and safety features before operation.
- **Weight Limit:** Do not exceed the maximum weight capacity of 350 lbs.
- **Terrain:** Operate the scooter on stable, level surfaces. Avoid steep inclines (maximum climbing angle 12 degrees), uneven terrain, or soft ground.
- **Braking:** The electromagnetic brake system activates automatically when the power control is released. Always ensure the brake is functioning correctly.
- **Visibility:** Use front and rear lights during low-light conditions or at night.
- **Charging:** Only use the provided charger. Do not attempt to charge the battery with other devices.
- **Children and Pets:** Keep children and pets away from the scooter during operation and charging.
- **Anti-Tip Wheels:** The scooter is equipped with anti-tip wheels for enhanced stability. Do not remove or modify them.

3. PRODUCT OVERVIEW

The JUSTHERO 4-Wheel Folding Mobility Scooter is designed for convenience and reliability. Key features include a powerful brushless motor, an electromagnetic braking system, and a user-friendly control panel.

3.1 Key Components

Refer to the images below for a visual guide to your scooter's components and features.



Figure 1: Overall view of the JUSTHERO 4-Wheel Folding Mobility Scooter, showing the seat, handlebars, front basket, and four wheels.



Figure 2: Product dimensions (45.2 inches height, 41.3 inches length, 19.6 inches width) and its compact folded state (20 inches height, 41.3 inches length) fitting into a car trunk. Includes a waterproof storage cover and notes a maximum capacity of 350 lbs.



Figure 3: Close-up view of the 270W powerful brushless motor, highlighting its smooth, efficient, noiseless, and durable characteristics.

Electromagnetic Braking System Ensure Safety

Release power, mobility scooter will automatically engage the braking state



Figure 4: Illustration of the electromagnetic braking system, which engages automatically upon power release, and the anti-tip wheels for safety. The scooter supports climbing angles up to 12 degrees.

4. SETUP

4.1 Assembly

The scooter requires some assembly upon arrival. Please follow the instructions provided in the separate assembly guide or quick start sheet included in your packaging. Ensure all components are securely fastened before proceeding.

4.2 Initial Battery Charge

Before first use, fully charge the scooter's high-energy battery. The scooter offers two convenient charging methods:

- **Handlebar Port:** Connect the charger directly to the dedicated port located on the handlebar.
- **Direct Battery Charge:** The battery can also be removed and charged separately.

A full charge ensures optimal performance and range (up to 31 miles). The built-in anti-overload protection

safeguards the battery during charging.



Figure 5: Depiction of the 20Ah high-performance lithium battery, weighing 7.1 lbs, offering a 31-mile travel range. Emphasizes its stable, safer, long-lasting, and environmentally friendly characteristics.

5. OPERATING INSTRUCTIONS

5.1 Controls

The scooter features an intuitive control panel for easy operation:

- **Push-Pull Lever:** Use the single lever for smooth forward and reverse movement.
- **LCD Control Panel:** Displays essential information such as battery level and speed.
- **Horn:** Press the button to sound the horn for safety.
- **Speed Adjustment:** Adjust the speed steplessly to match your comfort and environment.
- **Lights:** Activate front and rear lights for visibility.
- **USB Port:** A convenient USB port is available for charging small electronic devices.

5.2 Driving

To operate the scooter, ensure you are seated comfortably and have a clear path. Gently engage the push-pull lever to move forward or backward. Release the lever to activate the electromagnetic brake and stop the scooter. The powerful brushless motor provides smooth driving and assists with hill climbing.

5.3 Folding the Scooter

The scooter features a user-friendly one-pull folding system for compact storage and transport:

1. Locate the red knobs on both sides of the scooter.
2. Pull both red knobs simultaneously.
3. Fold the seat frame down until the scooter is in its compact, folded position.

This process makes the scooter ultra-compact, allowing it to fit easily into most car trunks.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth. Do not use abrasive cleaners or spray water directly onto electrical components.
- **Battery Care:** Charge the battery regularly, even if the scooter is not in frequent use, to maintain battery health. Avoid fully discharging the battery.
- **Tires:** Check tire pressure and condition periodically. Ensure tires are free from punctures or excessive wear.
- **Fasteners:** Periodically check all nuts, bolts, and fasteners to ensure they are tight.
- **Storage:** Store the scooter in a dry, cool place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your scooter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scooter does not power on	Battery is discharged or not connected; Power switch is off.	Charge the battery; Ensure battery is properly connected; Turn on the power switch.
Scooter moves slowly or lacks power	Low battery charge; Overloaded; Motor issue.	Recharge the battery; Reduce load; Contact customer service if motor issue persists.
Brakes not engaging properly	Brake system malfunction; Loose connection.	Ensure power control is fully released; Contact customer service for inspection.
Unusual noises during operation	Loose components; Obstruction in wheels/motor.	Inspect for loose parts and tighten; Check for obstructions; Contact customer service if noise persists.

If you experience a problem not listed here or if the suggested solutions do not resolve the issue, please contact customer service.

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand Name	JUSTHERO
Model (ASIN)	B0GKP35Y1G
Motor Power	270W Brushless Motor
Battery Average Life	31 Miles (Travel Range)
Brake Style	Electromagnetic
Turn Radius	36 Inches
Max Capacity	350 lbs
Frame Material	Aluminum
Wheel Type	Spoke Wheel
Handle Type	Push Levers
Color	Silver
Required Assembly	Yes
Additional Features	Foldable, Lightweight, Portable

9. WARRANTY AND SUPPORT

JUSTHERO is committed to delivering premium, professional support for every customer. For any questions regarding product operation, daily maintenance, or other concerns, please contact our customer service team. We are dedicated to providing timely, detailed responses and solutions to ensure a hassle-free experience. Please refer to your purchase documentation for specific warranty terms and contact information.

© 2026 JUSTHERO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question