

Hammer F60148CBHM

Hammer F60148CBHM Front-Load Washing Machine

USER MANUAL

1. Introduction

Thank you for choosing the Hammer F60148CBHM Front-Load Washing Machine. This appliance is designed to provide efficient and reliable laundry care with a 6 kg capacity and a maximum spin speed of 1000 RPM. This manual contains important information regarding the installation, operation, and maintenance of your washing machine. Please read it thoroughly before use and keep it for future reference.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

2.1. Transport Bolt Removal

CRITICAL: Before operating the washing machine, you **MUST** remove the four transport bolts and their plastic supports located on the rear of the appliance. These bolts secure the drum during transport to prevent damage. Failure to remove them will result in severe damage to the washing machine during operation and will void the warranty.

Use the wrench provided with the washing machine to loosen and remove these four bolts. Keep the bolts and supports for future transport of the appliance.

2.2. General Safety Features

- **Load Balancing System:** Automatically adjusts the drum to ensure stable operation.
- **Anti-Overflow Safety:** Prevents water from overflowing.
- **Door Lock Safety:** The door remains locked during operation.
- **Anti-Foam Protection:** Detects and reduces excessive foam.
- **Fault Detection:** Identifies and signals operational issues.

3. Setup and Installation

3.1. Unpacking

Carefully remove all packaging materials. Inspect the washing machine for any transport damage. Report any damage immediately to your retailer.

3.2. Removing Transport Bolts

As detailed in the safety section, locate and remove the four transport bolts from the rear of the machine using the provided wrench. Store them safely for future use.

3.3. Leveling the Appliance

Ensure the washing machine is perfectly level to prevent vibrations and noise during operation. Adjust the adjustable feet at the bottom of the appliance until it is stable on the floor.

3.4. Water and Drain Connections

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. Position the drain hose into a suitable drain pipe or sink. Do not remove the drain hose permanently.

4. Operating Instructions

4.1. Control Panel Overview

The control panel allows you to select wash programs and adjust settings. Refer to the image below for a visual guide.



Image 1: Hammer F60148CBHM Washing Machine Control Panel. Features a central program selector dial, LED display, and touch buttons for functions like Delay Start, Temperature, Spin Speed, Start/Pause, and On/Off. Program options are listed around the dial.

4.2. Program Selection

Turn the central dial to select one of the 16 available wash programs:

- **Cotton:** For durable cotton items.
- **Eco 40-60:** Energy-efficient program for normally soiled cotton items washable at 40°C or 60°C.
- **Sportswear:** For sports clothing.
- **Duvets:** For large items like duvets and blankets.
- **Delicates:** For delicate fabrics requiring gentle washing.
- **Baby Care:** For baby clothes, ensuring thorough rinsing.
- **Storm Wash:** A specialized wash program.
- **Steam:** Incorporates steam for enhanced cleaning or sanitization.
- **Mixed:** For mixed loads of different fabric types.

- **Quick 15'**: A very short cycle for lightly soiled items.
- **Quick 42'**: A fast cycle for moderately soiled items.
- **20°C**: A cold wash program.
- **Wool**: For wool garments, preventing shrinkage.
- **Rinse + Spin**: Adds an extra rinse and spin cycle.
- **Spin**: Drains water and spins laundry.
- **Drum Clean**: For cleaning the washing machine drum.

4.3. Function Buttons

- **On/Off**: Powers the washing machine on or off.
- **Start/Pause**: Starts or pauses the selected wash program.
- **Temp. (Temperature)**: Press to cycle through available temperatures: Cold, 20°C, 40°C, 60°C, 90°C.
- **Velocità (Spin Speed)**: Press to adjust spin speed: 1000 RPM, 800 RPM, 400 RPM, or no spin (Exclusion).
- **Partenza Ritardata (Delay Start)**: Press to set a delayed start time for the wash cycle (3H, 6H, 9H).

4.4. Special Functions

- **Twinjet**: An advanced water spray system for efficient detergent distribution and rinsing.
- **Steam Assist**: Utilizes steam for improved cleaning performance and hygiene.
- **Sterilization**: A function for enhanced sanitization (often activated by pressing and holding a button for 3 seconds).

5. Maintenance

5.1. Cleaning the Pump Filter

Regularly clean the pump filter to ensure proper drainage and prevent blockages. Refer to the appliance's service panel for access to the filter. Ensure the machine is unplugged and drain any residual water before opening the filter cover.

5.2. Drum Cleaning Program

Use the 'Drum Clean' program periodically to remove detergent residues and bacteria from the drum, preventing odors and maintaining hygiene. Follow the instructions for the 'Pulizia Cestello' program on the control panel.

5.3. Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. Troubleshooting

If you encounter issues with your washing machine, consult the following common problems and solutions before contacting customer service. The appliance features fault detection to help identify issues.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, 'Start/Pause' not pressed, delay start active.	Check power connection, ensure door is latched, press 'Start/Pause', check delay start setting.
No water intake	Water tap closed, water inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check household water pressure.
Water not draining	Drain hose kinked or blocked, pump filter clogged.	Straighten drain hose, clean pump filter.

Problem	Possible Cause	Solution
Excessive vibration/noise	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust feet to level machine, redistribute laundry in drum.
Error code on display	Specific fault detected by the machine.	Refer to the full user manual for specific error code meanings or contact customer support.

7. Specifications

Feature	Detail
Model Number	F60148CBHM
Capacity	6 kg
Motor Type	BLDC Inverter
Max Spin Speed	1000 RPM
Variable Spin Speed	1000/800/400 RPM/Exclusion
Number of Programs	16
Temperature Selection	Cold/20/40/60/90°C
Display Type	LED
Special Features	Twinjet, Steam Assist, Eco-logic System, Hygienic Steam, Energy Efficiency
Energy Efficiency Class	A
Noise Level (Wash/Spin)	76 dB(A)
Energy Consumption (100 cycles)	42.1 kWh
Water Consumption (per cycle)	36 Liters
Drum Volume	48 Liters
Drum Material	Stainless Steel
Door Diameter	43.9 cm
Door Opening Angle	150°
Dimensions (H x W x D)	85.0 cm x 59.5 cm x 44.0 cm
Weight	60 kg
Voltage	220 Volt
Installation Type	Freestanding
Included Components	Hoses

8. Warranty Information

This Hammer washing machine comes with a**2-year product warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use conditions. Damage caused by improper installation, misuse, or failure to remove transport bolts is not covered.

9. Customer Support

For further assistance, technical support, or service requests, please contact our specialized customer assistance. Refer to your purchase documentation or the manufacturer's website for contact details specific to your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question