

[Manuals.plus](#) /

› [LWQ](#) /

› LWQ Pressure Washer Model S5 User Manual

LWQ S5

LWQ Pressure Washer Model S5 User Manual

Comprehensive instructions for safe and effective operation of your LWQ Pressure Washer.

INTRODUCTION

Thank you for choosing the LWQ Pressure Washer Model S5. This high-pressure cleaning machine is designed for efficient cleaning of various surfaces, including cars, fences, driveways, and patios. Please read this manual thoroughly before operation to ensure safe and optimal performance.



Image: The LWQ Pressure Washer Model S5, showcasing its compact design and blue and black color scheme.

SAFETY INFORMATION

Always prioritize safety when operating the pressure washer. High-pressure water streams can cause injury if not handled correctly.

- Always wear appropriate safety gear, including eye protection.
- Ensure the safety lock on the spray gun is engaged when not actively spraying to prevent accidental discharge.
- Never point the spray gun at people, pets, or electrical outlets.
- Before turning on the pressure washer, exhaust air from the high-pressure hose and inlet hose to ensure proper water flow and prevent damage.

- Do not operate the machine if any parts are damaged.

Safety Lock

Using the safety lock to keep from accidentally engaging the high pressure spray.

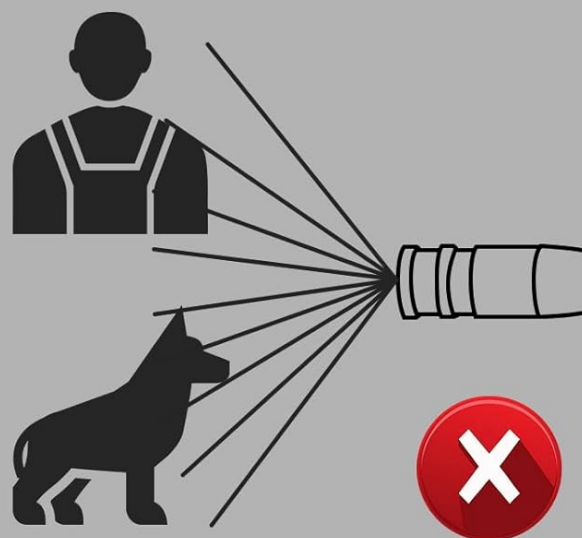 


Image: Close-up of the spray gun handle showing the safety lock mechanism. The lock prevents accidental engagement of the high-pressure spray.

PACKAGE CONTENTS

Verify that all items are present in the package:

- LWQ Pressure Washer Unit
- High-Pressure Hose
- Spray Gun
- Lance
- 4 Quick-Connect Spray Nozzles (0°, 15°, 25°, 40°)
- 1 Foam Cannon
- Power Cord



Image: An exploded view of the LWQ Pressure Washer showing all included components such as the main unit, spray gun, hose, nozzles, and foam cannon.

SETUP

Follow these steps to assemble and prepare your pressure washer for first use.

1. **Attach the Handle:** Secure the handle to the main unit.
2. **Install Hose and Lance Holders:** Insert the lance holder and the high-pressure hose holder into their corresponding positions on the unit.
3. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the pressure washer outlet and the other end to the spray gun.
4. **Connect Water Supply:** Attach a garden hose (not included) to the water inlet on the pressure washer. Ensure the water supply is turned on fully.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step installation process for the LWQ pressure washer machine, including attaching the handle and connecting hoses.

Your browser does not support the video tag.

 
Video: This video illustrates how to properly install the spray gun, quick-connect nozzles, and foam cannon onto the pressure washer lance.

OPERATING INSTRUCTIONS

Learn how to use your pressure washer effectively for various cleaning tasks.

1. **Purge Air:** Before turning on the unit, squeeze the spray gun trigger to allow water to flow through the system and purge any trapped air. This prevents damage to the pump.
2. **Turn On:** Turn the power switch to the "ON" position.
3. **Select Nozzle:** Choose the appropriate quick-connect nozzle for your cleaning task.

- **0° (Red):** For tough spots and cracks.

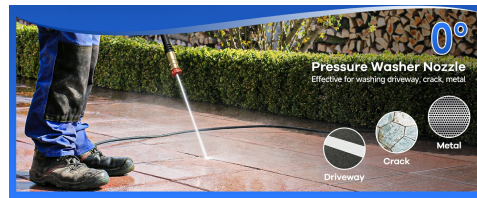

- **15° (Yellow):** For concrete, brick, and stubborn dirt.



- **25° (Green):** For fences, wood decks, and general cleaning.



- **40° (White):** For windows, vehicles, and delicate surfaces.



- **Foam Cannon (Black):** For applying soap or detergent.



4. **Begin Cleaning:** Hold the spray gun firmly and release the safety lock. Squeeze the trigger to start the water flow. Maintain a safe distance from the surface being cleaned.
5. **Shut Down:** To turn off, release the trigger, engage the safety lock, turn the power switch to "OFF", and turn off the water supply. Squeeze the trigger again to release any remaining pressure.

5 SPRAY MODES

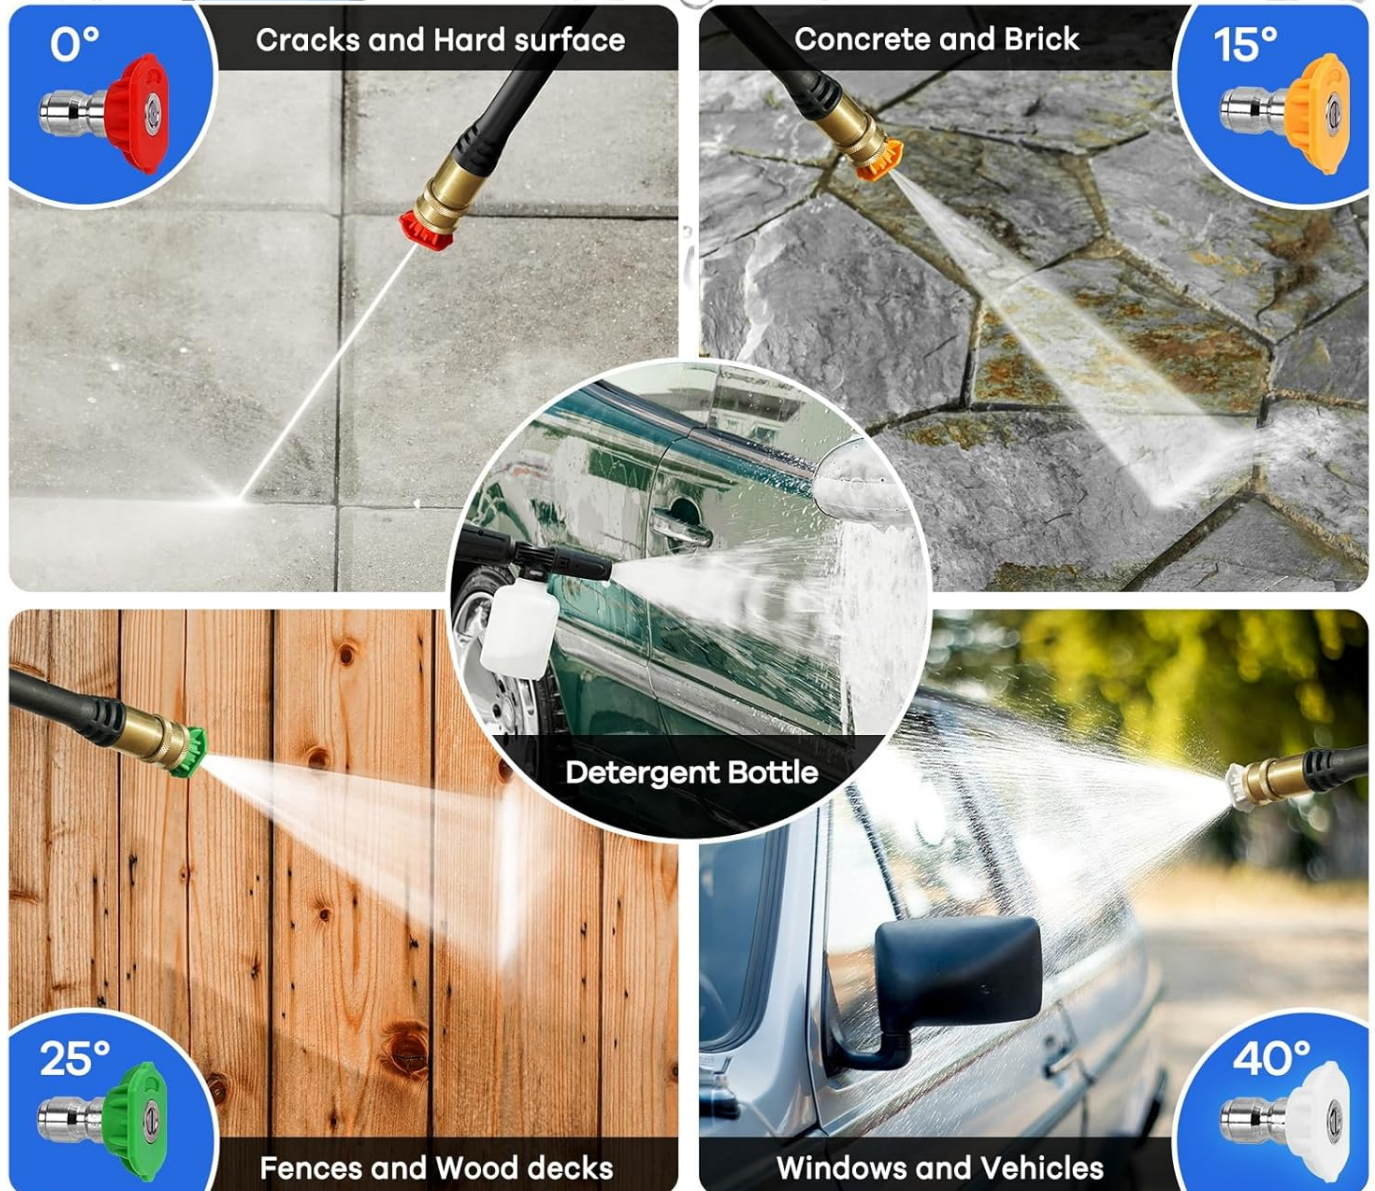 


Image: Visual representation of the five quick-connect spray modes (0°, 15°, 25°, 40°, and foam cannon) and their recommended uses for different surfaces.

Your browser does not support the video tag.

Video: This video demonstrates the LWQ pressure washer in action, showcasing its high-efficiency cleaning capabilities on various surfaces.

Your browser does not support the video tag.

Video: A short video highlighting the easy operation of the LWQ Pressure Washer, including turning it on and off and using the spray gun.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your pressure washer.

- **Clean Nozzles:** Regularly clean the quick-connect nozzles to prevent blockages.
- **Drain Water:** After each use, ensure all water is drained from the pump and hoses, especially before storing in freezing

temperatures.

- **Store Properly:** Store the pressure washer in a dry, protected area. Utilize the integrated hook for the power cord and the nozzle holder for accessories to keep everything organized.
- **Inspect Hoses and Connections:** Periodically check hoses and connections for wear, leaks, or damage. Replace any damaged parts immediately.

 
User-Friendly and Safety



1500W Powerful Motor
Rated Volt 120V/60Hz



Total Stop System & Safety Lock

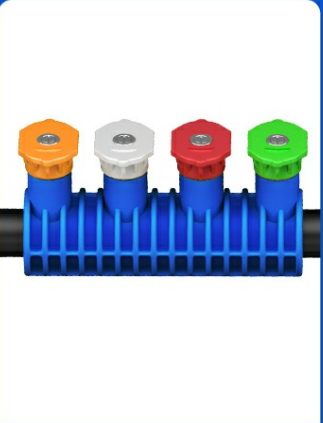

Easy to Store Nozzle



Power Cord Hook

Image: This image highlights user-friendly features such as the 1500W powerful motor, Total Stop System & Safety Lock, easy-to-store nozzle holder, and power cord hook, all contributing to convenient maintenance and storage.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
No water pressure or low pressure	Air in the pump; clogged nozzle; insufficient water supply; kinked hose.	Purge air from the system; clean or replace nozzle; ensure water supply is fully open; straighten hose.
Motor stops during operation	Overheating; electrical issue; thermal overload activated.	Allow unit to cool down; check power connection and circuit breaker; ensure proper ventilation.
Water leaks from connections	Loose connections; worn O-rings or seals.	Tighten all connections; inspect and replace O-rings or seals if damaged.

SPECIFICATIONS

Feature	Detail
Brand	LWQ
Model Number	S5
Power Source	AC
Item Weight	19 Pounds
Hose Length	6.3 Meters
Product Dimensions (L x W x H)	18"L x 14"W x 11"H

Feature	Detail
Maximum Flow Rate	2.5 Gallons Per Minute (GPM)
Maximum Pressure	2030 Pound per Square Inch (PSI)
Nozzles Included	4 Quick-Connect Nozzles (0°, 15°, 25°, 40°), 1 Foam Cannon

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official LWQ website. Keep your purchase receipt as proof of purchase for any warranty claims.

