

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [OLIXIS](#) /

> [OLIXIS Walking Pad Treadmill User Manual \(Model B0GHYYWM43\)](#)

OLIXIS B0GHYYWM43

OLIXIS Walking Pad Treadmill User Manual

Model: B0GHYYWM43

IMPORTANT SAFETY INSTRUCTIONS

Before operating the OLIKIS Walking Pad Treadmill, please read and understand all safety instructions. Failure to follow these instructions may result in injury or damage to the product.

- Always ensure the safety key is properly attached to the treadmill and your clothing during operation. The treadmill will stop immediately if the safety key is disengaged.
- Place the treadmill on a flat, stable surface. Ensure adequate clear space around the treadmill for safe use.
- Do not allow children or pets near the treadmill while it is in use.
- Wear appropriate athletic footwear. Do not use the treadmill barefoot or in socks.
- If you experience pain, dizziness, or shortness of breath, stop exercising immediately.
- Unplug the treadmill from the power outlet when not in use or before cleaning and maintenance.

PRODUCT OVERVIEW

The OLIKIS Walking Pad Treadmill is designed for home and office use, offering a compact and portable solution for low-impact exercise. Its slim profile allows for easy storage and use under standing desks.



This image shows the overall design of the OLIXIS Walking Pad Treadmill, highlighting its compact and handle-free structure. The black walking belt and integrated display are visible.

SMALL FORM, GIANT RESULTS



This image illustrates the compact dimensions of the walking pad, showing a user walking on it with measurements indicating its small footprint (approximately 44.3 inches long and 22 inches wide).

SETUP

The OLIXIS Walking Pad Treadmill requires minimal setup. Follow these steps to prepare your treadmill for first use:

1. **Unpacking:** Carefully remove the treadmill from its packaging.
2. **Placement:** Place the treadmill on a firm, level surface. Ensure there is sufficient space around the unit for safe movement.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet.
4. **Safety Key:** Attach the safety key to the designated slot on the treadmill's console. The treadmill will not operate without the safety key in place.

For a visual guide on setting up the walking pad, please refer to the video below:

Your browser does not support the video tag.

This video demonstrates the setup and basic use of the OLIXIS walking pad, including how to unfold it and place a tablet on the stand (if applicable to a model with handle).

OPERATION

Operating your OLIXIS Walking Pad Treadmill is straightforward using the remote control and integrated LED display.

Starting and Stopping

- Ensure the safety key is attached.
- Step onto the treadmill belt.
- Use the remote control to press the 'Start' button. The treadmill will begin at a low speed.
- To stop, press the 'Stop' button on the remote control or pull the safety key.

Adjusting Speed

The treadmill offers a speed range from 0.6 MPH to 3.1 MPH. Use the '+' and '-' buttons on the remote control to increase or decrease the speed to your desired pace.



This image illustrates different speed ranges for various activities: 'Working' (0-1.5 MPH), 'Walking' (0-2.5 MPH), and 'Running' (2.5-3.8 MPH). Note that the product specifications state a maximum of 3.1 MPH.

LED Display and Remote Control

The integrated LED display provides real-time feedback on your workout. The remote control allows for

convenient adjustments.

LED DISPLAY & SMART REMOTE



This image highlights the LED display, showing metrics such as Time, Speed, Distance, and Calories. It also depicts the remote control used to manage these functions.

THE SAFETY KEY SECURE YOUR WALK



This image emphasizes the importance of the safety key, showing a red key attached to the treadmill's console, indicating that the treadmill operates only when the safety key is in place.

FEATURES


Quiet Operation

The OLIXIS Walking Pad is equipped with an ultra-quiet motor, allowing you to exercise without disturbing others, making it ideal for shared living spaces or office environments.

POWERFUL AND QUIET



200LBS

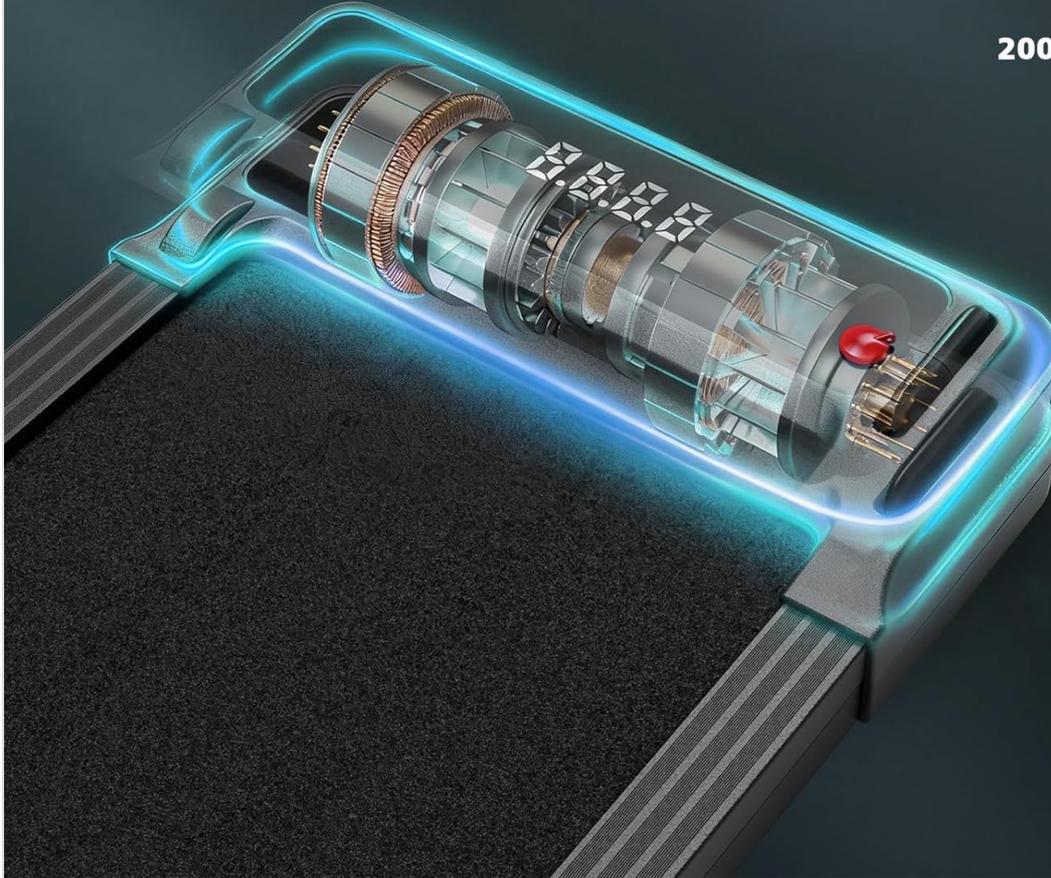

This image provides an internal view of the treadmill's motor, emphasizing its powerful yet quiet operation, capable of supporting up to 200 lbs.

Non-Slip Belt and Shock Absorption

The treadmill features a wide, textured, anti-slip walking belt for stable and secure footing. An advanced shock absorption system is integrated to reduce impact on your joints.

ENGINEERED FOR LASTING PERFORMANCE

Non-Slip Safety & Advanced Shock Absorption



This image highlights the treadmill's non-slip safety and advanced shock absorption features, showing arrows indicating the cushioning effect during use.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your OLIXIS Walking Pad Treadmill.

- **Lubrication:** Use the provided silicone oil to lubricate the walking belt periodically. Refer to the specific instructions in the included manual for frequency and application method.
- **Cleaning:** Wipe down the treadmill with a damp cloth after each use to remove sweat and dust. Do not use abrasive cleaners.
- **Storage:** When not in use, store the treadmill in a dry, cool place. Its portable design allows for easy storage under furniture or in a closet.

TROUBLESHOOTING

If you encounter any issues with your OLIXIS Walking Pad Treadmill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Treadmill does not start.	Safety key not attached. Power cord not plugged in.	Ensure the safety key is correctly placed. Check power connection.
E14 error displayed.	Safety key is not attached or has come loose.	Re-attach the safety key firmly to its slot.
Belt slipping or uneven movement.	Belt requires lubrication or adjustment.	Apply silicone oil as per maintenance instructions. Refer to the full manual for belt adjustment procedures.

For issues not listed here, please contact OLIXIS customer support.

SPECIFICATIONS

Feature	Detail
Brand	OLIXIS
Model Name	OLIXIS Walking Pad Treadmill for Home
ASIN	B0GHYYWM43
Color	Black
Material	Metal
Item Dimensions (LxWxH)	42.2 x 19.2 x 3.6 inches
Item Package Dimensions (LxWxH)	44.69 x 22.44 x 4.13 inches
Package Weight	34.6 Pounds
Speed Range	0.6 MPH to 3.1 MPH
Included Components	Safety Key
Suggested Users	Unisex-adult

WARRANTY AND SUPPORT

OLIXIS products are designed for quality and durability. For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official OLIXIS website. Please retain your proof of purchase for warranty claims.