

Beelicious BAF-802

Beelicious 32QT Extra Large Air Fryer Toaster Oven Combo

Model: BAF-802

INTRODUCTION

Thank you for choosing the Beelicious 32QT Extra Large Air Fryer Toaster Oven Combo. This versatile appliance is designed to simplify your cooking with 19+ preset functions, including air fry, bake, roast, broil, rotisserie, toast, and dehydrate. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place cooking utensils or baking dishes on the glass door.

This appliance is ETL certified, ensuring high quality and safety standards.



High Quality and Safety



Double Glass Door



Food Grade Material



ETL Certified

Image: Beelicious Air Fryer Toaster Oven highlighting safety features like double glass door and ETL certification.

PRODUCT OVERVIEW AND COMPONENTS

The Beelicious 32QT Air Fryer Toaster Oven is a multi-functional kitchen appliance. Familiarize yourself with its parts and included accessories.

Main Unit

- **Control Panel:** Digital display with touch buttons for presets, temperature, and time.
- **Oven Door:** Double glass door for heat insulation and safety.
- **Interior Cavity:** Large 32-quart capacity with multiple rack positions.
- **Heating Elements:** Located at the top and bottom for even cooking.
- **Cool-Touch Handle:** Designed to remain cool during operation for safe opening and closing.



Image: Close-up of the cool-touch handle for safe operation.

Included Accessories

Your appliance comes with the following accessories:

- **Air Fry Basket:** For air frying foods like fries, chicken wings, and vegetables.
- **Oven Rack:** For baking, roasting, and toasting.
- **Baking Pan:** For baking and catching drips.
- **Rotisserie Spit Fork:** For rotisserie cooking whole chickens or roasts.
- **Rotisserie Lift:** Tool for safely removing the hot rotisserie spit.
- **Crumb Tray:** Collects crumbs and drips for easy cleaning.



Image: Illustration of the four rack levels inside the oven cavity.

SETUP

Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Remove all accessories from inside the oven cavity.
3. Keep packaging materials out of reach of children.

Placement

- Place the appliance on a stable, level, heat-resistant surface.
- Ensure there is at least 4 inches (10 cm) of space on all sides of the oven for proper ventilation.
- Do not place the appliance near flammable materials or under cabinets.

Before First Use

1. Wipe the exterior of the oven with a damp cloth.
2. Wash all accessories (air fry basket, oven rack, baking pan, rotisserie spit fork, rotisserie lift, crumb tray) in warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the crumb tray at the bottom of the oven.
4. To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 400°F (200°C) on the 'Bake' function. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

This section details how to use your Beelicious Air Fryer Toaster Oven for various cooking functions.

Control Panel Overview

The digital control panel allows for easy selection of cooking functions, temperature, and time.



Image: Close-up of the touch screen control panel.

Basic Operation

1. Plug the appliance into a grounded electrical outlet. The display will illuminate.
2. Place food and desired accessories inside the oven. Close the door.
3. Select a preset function by pressing the corresponding icon on the control panel.
4. Adjust the temperature (TEMP +/-) and time (TIME +/-) as needed. The oven offers precise temperature control in 5°F increments.
5. Press the Start/Pause button to begin cooking.
6. To stop cooking, press the Start/Pause button again.

19+N Presets Multifunction Oven

Bring the expertise of America's most beloved chef to your everyday meals



85% Less Oil and Fat - Healthy Choice for Your Family



✗ Traditional Deep Frying



✓ Enhanced Air Frying

Image: The Beelicious Air Fryer Toaster Oven showcasing its multiple cooking functions.

Preset Functions

The oven features 19+ preset functions for common cooking tasks. Each preset has a default temperature and time, which can be adjusted.

- **Air Fry:** Ideal for crispy foods with little to no oil. Use with the air fry basket.
- **Bake:** For cakes, cookies, and casseroles. Use with the baking pan or oven rack.
- **Roast:** For meats and vegetables. Use with the baking pan or oven rack.
- **Broil:** For quick browning and searing. Use with the oven rack.
- **Rotisserie:** For whole chickens or roasts. Use with the rotisserie spit fork.
- **Toast:** For bread and bagels. Use with the oven rack.
- **Dehydrate:** For drying fruits, vegetables, and jerky. Use with the air fry basket or oven rack.
- **Defrost:** To thaw frozen foods.
- **Warm:** To keep cooked food warm.
- **Proof:** For rising dough.

Dual Cook Function

The innovative dual cook function allows you to combine two cooking functions sequentially. For example, you can air fry for a set time, then automatically switch to bake. Refer to the detailed instructions in the full manual for programming dual cook settings.

Using the Rotisserie Function

1. Skewer the food (e.g., whole chicken) onto the rotisserie spit, securing it with the forks.
 2. Insert the pointed end of the spit into the rotisserie drive socket on the right side of the oven.
 3. Rest the notched end of the spit onto the left support bracket.
 4. Select the 'Rotisserie' preset or manually set temperature and time. Press the 'Rotate' button to activate rotation.
 5. When cooking is complete, use the rotisserie lift tool to carefully remove the hot spit from the oven.
- Your browser does not support the video tag.
- Video: Demonstration of the 32QT LargeSmart Oven Air Fryer with Rotisserie and Dehydrator functions. This video shows the appliance in use, highlighting its various capabilities like air frying and rotisserie cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your appliance.

General Cleaning

1. Always unplug the oven and allow it to cool completely before cleaning.
2. Remove the crumb tray and discard any crumbs. Wash the crumb tray in warm, soapy water, rinse, and dry.
3. Wash all other accessories (air fry basket, oven rack, baking pan, rotisserie spit fork) in warm, soapy water. These accessories are dishwasher safe.
4. Wipe the interior walls with a damp cloth and mild liquid soap. Do not use abrasive cleaners or scouring pads.
5. Clean the exterior of the oven with a damp cloth. Do not immerse the oven in water.
6. Ensure all parts are completely dry before plugging the oven back in or storing.

Stubborn Stains

For stubborn stains, a non-abrasive liquid cleanser or spray can be used. Apply the cleanser to a sponge or cloth, not directly to the oven. Allow to sit for a few minutes before wiping clean.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; main power switch off.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food is not cooking evenly.	Overcrowding the basket/rack; incorrect temperature/time; food not rotated.	Do not overcrowd. Cook in smaller batches if necessary. Adjust temperature/time. Rotate food halfway through cooking.
White smoke coming from the oven.	Grease/oil residue from previous use; fatty food cooking.	Clean the oven interior and accessories thoroughly after each use. For fatty foods, use the baking pan to catch drips.
Rotisserie function not rotating.	Spit not properly installed; food too heavy/unbalanced.	Ensure the rotisserie spit is correctly seated in both the drive socket and support bracket. Ensure food is balanced on the spit.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model Name:** BAF-802
- **Brand:** Beelicious
- **Capacity:** 32 Quarts
- **Product Dimensions:** 16.9"D x 18"W x 14.39"H
- **Item Weight:** 27.49 Pounds
- **Wattage:** 1800 Watts
- **Control Type:** Button Control (Digital Touch)
- **Material:** Metal
- **Special Feature:** Programmable, 19-in-1 Functions
- **Included Components:** Air fryer oven, wire rack, baking pan, air fry basket, crumb tray, rotisseries set.

WARRANTY AND SUPPORT

Beelicious is committed to providing high-quality products. For any issues or inquiries regarding your appliance, please contact our customer support. We aim to resolve all problems within 24 hours.
Please retain your proof of purchase for warranty claims.

© 2026 Beelicious. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

