

[Manuals.plus](#) /

› [JUMMICO](#) /

› JUMMICO Portable Air Conditioner 12000 BTU User Manual

JUMMICO OL-A018EE35N2S

JUMMICO Portable Air Conditioner 12000 BTU User Manual

Model: OL-A018EE35N2S

INTRODUCTION

This manual provides instructions for the JUMMICO Portable Air Conditioner, Model OL-A018EE35N2S. This appliance is designed to provide cooling, dehumidification, and fan functions for indoor spaces up to 40 square meters. It features a 12000 BTU cooling capacity, a remote control, and a 24-hour timer.



Image 1: JUMMICO Portable Air Conditioner unit.

SETUP

1. **Unpacking:** Carefully remove the air conditioner from its packaging. Retain packaging materials for future storage or transport.
2. **Placement:** Position the unit on a flat, stable surface. Ensure there is at least 30 cm of clear space around the unit for proper airflow. The integrated wheels allow for easy movement.
3. **Window Kit Installation:**
 - Attach the window sealing plate to the window opening. Adjust the plate length to fit your window.
 - Secure the window kit in place to prevent air leakage.
4. **Exhaust Hose Connection:**
 - Connect one end of the exhaust hose to the air outlet on the back of the unit.
 - Connect the other end of the exhaust hose to the adapter on the window sealing plate. Ensure a tight seal to expel hot air efficiently.
5. **Power Connection:** Plug the power cord into a grounded 220V electrical outlet. Do not use extension

cords or adapters.

OPERATING INSTRUCTIONS

The unit can be operated using the control panel on the unit or the provided remote control.

Control Panel and Remote Control Functions:

- **Power Button:** Turns the unit ON or OFF.
- **Mode Button:** Cycles through Cooling, Dehumidification, and Fan modes.
- **Temperature/Timer Buttons (Up/Down):** Adjusts the desired temperature in Cooling mode or sets the timer duration.
- **Fan Speed Button:** Selects fan speed (Low, Medium, High).
- **Timer Button:** Activates the 24-hour timer function. Press to set the desired operating time.
- **Sleep Mode:** Reduces fan speed and noise for quieter operation, typically around 45 dB. Note that maximum operating noise levels may be higher.

Operating Modes:

- **Cooling Mode:** Select this mode for active cooling. Set the desired temperature using the Up/Down buttons. The unit will cool until the room reaches the set temperature.
- **Dehumidification Mode:** This mode removes excess moisture from the air. The fan operates at a low speed, and the cooling function is reduced. Ensure continuous drainage is set up if operating for extended periods in this mode.
- **Fan Mode:** This mode circulates air without cooling. Select the desired fan speed.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your air conditioner.

Air Filter Cleaning:

- The air filter should be cleaned every two weeks, or more frequently depending on usage and air quality.
- Turn off and unplug the unit before cleaning.
- Remove the filter from the back or side of the unit (refer to diagram in full manual for exact location).
- Wash the filter with warm, soapy water. Rinse thoroughly and allow it to air dry completely before reinserting.

Water Drainage:

- The unit collects condensate water during cooling and dehumidification.
- **Manual Drainage:** When the internal water tank is full, the unit will stop operating and display an indicator. Turn off the unit, place a shallow pan under the drain port, and remove the drain plug to empty the water.
- **Continuous Drainage:** For continuous operation in high humidity, attach a drain hose (not included) to the continuous drain port and direct it to a floor drain or suitable container.

Storage:

- Before storing, ensure the unit is completely drained of water.
- Clean the air filter and wipe down the exterior.

- Store the unit in a dry, upright position, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on	No power; Power cord not plugged in; Full water tank	Check power supply; Plug in power cord; Drain water tank
Unit not cooling effectively	Air filter dirty; Exhaust hose blocked or disconnected; Window kit not sealed; Room size exceeds capacity; Doors/windows open	Clean air filter; Check exhaust hose connection; Seal window kit; Close doors/windows; Ensure room is within 40 m ²
Water leakage	Drain plug loose; Unit not level; Continuous drain hose blocked	Secure drain plug; Place unit on level surface; Clear continuous drain hose
Excessive noise	Unit not on a level surface; Obstruction in fan; Normal operating noise at higher settings	Ensure unit is level; Check for obstructions; Note that noise levels can exceed 45 dB during maximum cooling operation.
Remote control not working	Batteries depleted; Obstruction between remote and unit	Replace batteries; Remove obstructions; Ensure remote is pointed at the unit's receiver

SPECIFICATIONS

Model Number: OL-A018EE35N2S

Brand: JUMMICO

Cooling Capacity: 12000 BTU

Functions: Cooling, Dehumidification, Fan (3-in-1)

Coverage Area: Up to 40 m²

Power Consumption: 1290 W

Voltage: 220 V

Noise Level (Stated): 45 dB (in Sleep Mode)

Dimensions (L x W x H): 34.8 x 42.3 x 69.4 cm

Weight: 32.5 kg

Energy Efficiency Class: A

Annual Energy Consumption: 650 kWh/year

Control Method: Remote Control, On-unit Control Panel

Included Components: Remote Control, Exhaust Hose, Window Kit

WARRANTY INFORMATION

This JUMMICO product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or to inquire about parts and service, please contact JUMMICO customer support. Contact details can typically be found on the product packaging, the official JUMMICO website, or your purchase documentation.