

[Manuals.plus](#) /

> [MOVA](#) /

> MOVA M50 Floor Washer Vacuum Cleaner User Manual

MOVA M50

MOVA M50 Floor Washer Vacuum Cleaner User Manual

Model: M50 (HMH66A)

1. INTRODUCTION

Thank you for choosing the MOVA M50 Floor Washer Vacuum Cleaner. This appliance is designed to provide efficient wet and dry cleaning for various floor types, combining powerful suction with advanced cleaning features. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.

The MOVA M50 features a powerful 22,000 Pa suction, 180° reclinable design for reaching under furniture, 90° flexible rotation for easy maneuverability, and dual-edge cleaning to tackle dirt along walls and baseboards. It also includes an automatic 85°C brush washing and hot air drying system for hygienic maintenance, and a tangle-free roller brush design.



Image 1.1: MOVA M50 Floor Washer Vacuum Cleaner in use.

2. WHAT'S IN THE BOX

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.

- Main Body (x1)
- Handle (x1)
- Base Station (x1)
- Cleaning Brush (x1)
- 500ml Cleaning Solution (x1)
- Replacement Filter (x1)
- Replacement Roller Brush (x1)
- User Manual (x1)



Impugnatura x1



Corpo principale x1



Filtro di ricambio x1



Rullo spazzola di ricambio x1



Manuale d'uso x1



Spazzola per la pulizia x1



Stazione base x1



Soluzione detergente da 500 ml x1

Contenuto della confezione

Image 2.1: Package Contents.

3. SAFETY INFORMATION

Please read and understand all safety instructions before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for indoor use only.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only MOVA recommended cleaning solutions.
- Do not use to pick up flammable or combustible liquids, or anything that is burning or smoking.
- Ensure the appliance is fully assembled before operation.
- Store the appliance in a dry, cool place when not in use.

4. SETUP

4.1 Assembly

1. Insert the handle into the main body until it clicks securely into place.
2. Place the assembled unit onto the base station.

4.2 Charging

- Connect the power adapter to the base station and plug it into a wall outlet.
- Place the vacuum cleaner on the base station to charge. The LED display will indicate charging status.
- Ensure the appliance is fully charged before first use (approximately 4-5 hours). A full charge provides up to 46 minutes of runtime.



Image 4.1: Battery and Runtime.

4.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main body.
2. Open the tank cap and fill with clean tap water. For enhanced cleaning, add the recommended amount of MOVA cleaning solution. Do not overfill.
3. Close the cap securely and reattach the tank to the main body.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- To power on, press the power button on the handle. The LED display will light up.
- To power off, press the power button again.

5.2 Cleaning Modes and Smart Dirt Detection

The M50 features intelligent dirt detection. It automatically adjusts suction power and water output based on the detected level of dirt (light, medium, heavy) for optimal cleaning efficiency.



Image 5.1: LED Display and Voice Control.

5.3 Using the Vacuum/Wash Function

- Tilt the main body back to engage the roller brush and start cleaning.
- Move the vacuum cleaner slowly over the floor. The powerful 22,000 Pa suction and 20 N downward pressure effectively remove stubborn stains.



5.4 Maneuverability

- The 180° fully reclinable design allows you to clean under low furniture without losing suction power.
- The 90° flexible rotation makes it easy to navigate around obstacles and clean tight corners and edges.
- The dual-edge cleaning feature ensures thorough cleaning right up to walls and baseboards.



Image 5.3: Agile 90° Rotation.



Image 5.4: Complete Dual-Edge Cleaning.

6. MAINTENANCE

6.1 Emptying the Dirty Water Tank

- After each use, remove the dirty water tank from the main body.
- Open the tank and dispose of the dirty water. The solid-liquid separation design makes this process cleaner.
- Rinse the tank thoroughly with clean water and allow it to air dry before reattaching.

Separazione di rifiuti solidi e liquidi

Il design per la separazione di rifiuti solidi e liquidi del serbatoio dell'acqua sporca rende la manutenzione più semplice e pratica.



Image 6.1: Solid and Liquid Waste Separation.

6.2 Automatic Brush Washing and Drying

- Place the vacuum cleaner on the base station after use.
- Initiate the self-cleaning cycle. The brush will be washed with 85°C hot water to effectively remove grease and dirt.
- Following the wash, the brush will undergo 85°C hot air drying, which takes approximately 5 minutes, ensuring the brush remains clean and soft.

Lavaggio della spazzola a 85 °C*

L'aria calda a 85 °C (185 °F)* aiuta a sciogliere efficacemente grasso e sporco. Inoltre, il sensore per lo sporco integrato attiva automaticamente un ciclo di ri-lavaggio quando necessario.



*85 °C, 5 min: In base ai dati del nostro laboratorio interno. Le prestazioni effettive possono variare in base al tipo di ambiente domestico e all'utilizzo.

Asciugatura rapida in 5 minuti* con aria calda a 85°C*

In modalità asciugatura rapida, M50 combina l'asciugatura centrifuga con aria calda a 85 °C (185 °F)* per asciugare la spazzola a rullo in soli 5 minuti*. Il suo design compatto migliora l'efficienza di asciugatura mantenendo un funzionamento silenzioso.

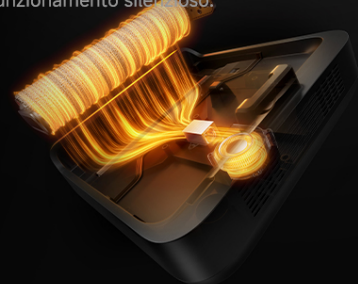


Image 6.2: 85°C Brush Washing and Hot Air Drying.

6.3 Cleaning the Roller Brush (Manual)

- If necessary, remove the roller brush from the brush head.
- Use the provided cleaning brush to remove any tangled hair or debris from the roller brush. The high-density serrated scraper design minimizes tangles, but occasional manual cleaning may be required.
- Rinse the roller brush under running water and allow it to air dry completely before reinserting.

Pulizia doppio bordo completa*

La spazzola a doppio bordo è progettata per eccellere negli spazi ristretti e affronta con maestria i bordi come pareti e battiscopa, rimuovendo polvere e detriti fino a 0 mm*.

*0 punti trascurati durante la pulizia, 0 mm: Si riferisce alla capacità di rimozione della polvere della lavapavimenti, mantenendo una distanza di 0 mm dalla parete su entrambi i lati della spazzola. In base ai dati del nostro laboratorio interno. Le prestazioni effettive possono variare in base al tipo di ambiente domestico e all'utilizzo.



Image 6.3: Tangle-Free Roller Brush Design.

6.4 Cleaning the Filter

- Locate and remove the HEPA filter.
- Tap the filter gently to remove loose dust. If heavily soiled, rinse under running water.
- Ensure the filter is completely dry before reinserting it into the appliance.

7. TROUBLESHOOTING

If you encounter any issues with your MOVA M50, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not turn on	Low battery; improper assembly	Charge the battery fully; ensure handle is securely attached.
Poor suction	Dirty filter; clogged brush; full dirty water tank	Clean or replace filter; clear brush of debris; empty dirty water tank.
Water leakage	Water tank not properly installed; tank cap loose	Ensure clean and dirty water tanks are correctly seated and caps are tight.
Brush not rotating	Obstruction in brush head; brush not installed correctly	Remove any obstructions; ensure brush is correctly installed.

If the problem persists, please refer to the official MOVA user manual PDF or contact customer support.

8. SPECIFICATIONS

- **Brand:** MOVA
- **Model Name:** M50

- **Model Number:** HMM66A
- **Special Feature:** Cordless, Self-Cleaning, Voice Control, LED Display
- **Filter Type:** HEPA Filter
- **Recommended Surfaces:** All floor types
- **Power Source:** Battery powered
- **Recommended Product Uses:** Floors, furniture, corners, pet hair
- **Color:** Black
- **Portable:** Yes
- **Indoor/Outdoor Use:** Indoor
- **Battery Life/Runtime:** 46 Minutes
- **Item Dimensions (LxWxH):** 32L x 31.2W x 124H cm

9. WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the official MOVA website or the comprehensive user manual PDF.

Official User Manual (PDF): [Download PDF](#)

For further assistance, please contact MOVA customer service through their official channels.

© 2023 MOVA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GL28FZHH>

More documents and user manuals: <https://manuals.plus/>