

[Manuals.plus](#) /

› [Ninja](#) /

› Ninja CRISPi PRO XL Air Fryer AS090EUWH Instruction Manual

Ninja AS090EUWH

Ninja CRISPi PRO XL Air Fryer AS090EUWH Instruction Manual

Model: AS090EUWH | Brand: Ninja

INTRODUCTION

Welcome to the instruction manual for your new Ninja CRISPi PRO XL Air Fryer. This appliance is designed to provide versatile cooking options with its 5 predefined functions and convenient CleanCrisp glass containers. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



The Ninja CRISPi PRO XL Air Fryer shown with both the large 5.7L glass container, ideal for family meals, and the smaller 2.3L container for snacks or sides.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Please read all instructions before using your Ninja CRISPi PRO XL Air Fryer.

- Always ensure the appliance is unplugged from the outlet when not in use and before cleaning.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep the appliance and its cord out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended or sold by Ninja, as this may cause fire, electric shock, or injury.

- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- The glass containers are designed to withstand temperature changes, but avoid extreme thermal shock (e.g., placing a very hot container directly into cold water).

PRODUCT COMPONENTS

Your Ninja CRISPi PRO XL Air Fryer comes with several key components designed for optimal cooking and convenience:

- **Main Unit:** The primary appliance housing the heating element and control panel.
- **5.7L CleanCrisp Glass Container:** A large capacity glass container suitable for family-sized meals.
- **2.3L CleanCrisp Glass Container:** A smaller capacity glass container ideal for individual portions, snacks, or side dishes.
- **Removable Modular Base:** An adjustable base that accommodates different sized CleanCrisp glass containers.
- **Non-Stick Base Racks (x2):** Designed to elevate food for even cooking and crisping.
- **Storage Lids (x2):** For convenient storage of cooked food directly in the glass containers.



An exploded view of the Ninja CRISPi PRO XL Air Fryer, showcasing its main unit, the 5.7L and 2.3L CleanCrisp glass containers, the removable modular base, non-stick base racks, and storage lids.

SETUP

Follow these steps to set up your Ninja CRISPi PRO XL Air Fryer for first use:

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Initial Cleaning:** Wash the CleanCrisp glass containers, non-stick base racks, and storage lids in warm, soapy water, then rinse and dry thoroughly. The main unit can be wiped clean with a damp cloth.
3. **Placement:** Place the main unit on a dry, level, heat-resistant surface, ensuring adequate space (at least 15 cm) from walls or other appliances for proper ventilation.
4. **Assemble:** Insert the desired CleanCrisp glass container into the modular base. Ensure the base is securely locked into place. Place a non-stick rack inside the glass container if required for your recipe.



The adjustable modular base allows for seamless switching between the 2.3L, 3.8L (sold separately), and 5.7L CleanCrisp glass containers, catering to various meal sizes.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a digital display and intuitive buttons for selecting functions, adjusting temperature, and setting time.

- **Power Button:** Turns the appliance on/off.
- **Function Dial/Buttons:** Select from the 5 predefined cooking functions.
- **Temp Button:** Adjusts the cooking temperature.
- **Time Button:** Adjusts the cooking time.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.



The control panel features precise temperature and time adjustments, ensuring uniform cooking and perfect results for every dish.

Cooking Functions

Your air fryer offers 5 versatile cooking functions:

- **Max Crisp:** Ideal for achieving maximum crispiness on foods like frozen fries or chicken nuggets.
- **Air Fry:** For healthier frying with little to no oil, perfect for a wide range of ingredients.
- **Bake:** Use for baking cakes, pastries, and other baked goods.
- **Prove:** Creates an optimal environment for dough to rise.
- **Recrisp:** Reheats leftovers while restoring their original crisp texture.



This image illustrates the five predefined cooking functions: Max Crisp for crispy results, Air Fry for healthier frying, Bake/Proof for baking and fermenting, and Recrip for reheating and restoring crispness.

General Cooking Steps

1. Place your food in the appropriate CleanCrisp glass container, optionally using a non-stick rack.
2. Insert the container into the main unit.
3. Press the Power button to turn on the appliance.
4. Select your desired cooking function using the function dial/buttons.
5. Adjust the temperature using the Temp button and the time using the Time button.
6. Press the Start/Pause button to begin cooking.
7. The appliance will beep when cooking is complete. Carefully remove the container using oven mitts.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Ninja CRISPi PRO XL Air Fryer.

- **Daily Cleaning:** After each use, unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher Safe Components:** The CleanCrisp glass containers, non-stick base racks, and storage lids are all dishwasher safe. For best results, place them on the top rack.
- **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing.
- **Main Unit:** Wipe the main unit with a clean, damp cloth. Do not immerse the main unit in water or spray directly with liquids.
- **Storage:** Store the assembled appliance in a cool, dry place.

Fácil de limpiar

Los recipientes de cristal CleanCrisp y sus tapas son aptos para lavavajillas, para una limpieza rápida y sencilla.

The CleanCrisp glass containers, non-stick racks, and storage lids are all dishwasher-safe for easy cleaning.

Temperature Resistance

The CleanCrisp glass containers are designed to withstand significant temperature changes, allowing you to cook directly from frozen ingredients to crispy perfection.

Resistente a cambios bruscos de temperatura


De congelado a crujiente en minutos.



This image demonstrates the temperature resistance of the CleanCrisp glass containers, showing food transforming from frozen to crispy within minutes.

Surface Protection

The appliance is equipped with heat-resistant feet to protect your countertops from heat damage.

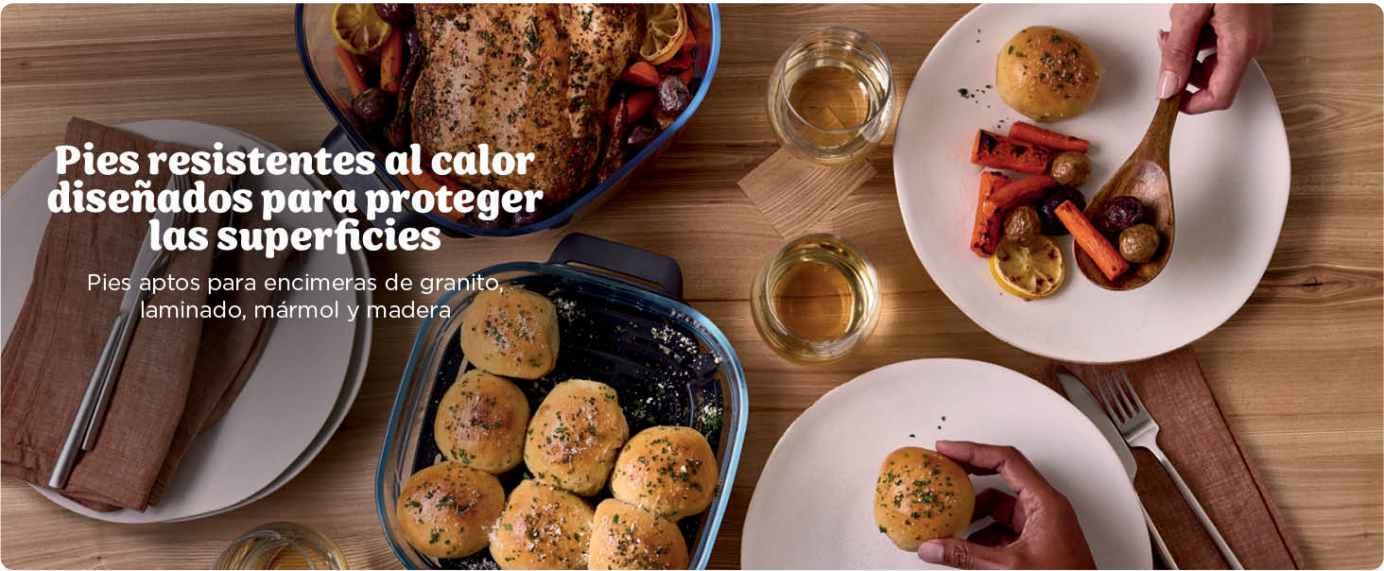

The air fryer features heat-resistant feet designed to protect various countertop surfaces, including granite, laminate, marble, and wood.

TROUBLESHOOTING

If you encounter any issues with your Ninja CRISPi PRO XL Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the glass container is properly seated in the modular base.
Food is not cooking evenly.	Overcrowding the container; incorrect temperature/time settings.	Avoid overcrowding; cook in smaller batches if necessary. Ensure correct temperature and time are set for the food type. Shake or flip food halfway through cooking.
Food is not crispy.	Too much moisture in food; insufficient oil (for air frying); incorrect function selected.	Pat food dry before cooking. Lightly coat food with oil for crispier results. Ensure 'Max Crisp' or 'Air Fry' function is selected.
White smoke coming from appliance.	Grease or food residue on heating element; cooking high-fat foods.	Unplug and allow to cool. Clean the heating element and interior. For high-fat foods, ensure proper ventilation and do not overfill.

If the problem persists after trying these solutions, please contact Ninja customer support.

SPECIFICATIONS

Feature	Specification
Model Number	AS090EUWH
Power Output	2050 Watts
Voltage	240 Volts

Feature	Specification
Capacity	5.7 Liters (large container), 2.3 Liters (small container)
Dimensions (D x W x H)	30 cm x 31 cm x 28 cm
Weight	5.17 Kilograms
Material	Plastic, Glass (CleanCrisp containers)
Minimum Temperature Setting	85 Degrees Celsius
Maximum Temperature Setting	205 Degrees Celsius
Control Method	Push Button
Dishwasher Safe Components	Yes (Glass containers, racks, lids)
Special Features	5 Predefined Programs, Dishwasher Safe Accessories, Two Glass Cooking Pots, Manual Temperature and Time Settings



A side view of the Ninja CRISPi PRO XL Air Fryer, illustrating its compact dimensions of 28 cm in height, 31 cm in width, and 30 cm in depth.

WARRANTY AND SUPPORT

Your Ninja CRISPi PRO XL Air Fryer comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, replacement parts, or any other inquiries, please visit the official Ninja website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question