

[Manuals.plus](#) /

> [realme](#) /

> realme Buds Air 8 Wireless Earbuds User Manual

realme Air 8

realme Buds Air 8 Wireless Earbuds

INSTRUCTION MANUAL

Introduction

Thank you for choosing the realme Buds Air 8 Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual carefully before using the product.

Package Contents

Ensure all items are present in the package:

- realme Buds Air 8 Earbuds (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- User Manual (this document)
- Ear Tips (various sizes, pre-installed or in a separate bag)

Setup

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB Type-C cable to the charging port on the case and a power source.



Image: The realme Buds Air 8 charging case showing the USB Type-C charging port at the bottom.

- The indicator light on the charging case will show charging status.
- A full charge provides up to 58 hours of total playback with the charging case.
- A quick 10-minute charge can provide approximately 11 hours of listening time.

2. Initial Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "realme Buds Air 8".
4. Once connected, a confirmation sound will play, and the earbuds will be ready for use.



Image: The realme Buds Air 8 earbuds resting in their open charging case, ready for pairing.

3. Wearing the Earbuds

Insert the earbuds into your ears and gently rotate them until they fit snugly and comfortably. Choose the ear tips that provide the best seal for optimal sound quality and noise cancellation.



Image: An isolated view of the realme Buds Air 8 earbuds, showing their ergonomic design.

Operating Instructions

Touch Controls

The realme Buds Air 8 feature intuitive touch controls on each earbud. Specific functions can often be customized via the realme Link app (if available for this model).

Action	Function
Double Tap	Play/Pause music, Answer/End call
Triple Tap	Next track
Press and Hold (one earbud)	Switch Noise Control Mode (ANC On/Transparency/ANC Off)
Press and Hold (both earbuds)	Enter/Exit Gaming Mode (low latency)

Active Noise Cancellation (ANC)

The earbuds feature up to 55dB Smart ANC, reducing environmental noise by 99%. To cycle through ANC modes (ANC On, Transparency, ANC Off), press and hold one earbud. The Transparency mode allows you to hear your surroundings clearly without removing the earbuds.

Hi-Res Audio with LDAC

The realme Buds Air 8 support Hi-Res Audio and the LDAC codec, providing superior sound quality. Ensure your connected device also supports LDAC for the best audio experience.

Multi-Device Connectivity

These earbuds allow seamless switching between up to 3 connected devices (e.g., smartphone, tablet, laptop). To switch, simply play audio on the desired device, and the earbuds will automatically connect.

Crystal Clear Calls

Equipped with 6 microphones and AI noise cancellation, the earbuds ensure clear voice pickup during calls, even in noisy or windy environments.

Gaming Mode (Low Latency)

Activate Gaming Mode by pressing and holding both earbuds simultaneously to achieve an ultra-low latency of 45ms, ensuring perfect audio-video synchronization for gaming.

Maintenance

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with water and mild soap if necessary, ensuring they are completely dry before reattaching.
- Do not use harsh chemicals or abrasive materials.

Water Resistance (IP55)

The realme Buds Air 8 are IP55 water-resistant, meaning they are protected against dust and low-pressure water jets. This makes them suitable for workouts and light rain. However, they are not designed for swimming or submersion in water. Ensure the earbuds and charging port are dry before charging.

Troubleshooting

Earbuds not pairing or connecting?

- Ensure the earbuds are charged and the charging case lid is open.
- Turn off and on Bluetooth on your device.
- Try resetting the earbuds (refer to the realme Link app or product support for specific reset instructions).
- Delete "realme Buds Air 8" from your device's Bluetooth list and try pairing again.

No sound or low volume?

- Check the volume levels on both your device and the earbuds.
- Ensure the earbuds are properly seated in your ears.
- Clean any debris from the earbud mesh.

Charging issues?

- Ensure the charging cable is securely connected to both the case and the power source.
- Try a different USB-C cable or power adapter.
- Clean the charging contacts on both the earbuds and inside the case.

Specifications

Feature	Detail
Model Name	Air 8
Brand	realme
Connectivity Technology	Bluetooth 5.4
Noise Cancellation	Active Noise Cancellation (ANC) up to 55dB
Audio Codec	LDAC, Hi-Res Wireless certified
Drivers	Dual Driver (11mm Woofer + 6mm Tweeter)
Microphones	6 Microphones with AI Noise Cancellation for calls
Battery Life	Up to 58 hours (with charging case)
Fast Charging	10 minutes charge for 11 hours playback
Water Resistance	IP55
Low Latency	45ms (Gaming Mode)
Compatible Devices	Mobile phones, Laptops, Desktops, Tablets, Televisions, Consoles, Smart speakers
Charging Port	USB Type-C

Warranty and Support

The realme Buds Air 8 come with a **1-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official realme support website or contact their customer service. You can often find more detailed FAQs and software updates on the official realme website:

[Visit realme Official Website](#)