

Zerodis Zez35tgjwmoe-11

Zerodis 15.7in Ceiling Fan Light with Remote

Model: Zez35tgjwmoe-11

INTRODUCTION

This manual provides instructions for the safe and efficient use of your Zerodis 15.7-inch Ceiling Fan Light. Please read this manual thoroughly before installation and operation, and retain it for future reference.

SAFETY INFORMATION

- Always disconnect power before installation, cleaning, or maintenance.
- Ensure the installation location can support the weight of the fan light.
- Do not insert objects into the fan blades while the fan is operating.
- This product is designed for indoor use only.
- Keep the remote control away from water and extreme temperatures.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Fan Light Unit (1)
- Fan Blades (5)
- Remote Control (1)
- Instruction Manual (1)



Image: All components included in the package, showing the main fan light unit, five detachable fan blades, and the remote control.

SPECIFICATIONS

Item Type	Ceiling Fan Light
Height	Approx. 170mm / 6.7 inches
Expanded Diameter	Approx. 400mm / 15.7 inches
Gross Weight	482g / 17.0 ounces
Remote Control Battery	1x 150mAh CR2025 button battery (included)
Light Source Options	White light, Warm light, Neutral light
Fan Speed Settings	1 speed, 2 speed, 3 speed
Timer Settings	1H, 2H, 4H
Material	ABS

Bulb Base

E26



Image: Diagram illustrating the height (170mm / 6.7in) and expanded diameter (400mm / 15.7in) of the fan light.

SETUP AND INSTALLATION

Follow these steps to install your ceiling fan light:

1. **Assemble the Fan Blades:** Carefully attach each of the five fan blades to the main fan light unit. Ensure they are securely fastened.
2. **Install into Lamp Holder:** Screw the E26 base of the fan light unit into a compatible E26 lamp holder on your ceiling. Ensure it is tightened firmly.
3. **Power On:** Restore power to the lamp holder circuit.
4. **Test Functionality:** Use the remote control to test the light and fan functions.



Image: The fully assembled fan light unit, showing the five black blades attached to the central body with the E26 screw base visible at the top.

OPERATING INSTRUCTIONS

The Zerodis Ceiling Fan Light is operated using the included remote control. The remote allows adjustment of light color temperature, brightness, and fan speed.

Remote Control Functions:

- **Light On/Off:** Press the designated button to turn the light on or off.
- **Fan On/Off:** Press the designated button to turn the fan on or off.
- **Light & Fan On/Off:** A single button can activate both light and fan simultaneously.
- **Color Temperature Adjustment:** Cycle through White, Neutral, and Warm light settings.
- **Brightness Adjustment:** Adjust the light intensity.
- **Fan Speed Control:** Select from 1 (low), 2 (medium), or 3 (high) speed settings.
- **Timer Function:** Set the fan or light to turn off automatically after 1 hour, 2 hours, or 4 hours.
- **Emergency Stop:** This function is included for safety.

Three Color Temp Dimming



One click to switch the light color, give you different ambience



Brightness stepless dimming, adjustable at will



Color temperature stepless dimming, application scenario

 


Image: Visual representation of the adjustable light color temperatures (White, Neutral, Warm) and stepless dimming for both brightness and color temperature, controlled by the remote.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan light.

- **Cleaning:** Before cleaning, ensure the power is off. Wipe the fan light and blades with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check that the fan blades are securely attached.
- **Remote Battery Replacement:** If the remote control's range decreases or it stops responding, replace the CR2025 button battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan or Light does not turn on.	No power to the lamp holder; Remote control battery is dead; Remote control not paired.	Check power supply; Replace remote battery; Refer to remote pairing instructions (if applicable, not detailed in source).
Fan is noisy or wobbles.	Blades are not securely attached; Fan light not securely screwed into the lamp holder.	Ensure all blades are tightened; Re-tighten the fan light into the E26 base.
Remote control is unresponsive.	Battery is low or dead; Obstruction between remote and fan light.	Replace remote battery; Ensure clear line of sight to the fan light.

WARRANTY AND SUPPORT

This Zerodis product comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use.

For warranty claims or technical support, please contact your retailer or visit the official Zerodis website for contact information. Please have your purchase receipt and product model number (Zez35tgjwmoe-11) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GLFBG6DJ>

More documents and user manuals: <https://manuals.plus/>