

Manuals.plus /

› INFANS /

› INFANS Baby High Chair Instruction Manual (Model B0GLFZCJVP)

## INFANS B0GLFZCJVP

# INFANS Baby High Chair Instruction Manual

Model: B0GLFZCJVP

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use of the INFANS Baby High Chair. Keep this manual for future reference. Failure to follow these instructions could result in serious injury or death.

- **Never leave your child unattended** in the high chair.
- Always use the **5-point safety harness** to secure your child. Ensure it is properly adjusted and snug.
- Ensure the high chair is fully open and locked in position before placing a child in it.
- Do not use the high chair if any parts are broken, torn, or missing.
- The high chair is designed for children aged **6-36 months** and weighing up to **33 lbs (15 kg)**.
- Keep children away from the high chair during folding and unfolding to prevent injury.
- Place the high chair on a flat, stable surface. Do not use on elevated surfaces.
- Do not allow children to climb on the high chair.

The high chair features a stable pyramid structure and non-slip foot pads for enhanced stability.

## 2. ASSEMBLY AND SETUP

The INFANS Baby High Chair comes partially assembled. Follow these steps to set up the high chair for use.

### 2.1 Unfolding the High Chair

1. Place the folded high chair on a flat surface.
2. Locate the folding mechanism on the side of the chair frame.
3. Press the release buttons or levers and gently pull the legs apart until the chair is fully extended and locks into an upright position. Ensure all four legs are securely locked.

### 2.2 Attaching the Tray

1. Align the tray with the armrests of the high chair.

2. Slide the tray onto the armrests until it clicks into place.
3. Ensure both sides of the tray are securely attached.



**Figure 2.1:** Steps for unfolding and folding the high chair. Step 1 shows the chair ready to be folded, Step 2 shows a person engaging the folding mechanism, and Step 3 shows the chair in its fully folded, compact state.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Securing Your Child

1. Place your child in the high chair.
2. Fasten the 5-point safety harness. Ensure the shoulder straps, waist straps, and crotch strap are all buckled securely.
3. Adjust the straps to fit snugly around your child without being too tight.

#### 3.2 Adjusting the Tray

The tray offers **2 adjustable positions** to accommodate your child's growth and provide comfortable feeding space.

1. To adjust, locate the release levers or buttons on the underside or sides of the tray.
2. Press the levers/buttons and slide the tray forward or backward to the desired position.
3. Release the levers/buttons to lock the tray in place. Ensure it is securely locked before use.

### 3.3 Adjusting the Footrest

The footrest has **3 adjustable positions** to support your child's feet as they grow.

1. Locate the adjustment mechanism on the footrest.
2. Adjust the footrest to a comfortable height for your child, ensuring their feet are supported.

## Detachable & Adjustable Trays



**Figure 3.1:** The high chair tray can be adjusted to two different positions for optimal comfort and fit.

## Comprehensive Protection



Adjustable  
Safety Baffle



5-point  
Safety Harness



Non-slip Foot Pads

Figure 3.2: Key safety features include the 5-point safety harness and non-slip foot pads.

## 4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and hygiene of your high chair.

### 4.1 Cleaning the Tray

The high chair features a detachable PP tray for easy cleaning.

- To remove the tray, press the release levers/buttons and slide the tray off the armrests.
- The tray is **dishwasher safe** for thorough cleaning.
- Alternatively, wipe the tray with a damp cloth and mild soap, then rinse and dry thoroughly.

### 4.2 Cleaning the Seat Cushion

The seat cushion is removable for convenient cleaning.

- Detach the seat cushion from the high chair frame.
- The detachable linen cushion can be **washed in a washing machine** according to fabric care

instructions.

- Allow the cushion to air dry completely before reattaching it to the high chair.

#### 4.3 General Care

- Wipe down the high chair frame with a damp cloth as needed.
- Periodically check all screws, bolts, and fasteners to ensure they are tight and secure.
- Store the high chair in a clean, dry place when not in use.



**Figure 4.1:** The removable seat cushion is made of Oxford fabric and is easy to clean.

## 5. STORAGE AND PORTABILITY

The INFANS Baby High Chair is designed for compact storage and easy portability.

### 5.1 Folding the High Chair

The high chair features a one-step folding design for quick storage.

1. Ensure your child is removed from the high chair and the tray is detached.

2. Locate the folding mechanism (release buttons/levers) on the side of the chair frame.
3. Press the release buttons/levers and gently push the legs together until the chair folds into a compact, upright position.

## 5.2 Using the Travel Bag

A storage bag is included for convenient transport.

- Once folded, place the high chair into the provided travel bag.
- The compact size and light weight (10 lbs) make it easy to carry for travel or storage in small spaces.



Figure 5.1: The high chair folds compactly and fits into a travel bag for easy transport.

## 6. TROUBLESHOOTING

If you encounter any issues with your INFANS Baby High Chair, please refer to the following general advice:

- **Chair not locking securely:** Ensure all folding mechanisms are fully engaged and the legs are extended until they click into place.
- **Tray not attaching:** Verify that the tray is aligned correctly with the armrests and pushed firmly until it

clicks. Check for any obstructions.

- **Harness issues:** Ensure straps are not twisted and buckles are free of debris. Adjust straps for proper fit.

For persistent problems or concerns not addressed here, please contact INFANS customer support.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	B0GLFZCJVP
Color	Grey
Material	Stainless Steel, PU Leather, PP
Overall Dimensions (L x W x H)	22.5" x 23" x 38"
Folding Dimensions (L x W x H)	10" x 6.5" x 38"
Net Weight	10 lbs
Weight Capacity (Seat)	33 lbs (15 kg)
Weight Capacity (Tray)	11 lbs
Applicable Age	6-36 Months
Tray Positions	2 adjustable positions
Footrest Positions	3 adjustable positions

# Product Size

Suitable Age: 6–36 Months Old

Weight Capacity: 33 lbs



Figure 7.1: Product dimensions for the INFANS Baby High Chair.

## 8. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official INFANS website.

If you have any questions, require assistance, or need to report a missing or damaged part, please contact INFANS customer support:

- **Website:** Visit the INFANS Store on Amazon (for general inquiries and product information)
- Refer to your product packaging or included documentation for direct customer service contact details.