

## Mixed Material Upholstered Dining Arm Chair

# Generic Mixed Material Upholstered Dining Arm Chair User Manual

Model: Mixed Material Upholstered Dining Arm Chair

## 1. INTRODUCTION

---

Thank you for purchasing the Generic Mixed Material Upholstered Dining Arm Chair. This manual provides essential information for the safe assembly, operation, maintenance, and care of your new chair. Please read these instructions carefully before assembly and retain them for future reference.

## 2. SAFETY INFORMATION

---

- Always assemble the chair on a soft, clean surface to prevent damage to the product or your floor.
- Ensure all bolts and screws are securely tightened before using the chair. Periodically check and re-tighten all fasteners to maintain stability.
- Do not stand on the chair or use it as a step stool.
- Do not exceed the maximum weight capacity (not specified, assume standard dining chair capacity).
- Keep small parts and packaging materials away from children.
- Avoid exposing the chair to direct sunlight or extreme temperatures to prevent material degradation.

## 3. PACKAGE CONTENTS

---

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Chair Frame (1)
- Seat Cushion (1)
- Back Cushion (1)
- Armrests (2) - *Integrated with frame*
- Hardware Pack (Bolts, Washers, Allen Wrench)

## 4. SETUP AND ASSEMBLY

Follow these steps to assemble your dining arm chair. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Attach Seat to Frame:** Align the seat cushion with the chair frame. Secure it using the provided bolts and washers. Do not fully tighten yet.
3. **Attach Backrest:** Position the back cushion onto the frame. Secure it with the remaining bolts and washers.
4. **Tighten All Fasteners:** Once all components are loosely assembled, gradually tighten all bolts using the included Allen wrench. Ensure the chair is stable and level. Do not overtighten.
5. **Final Check:** Gently shake the chair to ensure stability. If any wobbling occurs, re-check all connections and tighten as necessary.



*Image 1: Assembled chair with key dimensions. This diagram illustrates the overall size and proportions of the dining arm chair, including its total height, seat height, width, and depth.*

## 5. OPERATING AND USAGE

This dining arm chair is designed for indoor use as seating. Place the chair on a flat, stable surface. The plush upholstered seat and back provide comfort for extended use. The solid rubberwood frame offers natural warmth and strength, while sleek brushed nickel arms enhance the design.



*Image 2: Dining arm chairs in a dining room setting. This image shows two chairs positioned around a dining table, demonstrating their intended use and aesthetic appeal within a home environment.*

## 6. MAINTENANCE AND CARE

### 6.1. Cleaning the Upholstery (Chenille)

- **Regular Cleaning:** Vacuum regularly using an upholstery attachment to remove dust and loose debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, use a mild fabric cleaner specifically designed for chenille, testing on an inconspicuous area first. Follow the cleaner's instructions carefully.
- **Avoid Harsh Chemicals:** Do not use bleach, abrasive cleaners, or solvents, as these can damage the fabric.

### 6.2. Cleaning the Wood Frame

- Wipe the wood frame with a soft, damp cloth. Dry immediately with another clean cloth.
- Avoid using silicone-based polishes or waxes, as they can build up over time.
- Protect the wood from excessive moisture and direct heat.

### 6.3. Cleaning the Metal Arms

- Wipe brushed nickel arms with a soft, dry cloth.
- For smudges, a slightly damp cloth can be used, followed by immediate drying.
- Avoid abrasive cleaners or pads that could scratch the finish.



*Image 3: Detail of chair legs. This close-up shows the solid rubberwood construction of the chair legs, highlighting the material and finish.*

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair is wobbly	Loose fasteners; uneven floor	Check and tighten all bolts. Ensure chair is on a level surface.

Problem	Possible Cause	Solution
Squeaking noise	Loose connections; friction between parts	Re-tighten all bolts. If noise persists, disassemble and reassemble carefully.
Fabric discoloration	Exposure to direct sunlight or harsh chemicals	Avoid prolonged direct sunlight. Use only recommended cleaning products.

## 8. SPECIFICATIONS

- **Brand:** Generic
- **Model:** Mixed Material Upholstered Dining Arm Chair
- **Color:** Warm White Chenille
- **Material:** Chenille upholstery, Solid Rubberwood frame, Brushed Nickel arms
- **Product Dimensions (D x W x H):** 22" x 23" x 30.5"
- **Seat Height:** Approximately 19.5" (from Image 1)
- **Features:** Plush upholstered seat and back, solid rubberwood frame, sleek brushed nickel arms, modern contemporary silhouette.



*Image 4: Front view of the dining arm chair. This image provides a clear, straight-on view of the chair, showcasing its overall design and the warm white chenille upholstery.*

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer's policy or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.