



[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI Boho Fluted TV Stand (Model B0GLGBFHC7) User Manual

VINGLI B0GLGBFHC7

VINGLI Boho Fluted TV Stand (Model B0GLGBFHC7) User Manual

Comprehensive instructions for assembly, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the safe and efficient assembly, operation, and maintenance of your VINGLI Boho Fluted TV Stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: Front view of the VINGLI Boho Fluted TV Stand in Oak, showcasing its design and storage capabilities with various decorative items.



Fluted Design

A perfect balance of classic charm
and modern style

Image: A close-up view highlighting the distinctive vertical fluted design on the cabinet doors, adding texture and character to the stand.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly.
- Place the TV stand on a level, stable surface to prevent tipping.
- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Keep small parts away from children during assembly.

PACKAGE CONTENTS

Before starting assembly, verify that all components listed below are present. All necessary hardware and tools for assembly are included in the package.

- TV Stand Panels (various sizes)
- Solid Wood Legs
- Adjustable Shelves
- Cabinet Doors with Fluted Design
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Assembly Tool (e.g., Allen wrench)

SETUP AND ASSEMBLY

Assembly of the VINGLI Boho Fluted TV Stand is designed to be straightforward. Follow the included step-by-step instructions and use the provided hardware. It is recommended to have a second person assist with assembly for easier handling of larger components.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent damage. Identify each part using the provided labels or diagrams.
2. **Assemble Frame:** Begin by connecting the main frame panels according to the instruction manual. Ensure all connections are secure but do not fully tighten screws until the frame is stable.
3. **Attach Legs:** Securely attach the solid wood legs to the base of the TV stand. Ensure they are firmly tightened for stability.
4. **Install Shelves:** Insert the adjustable shelves into the desired positions within the open compartments. The shelves offer 3-position adjustability for flexible storage.
5. **Attach Cabinet Doors:** Mount the fluted cabinet doors to the designated areas. Adjust hinges as needed to ensure proper alignment and smooth operation.
6. **Final Tightening:** Once all components are in place and aligned, carefully tighten all screws and fasteners. Avoid overtightening to prevent damage to the wood.



Smart Function

3-position Adjustable Shelf
for Flexible Storage

Image: Detail of the VINGLI TV Stand showcasing the 3-position adjustable shelf for flexible storage options within the cabinet compartments.

OPERATING INSTRUCTIONS

The VINGLI Boho Fluted TV Stand is designed to accommodate various media devices and decor items, supporting TVs up to 70 inches.

- **TV Placement:** Carefully place your television on the top surface of the stand. Ensure the TV's base is fully supported and centered. The stand is designed to support TVs up to 70 inches and a maximum weight of 300 lbs.
- **Storage Utilization:** Use the four open shelves for media devices such as soundbars, gaming consoles, or decorative items. The two concealed cabinets provide discreet storage for items you wish to keep out of sight.
- **Cable Management:** Utilize the built-in cable management cutouts located at the rear of the stand. Route power cords and signal cables through these openings to maintain a tidy and organized setup, preventing tangles and reducing clutter.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your VINGLI TV Stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Stability Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary to maintain structural integrity.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Stand feels wobbly:** Ensure the stand is placed on a level surface. Check and tighten all assembly screws and bolts. Verify that the solid wood legs are securely attached.
- **Cabinet doors do not align:** Adjust the hinges on the cabinet doors. Most hinges allow for minor adjustments to achieve proper alignment.
- **Missing or damaged parts:** If you find any parts missing or damaged upon unboxing, do not proceed with assembly. Contact VINGLI customer support for assistance.
- **Difficulty with assembly:** Review the assembly instructions carefully. Ensure all parts are oriented correctly. If possible, seek assistance from another person.

SPECIFICATIONS

| | |
|------------------------------------|-----------------------|
| Brand | VINGLI |
| Model | B0GLGBFHC7 |
| Color | Oak |
| Material Type | Oak |
| Size | 58" |
| Item Dimensions (L x W x H) | 58 x 15.8 x 32 inches |
| Item Weight | 77.16 Pounds |
| Maximum TV Size Supported | 70 inches |
| Weight Capacity | Up to 300 lbs |
| Assembly Required | Yes |

Product Dimensions



Image: Detailed diagram illustrating the overall dimensions and internal compartment measurements of the VINGLI Boho Fluted TV Stand.

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or contact the seller directly. VINGLI is committed to customer satisfaction.

If you require further assistance, have questions about assembly, or need to report missing/damaged parts, please contact VINGLI customer support through the retailer where the product was purchased or visit the official VINGLI store page:

[Visit the VINGLI Store on Amazon](#)

