

LAKELAND 33719

Lakeland Deluxe 6.5 Litre Stand Mixer Instruction Manual

Model: 33719

INTRODUCTION

Thank you for choosing the Lakeland Deluxe 6.5 Litre Stand Mixer. This appliance is designed to assist with a wide range of baking and cooking tasks, from kneading heavy doughs to whipping light creams. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and retain it for future reference.

This mixer features a powerful 1800W motor, planetary mixing action, and 10 speed settings, providing precise control for all your culinary needs. The robust die-cast aluminum body and full metal gear system ensure durability and reliable performance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from attachments during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter.
- Do not let the cord contact hot surfaces.
- Always ensure the mixer head is locked down before operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW

The Lakeland Deluxe Stand Mixer is designed for versatility and ease of use. Familiarize yourself with its components:

- **Motor Unit:** The main body housing the 1800W motor and control panel.
- **Tilt-Head Release Lever:** Allows the mixer head to tilt back for easy access to the bowl and attachments.
- **Attachment Hub:** Located at the front, for optional accessories (sold separately).
- **Speed Control Dial:** For selecting one of 10 speed settings.
- **Digital LED Display:** Shows speed and timer settings.
- **6.5 Litre Stainless Steel Bowl:** Large capacity bowl with a handle.
- **Dough Hook:** Teflon-coated, for kneading heavy doughs like bread and pizza.
- **Beater:** Teflon-coated with flexible edges, for mixing batters, cakes, and mashing.
- **Whisk:** Stainless steel, for aerating ingredients like egg whites and cream.
- **Splash Guard:** Prevents ingredients from splashing out of the bowl during mixing.



The Lakeland Deluxe 6.5 Litre Stand Mixer in a kitchen setting, featuring the whisk attachment and stainless steel bowl.





Top view of the mixer showing the splash guard in place over the bowl and whisk attachment.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Dispose of packaging materials responsibly.
2. **Clean:** Before first use, wash the stainless steel bowl, dough hook, beater, whisk, and splash guard in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the mixer on a clean, dry, and stable surface. Ensure there is enough space around the mixer for operation and ventilation. The non-slip base will help keep it stable during use.

4. **Attach Bowl:** Ensure the mixer head is tilted back. Place the 6.5-litre stainless steel bowl onto the base, twisting it clockwise until it locks securely into place.
5. **Attach Accessory:** Select the desired attachment (dough hook, beater, or whisk). Insert the attachment onto the shaft, pushing upwards and then rotating to lock it into the pin.
6. **Lower Head:** Press the tilt-head release lever and gently lower the mixer head until it locks into position.
7. **Connect Power:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The Lakeland Deluxe Stand Mixer offers 10 speed settings and a digital timer for precise control.

General Operation

1. Ensure the mixer is properly set up with the bowl and desired attachment.
2. Add ingredients to the mixing bowl.
3. Plug in the mixer. The digital LED display will illuminate.
4. Use the speed control dial to select a speed from 1 to 10. Start at a lower speed and gradually increase as needed to prevent splashing.
5. The digital display allows you to set a timer for mixing. Refer to the specific recipe for recommended mixing times.
6. To stop the mixer, turn the speed control dial to the '0' position.
7. Unplug the mixer from the power outlet before removing the bowl or attachments.

Using Attachments

Each attachment is designed for specific tasks:

- **Dough Hook:** Ideal for kneading heavy mixtures such as bread dough, pizza dough, and pasta dough. Use lower speeds (1-3) for kneading.





The mixer operating with the dough hook attachment, effectively kneading a batch of dough.

- **Beater:** Suitable for medium to heavy mixtures such as cake batters, cookie dough, frostings, and mashing potatoes. Use medium speeds (3-7). The flexible edges ensure thorough mixing.



The mixer in action with the beater attachment, thoroughly combining ingredients for a batter.

- **Whisk:** Best for aerating mixtures like egg whites, cream, meringues, and light batters. Use higher speeds (7-10) for optimal results.



The mixer using the whisk attachment to whip cream to a light and fluffy consistency.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Lakeland Deluxe Stand Mixer.

Cleaning

- 1. Always unplug the mixer from the power outlet before cleaning.
- 2. **Attachments and Bowl:** The dough hook, beater, whisk, and stainless steel bowl are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry immediately.
- 3. **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor unit in water or any other liquid.
- 4. **Splash Guard:** Wash the splash guard in warm, soapy water, rinse, and dry.

Storage

Store the mixer and its accessories in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked.

TROUBLESHOOTING

If you encounter any issues with your mixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outage; mixer head not locked.	Check power connection; check circuit breaker; ensure mixer head is fully lowered and locked.
Attachments not mixing properly.	Attachment not correctly installed; too much or too little mixture.	Ensure attachment is securely locked onto the shaft; adjust ingredient quantities according to recipe.
Excessive noise during operation.	Overloaded; attachment loose; foreign object in bowl.	Reduce load; check attachment for secure fit; ensure no foreign objects are in the bowl.
Mixer head not locking down.	Obstruction; release lever not fully engaged.	Check for obstructions; ensure the tilt-head release lever is fully pushed in after lowering the head.

If the problem persists after trying these solutions, please contact Lakeland customer support.

SPECIFICATIONS

Brand	LAKELAND
Model Number	33719
Power	1800 Watts
Capacity	6.5 Litres (Bowl)
Number of Speeds	10
Dimensions (D x W x H)	44.5 cm x 40.5 cm x 29.5 cm
Weight	10.4 Kilograms
Material	Die-cast Aluminum (body), Stainless Steel (bowl, whisk), Teflon-coated (dough hook, beater)

Special Features	Planetary Mixing Action, Digital Display, Tilt-Head Design, Non-slip Base
Dishwasher Safe Parts	Dough hook, Beater, Whisk, Bowl

WARRANTY AND SUPPORT

The Lakeland Deluxe 6.5 Litre Stand Mixer is covered by a generous **3-year guarantee** from the date of purchase, providing peace of mind regarding its quality and durability.

For any questions, technical assistance, or warranty claims, please contact Lakeland customer support. Keep your proof of purchase for warranty validation.

Lakeland Customer Service: Please refer to the contact information provided with your purchase or visit the official Lakeland website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question