

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [uwant](#) /
- › Uwant Y200-S Fabric Spot Cleaner User Manual

uwant Y200

Uwant Y200-S Fabric Spot Cleaner User Manual

Model: Y200

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Safety Information](#) [Product](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Uwant Y200-S Fabric Spot Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Always ensure the power cord is undamaged and plugged into a grounded outlet. Do not use with wet hands.
- **Hot Steam:** The cleaner produces 100°C steam. Avoid direct contact with skin or pets to prevent burns.
- **Water Usage:** Use only clean water in the clean water tank. Do not add cleaning solutions to the clean water tank unless specifically designed for steam cleaners and approved by Uwant.
- **Storage:** Store the appliance indoors in a dry place.
- **Children and Pets:** Keep the appliance out of reach of children and pets.
- **Maintenance:** Unplug the appliance before performing any maintenance or cleaning.

2. PRODUCT OVERVIEW

The Uwant Y200-S is a powerful fabric spot cleaner designed for deep cleaning and sanitizing various fabric surfaces using high-temperature steam and strong suction.

2.1 Included Components

- 1x Uwant Y200-S Spot Cleaner Main Unit
- 1x Hose Assembly
- 1x Steam Brush / Brush Head
- 1x Storage Clasp
- 1x Clean Water Tank
- 1x Waste Water Tank

2.2 Component Identification



Image Description: A front view of the Uwant Y200-S Fabric Spot Cleaner. The main body is grey, featuring two transparent tanks on the front: the upper tank for clean water and the lower tank for waste water. A control panel is visible on the top, and the hose connection port is on the side.



Image Description: The flexible hose assembly, showing the connection point for the main unit on one end and the steam brush head attached to the other. The brush head has bristles and a suction nozzle.

3. SETUP INSTRUCTIONS

1. **Unpack the Appliance:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attach Hose Assembly:** Insert the hose assembly connector firmly into the designated port on the main unit until it clicks into place.
3. **Attach Steam Brush Head:** Connect the steam brush head to the end of the hose assembly. Ensure it is securely fastened.
4. **Fill Clean Water Tank:**
 - Remove the clean water tank from the main unit.
 - Open the tank cap and fill with clean tap water. Do not exceed the MAX fill line.
 - Securely close the cap and reinsert the tank into the main unit.



Image Description: A hand holding the clean water tank, pouring water into it. The tank is transparent with a visible MAX fill line.

5. **Connect to Power:** Plug the power cord into a suitable grounded electrical outlet.

4. OPERATING INSTRUCTIONS

Before operating, ensure the clean water tank is filled and the waste water tank is empty and properly installed.

4.1 Powering On and Heating

1. Press the Power button on the control panel. The indicator light will illuminate.
2. The appliance will begin heating the water to 100°C. This process may take a few minutes. The indicator light may change or flash to show heating status.
3. Once the desired temperature is reached, the indicator light will become solid, indicating the cleaner is ready for use.

4.2 Cleaning Procedure (Wash & Vacuum Simultaneously)

1. **Pre-test:** Always test the cleaner on an inconspicuous area of the fabric first to ensure colorfastness and no adverse reactions.
2. **Apply Steam:** Hold the steam brush head over the stained area. Press the steam trigger on the handle to release hot steam. Move the brush head slowly over the area.
3. **Scrub (Optional):** For stubborn stains, gently scrub the area with the brush bristles while applying steam.
4. **Extract Water:** Release the steam trigger. Press the vacuum suction button on the handle to activate the suction. Move the brush head over the wet area to extract the dirty water into the waste water tank.
5. **Repeat:** Repeat steps 2-4 as necessary until the stain is removed and the area is as dry as possible.



Image Description: A person demonstrating the use of the Uwant Y200-S Fabric Spot Cleaner on a sofa cushion. The steam brush head is pressed against the fabric, and a small amount of steam is visible.

4.3 Tubing Self-Cleaning Function

After each use, it is recommended to use the self-cleaning function to prevent odors and maintain hygiene.

1. Ensure the clean water tank has sufficient water.
2. Place the steam brush head into the designated self-cleaning port on the main unit (if available) or into a sink.
3. Press and hold the self-cleaning button (refer to control panel diagram if available) for a few seconds. The appliance will flush clean water through the hose and suction it into the waste water tank.
4. Allow the cycle to complete.



Image Description: A close-up of the Uwant Y200-S main unit, showing the self-cleaning port where the steam brush head is inserted for the automatic cleaning cycle.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Uwant Y200-S.

1. **Empty and Clean Waste Water Tank:** After each use, remove the waste water tank, empty its contents, and rinse thoroughly with clean water. Allow it to air dry before reinserting.
2. **Clean Clean Water Tank:** Periodically rinse the clean water tank to prevent mineral buildup.
3. **Clean Steam Brush Head:** Remove any debris or hair from the brush bristles and suction nozzle. Rinse under running water.
4. **Wipe Down Exterior:** Use a soft, damp cloth to wipe the exterior of the main unit. Do not use harsh chemicals.
5. **Storage:** Ensure both tanks are empty and dry before storing the appliance. Wrap the power cord neatly using the auto cord retraction feature (if applicable) or the storage clasp. Store in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Appliance not plugged in; Power outlet faulty; Power button not pressed.	Check power cord connection; Test outlet with another device; Press the Power button firmly.
No Steam	Clean water tank empty; Appliance not heated sufficiently; Steam trigger not pressed.	Refill clean water tank; Wait for heating indicator light to become solid; Press steam trigger on handle.
Weak Suction	Waste water tank full; Hose or nozzle clogged; Tank not properly sealed.	Empty waste water tank; Clear any blockages from hose/nozzle; Ensure tanks are securely in place.
Water Leaking	Tanks not properly seated; Hose connection loose; Overfilled clean water tank.	Ensure tanks are securely installed; Check hose connections; Do not overfill clean water tank.

If the problem persists after attempting these solutions, please contact Uwant customer support.

7. PRODUCT SPECIFICATIONS

- **Brand:** Uwant
- **Model:** Y200-S

- **Model Number:** Y200 Steam
- **Item Weight:** 6 Kilograms
- **Colour:** Grey
- **Steam Temperature:** 100°C
- **Suction Power:** 18kPa
- **Country of Origin:** China
- **Included Components:** Hose Assembly, Spot Cleaner Main Unit, Steam Brush / Brush Head, Storage Clasp, Waste Water Tank, Clean Water Tank

8. WARRANTY AND CUSTOMER SUPPORT

Uwant products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Uwant website.

For technical assistance, troubleshooting not covered in this manual, or to order replacement parts, please contact Uwant customer support:

- **Website:** www.uwant.com (Please check for your regional website)
- **Email:** Refer to your product packaging or website for specific contact email.
- **Phone:** Refer to your product packaging or website for specific contact number.

Please have your model number (Y200-S) and purchase date ready when contacting support.