

[Manuals.plus](#) /

> [NEWBULIG](#) /

> NEWBULIG 10.5 Cups Food Processor Instruction Manual

NEWBULIG AM-LLJ15SC-2D5BK-SLD

NEWBULIG 10.5 Cups Food Processor Instruction Manual

Model: AM-LLJ15SC-2D5BK-SLD | Brand: NEWBULIG

INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and care of your NEWBULIG 10.5 Cups Food Processor, Model AM-LLJ15SC-2D5BK-SLD. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions.
- Do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils away from moving blades during operation to prevent injury and damage to the food processor. A scraper may be used but only when the food processor is not running.
- Blades are sharp. Handle with care.
- Always ensure the lid and bowl are securely locked in place before operating the appliance. The motor will not start if the safety lock system is not engaged.
- Do not attempt to defeat the safety interlock mechanism.
- Do not process hot liquids.

PRODUCT COMPONENTS

The NEWBULIG 10.5 Cups Food Processor includes the following parts:

- Motor Base (with control dial)
- 10.5-cup (2.5L) Tritan Processing Bowl
- Lid with Food Pusher/Feed Chute
- Chopping Blade
- Dough Blade
- Slicing Disc
- Shredding Disc



Overview of the NEWBULIG 10.5 Cups Food Processor and its versatile blade system.



The food processor features a 2.5-liter bowl and comes with 5 distinct blades for various tasks.

SETUP AND ASSEMBLY

Follow these steps to assemble your food processor before use:

1. Place the motor base on a clean, dry, and stable surface. Ensure the anti-slip suction feet are securely gripping the counter.
2. Place the processing bowl onto the motor base. Rotate it clockwise until it locks securely into place. You should hear a click.
3. Select the desired blade or disc for your task. Carefully place the blade/disc onto the central shaft inside the processing bowl. Blades are sharp; handle with care.
4. Place the lid onto the processing bowl. Align the lid's safety lock latch with the handle of the bowl. Rotate the lid clockwise until it locks securely. You should hear a second click. The motor will only operate when both the bowl and lid are correctly locked.
5. Ensure the food pusher is in place in the feed chute if you are using a disc for slicing or shredding.

How to Use the Blades



1 Attach & Install



2 Place Lid



3 Rotate to Lock



4 Place & Secure

Visual guide for attaching and installing blades, placing the lid, rotating to lock, and securing the assembly.



LID LOCKED



NOT LOCKED



BASE LOCKED



IMPORTANT: NO WORKING UNTIL...

- 1 LID LOCKED (Top)
- 2 BASE LOCKED (Bottom)

MUST HEAR "TWO" CLICKS

NO DOUBLE LOCK = NO POWER / NO WORKING

**BOTH top AND bottom
locks MUST be engaged**

The secure lock system requires both the lid and base to be correctly engaged for operation. Listen for two clicks.

OPERATING INSTRUCTIONS

Once assembled, you can begin processing food. The food processor features a 600W motor and 3 speed settings (0, 1, 2, P for Pulse). The operational noise level is approximately ≤65dB.

General Operation:

1. Ensure the food processor is properly assembled and locked.
2. Plug the appliance into a 120V electrical outlet.
3. Add ingredients to the processing bowl. For slicing/shredding, use the feed chute and food pusher. Do not overfill the bowl.
4. Turn the control dial to the desired speed (1 or 2) or to 'P' for pulse action.
5. After processing, turn the dial to '0' and unplug the appliance before disassembling.

Specific Functions and Recommended Settings:

- **Slicing (Slicing Disc):** For vegetables like cucumbers, carrots, potatoes. Use Speed 1 for approximately 20 seconds.
- **Shredding (Shredding Disc):** For vegetables like zucchini, carrots, cheese. Use Speed 1 for approximately 20 seconds.
- **Julienne (Fine Shredding):** For specific cuts like french fries. Use Speed 1 for approximately 20 seconds.
- **Mincing/Chopping (Chopping Blade):** For meat, onions, herbs. Use Speed 1 for approximately 30 seconds.
- **Dough Kneading (Dough Blade):** For small batches of dough. Use Speed 1 for approximately 60 seconds.

Feed → Press → Done

Wide Feed Chute, Easy Push & Process



Slicing

Speed: 1
time: 20s



Slicing

Speed: 1
time: 20s



Slicing

Speed: 1
time: 20s



Shredding

Speed: 1
time: 20s



Shredding

Speed: 1
time: 20s



Shredding

Speed: 1
time: 20s



Julienne

Speed: 1
time: 30s

Visual examples of food preparation tasks including slicing, shredding, and mincing, with suggested speed and duration.



The control dial allows selection of 3 speeds for the 600W motor.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.

1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: lid, food pusher, processing bowl, and blades/discs.
3. All removable parts are top-rack dishwasher safe. Alternatively, wash them by hand in warm, soapy water. Rinse thoroughly and dry.
4. Exercise caution when handling blades as they are very sharp.
5. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
6. Ensure all parts are completely dry before reassembling or storing.



FOOD PROCESSOR

Easy Clean, Safe to Use



Dishwasher Safe



Food-Grade Materials



All removable parts, including blades and the processing bowl, are dishwasher safe for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Lid or bowl not properly locked. Overload protection activated.	Ensure the power cord is securely plugged into a 120V outlet. Verify that both the processing bowl and lid are securely locked into position. Listen for two clicks. Unplug the unit, remove some ingredients, and wait 30 minutes before restarting.

Problem	Possible Cause	Solution
Motor runs but blades do not turn.	Blade/disc not properly installed.	Ensure the blade or disc is correctly seated on the central shaft. Turn off and unplug the unit. Carefully remove the lid and bowl, then clear any obstructions.
	Food jammed.	
Excessive vibration or noise.	Uneven load in the bowl.	Distribute ingredients evenly in the bowl. Ensure the food processor is placed on a flat, stable surface and the suction feet are engaged.
	Appliance not on a stable surface.	

SPECIFICATIONS

Brand	NEWBULIG
Model Number	AM-LLJ15SC-2D5BK-SLD
Power	600 Watts
Voltage	120 Volts
Bowl Capacity	10.5 Cups (2.5 Liters)
Number of Speeds	3 (including Pulse)
Product Dimensions (D x W x H)	8.35" x 10.04" x 15.94"
Item Weight	5.6 pounds
Material	Acrylonitrile Butadiene Styrene (ABS), Plastic, Stainless Steel
Blade Material	Stainless Steel
Special Features	Dishwasher Safe (removable parts), Removable Parts, Safety Lock

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official NEWBULIG website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GLNHLH1G>

More documents and user manuals: <https://manuals.plus/>