

QNNFBABUF-813461E0

Generic JIEKAI-512/516 Half Face Motorcycle Helmet Visor Instruction Manual

Model: QNNFBABUF-813461E0

[Introduction](#) [Safety Information](#) [Package](#)
[Contents](#) [Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of your Generic Half Face Motorcycle Helmet Visor, compatible with JIEKAI-512 and JIEKAI-516 helmet models. Please read these instructions carefully before installation and use to ensure optimal performance and safety.

2. SAFETY INFORMATION

Always prioritize safety when handling and installing helmet accessories. Failure to follow these guidelines may result in injury or damage to the product.

- Ensure the visor is securely attached to the helmet before riding.
- Do not attempt to modify the visor or helmet mounting mechanism.
- Clean the visor only with recommended materials to avoid scratching or damaging the surface.
- Replace the visor if it becomes scratched, cracked, or otherwise damaged, as visibility may be compromised.
- This visor is designed to protect against sunlight, wind, rain, and insects. It is not designed to withstand direct impacts beyond its intended use.

3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon opening the package.

- 1 x Generic Half Face Motorcycle Helmet Visor (Clear)

4. INSTALLATION INSTRUCTIONS

Follow these steps to correctly install the visor on your JIEKAI-512 or JIEKAI-516 half face motorcycle helmet.



Image showing the clear helmet visor, ready for installation on a compatible JIEKAI half face helmet.

1. **Prepare Your Helmet:** Ensure your JIEKAI-512 or JIEKAI-516 helmet is clean and free of debris around the visor mounting points. If an old visor is present, carefully remove it according to your helmet's specific instructions.
2. **Identify Mounting Points:** Locate the visor attachment mechanisms on both sides of your helmet. These typically consist of a pivot point and a locking tab or screw.
3. **Align the Visor:** Hold the new visor in position, aligning the holes or slots on the visor with the mounting points on the helmet.
4. **Attach One Side:** Gently press or slide one side of the visor onto its corresponding helmet mounting point until it clicks or locks into place. Ensure it is seated correctly.
5. **Attach the Second Side:** Repeat the process for the other side of the visor. Apply even pressure to avoid bending or damaging the visor.
6. **Test Security:** Once both sides are attached, gently move the visor up and down to ensure it pivots smoothly and locks securely in both the open and closed positions. Check for any looseness or improper fit. If the visor feels loose, re-check the attachment points.

5. OPERATION

The visor is designed for simple operation to adapt to changing riding conditions.

- **Raising the Visor:** Use your hand to gently push the bottom edge of the visor upwards until it reaches the desired open position. It should click into place at various detents.
- **Lowering the Visor:** Pull the bottom edge of the visor downwards until it fully closes, providing protection for your face.
- **Visibility:** The clear visor offers unobstructed vision. Ensure it is clean before each ride for maximum clarity.

6. MAINTENANCE AND CARE

Proper care will extend the life of your visor and maintain optimal visibility.

- **Cleaning:** Use a soft, clean cloth and mild soap with lukewarm water to clean the visor. Avoid abrasive cleaners, paper towels, or harsh chemicals, as these can scratch or damage the surface.
- **Drying:** Air dry the visor or gently pat it dry with a clean, soft microfiber cloth.
- **Storage:** When not in use, store the helmet in a protective bag or case to prevent scratches to the visor.
- **Inspection:** Regularly inspect the visor for scratches, cracks, or other damage. Replace the visor if its integrity or clarity is compromised.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

| Issue | Possible Cause | Solution |
|---------------------------------|--|--|
| Visor does not fit or is loose. | Incorrect installation; incompatible helmet model. | Ensure the visor is correctly aligned and fully engaged with the helmet's mounting points. Verify your helmet is a JIEKAI-512 or JIEKAI-516 model. |
| Visor is scratched or unclear. | Improper cleaning; impact damage. | Clean with a soft cloth and mild soap. If scratches are deep or visibility is impaired, replace the visor. |
| Visor does not stay up/down. | Worn pivot mechanism; improper installation. | Check if the visor is fully seated on the pivot points. If the mechanism is worn, consider replacing the visor or consulting a helmet specialist. |

8. SPECIFICATIONS

- **Model Compatibility:** JIEKAI-512, JIEKAI-516 Half Face Motorcycle Helmets
- **Material:** ABS
- **Color:** Clear
- **Item Weight:** Approximately 1.76 ounces (0.05 kg)
- **Package Dimensions:** 0.39 x 0.39 x 0.39 inches
- **Manufacturer:** Generic
- **Item Model Number:** QNNFBABUF-813461E0

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Generic Half Face Motorcycle Helmet Visor, please contact the retailer or manufacturer directly. Please have your model number (QNNFBABUF-813461E0) available when seeking assistance.