

[Manuals.plus](#) /

› [LG](#) /

› LG 8 Kg 5 Star Fully Automatic Top Load Washing Machine (T80KMOB1Z) User Manual

LG T80KMOB1Z

LG 8 Kg 5 Star Fully Automatic Top Load Washing Machine (T80KMOB1Z) User Manual

Model: T80KMOB1Z

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new LG 8 Kg 5 Star Fully Automatic Top Load Washing Machine, model T80KMOB1Z. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your washing machine.

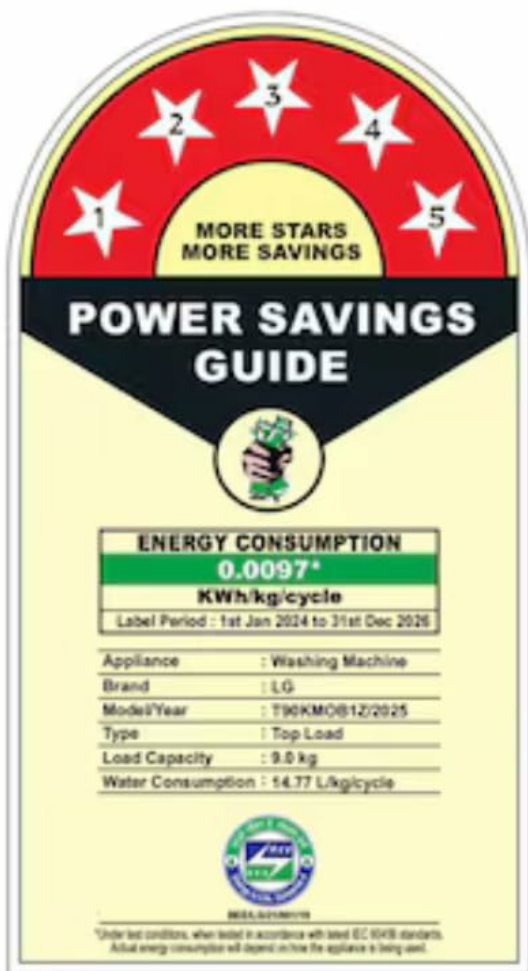


Figure 1: Front view of the LG T80KMOB1Z Washing Machine with the lid closed.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-

maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

- Always disconnect the appliance from the power supply before attempting any service.

3. PRODUCT OVERVIEW

Key Features

- **8 Kg Capacity:** Ideal for medium to large families, suitable for daily and heavy laundry loads.
- **ProShield Motor:** Long-lasting and durable motor designed for reliable performance.
- **Hard Water Wash Technology:** Ensures effective washing even in hard water conditions.
- **Turbo Spin Function:** Powerful spinning helps reduce moisture and drying time.
- **Low Pressure Fill:** Operates efficiently even with low water pressure.
- **Manual Fill Option:** Allows manual water filling for added flexibility.
- **Eco Wash Mode:** Reduces energy consumption while maintaining wash performance.
- **Fully Automatic Top Load Design:** Easy to operate with one-touch convenience.
- **5 Star Energy Rating:** Energy efficient operation for lower electricity bills.
- **Premium Onyx Black Finish:** Stylish and modern design.

Components Included

The following components are included with your washing machine:

- 1U Top Load Fully-Automatic Washing Machine
- Cold Water Inlet Hose
- Cover
- Drain Hose
- Power Cord



Figure 2: Top view of the washing machine with the lid open, showing the drum.



Figure 3: Close-up view of the stainless steel drum interior.

4. SETUP

Unpacking

Carefully remove all packaging materials. Ensure all included components are present. Keep packaging materials away from children.

Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. The product dimensions are 58D x 54W x 90.5H Centimeters.



Figure 4: Washing machine dimensions (Depth, Width, Height).

Water Connection

Connect the cold water inlet hose to the water tap and the inlet valve on the back of the washing machine. Ensure connections are tight to prevent leaks. The minimum inlet pressure required is 50 Kilopascal.

Drain Hose Connection

Securely attach the drain hose to a suitable drain pipe or sink, ensuring it is positioned to allow proper drainage without kinking.

Power Connection

Plug the power cord into a grounded electrical outlet. The washing machine operates on 230 Volts.



Figure 5: Rear view of the washing machine, indicating water inlet and drain hose connections.

5. OPERATING YOUR WASHING MACHINE

Control Panel Overview

The control panel features push buttons for various functions and cycle selection.



Figure 6: Detailed view of the control panel with various program options and buttons.

Loading Laundry

Open the top lid and load clothes loosely into the drum. Do not overload the machine to ensure effective washing and rinsing. The maximum capacity is 8 kg.

Adding Detergent and Softener

Add appropriate amounts of detergent, fabric softener, or bleach to their designated compartments in the dispenser. The machine supports liquid detergent.

Selecting a Wash Cycle

Turn the program selector or press the cycle button to choose the desired wash cycle. Available cycle options include:

- Delicates
- Heavy Wash
- Normal

- Quick Wash
- Quick Wash Rinse+Spin
- Eco Wash
- Hard Water Wash

Starting a Wash

Press the Start/Pause button to begin the selected wash cycle. The machine will automatically fill with water, wash, rinse, and spin.

Special Functions

Utilize special features like Turbo Spin for enhanced drying or Smart Diagnosis for troubleshooting.

6. CARE AND MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

Cleaning the Exterior

Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

Cleaning the Drum

Periodically run a 'Tub Clean' cycle (if available) or a hot wash with a washing machine cleaner to remove detergent residue and odors from the stainless steel drum.

Cleaning the Lint Filter

Locate and clean the lint filter regularly to prevent lint buildup and ensure efficient drainage.

Cleaning the Water Inlet Filter

If water supply is restricted, check and clean the water inlet filter located at the connection point of the inlet hose to the machine.

Winterizing

In cold climates, if the machine is exposed to freezing temperatures, drain all water from the hoses and pump to prevent damage.

7. TROUBLESHOOTING GUIDE

Refer to this table for common issues and their solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Power outage.	Check power connection; Ensure lid is fully closed; Check household circuit breaker.
No water fill	Water tap off; Water inlet hose kinked; Water inlet filter clogged.	Open water tap; Straighten hose; Clean inlet filter.
Machine vibrates excessively	Machine not level; Laundry unevenly distributed; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure shipping bolts are removed (if applicable).

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked or clogged; Drain pump filter clogged.	Straighten or clear drain hose; Clean drain pump filter.
Clothes not clean	Overloading; Insufficient detergent; Incorrect wash cycle.	Reduce load size; Use recommended detergent amount; Select appropriate wash cycle.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	LG WM TL T80KMOB1Z
Product Dimensions (D x W x H)	58D x 54W x 90.5H Centimeters
Capacity	8 kg
Item Weight	31.5 Kilograms
Brand	LG
Access Location	Top Load
Operation Mode	Fully Automatic
Voltage	230 Volts
Installation Type	Freestanding
Controls Type	Push Button
Laundry Appliance Drum Material	Stainless Steel
Material Type	Stainless Steel Drum, Plastic Body
Colour	Onyx Black
Special Features	Auto Restart, Hard Water Wash, Smart Diagnosis, Smart Inverter Motor, TurboDrum Technology
Cycle Options	Delicates, Heavy Wash, Normal, Quick Wash, Quick Wash Rinse+Spin
Washer Dispenser Options	Bleach, Detergent, Fabric Softener, Liquid Detergent
Inlet Minimum Pressure	50 Kilopascal

9. WARRANTY AND CUSTOMER SUPPORT

Warranty Information

Your LG Washing Machine comes with a **2 Years Comprehensive Warranty** and a **10 Years Warranty on the Motor** (Terms & Conditions Apply). Please retain your purchase invoice for warranty claims.

Customer Support

For any queries, assistance, or to schedule service, please contact LG Customer Service:

- **Telephone:** 08069379999
- **WhatsApp:** 9711709999
- **Email:** serviceindia@lge.com

When contacting support, please provide your product's model name (T80KMOB1Z) and the seller's details as mentioned on your invoice. The service center will assist you in scheduling a convenient slot for service.

Manufacturer Address: LG Electronics India Limited, 51, Udyog Vihar, Gr. Noida (U.P) - 201306

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0GLZZBYQQ>

More documents and user manuals: <https://manuals.plus/>