

[Manuals.plus](#) /

› [GOLABS](#) /

› GOLABS BT1 Pop-Up Beach Tent User Manual

GOLABS BT1

GOLABS BT1 Pop-Up Beach Tent User Manual

MODEL: BT1

Introduction

Thank you for choosing the GOLABS BT1 Pop-Up Beach Tent. This manual provides essential information for the safe and effective setup, operation, and maintenance of your beach tent. Designed for quick assembly and portability, this tent offers UPF 50+ sun protection and comfortable space for up to 3 people, making it ideal for beach trips, camping, and other outdoor activities.



Image: The GOLABS BT1 Pop-Up Beach Tent, showcasing its design and size on a sunny beach.

Safety Information

- Always use sandbags to anchor the tent in windy conditions. Failure to do so may result in the tent blowing away or causing injury.
- Avoid prolonged exposure to direct sunlight, even within the tent. While the tent offers UPF 50+ protection, excessive sun exposure can still occur.
- Keep the tent away from open flames, heaters, and other heat sources to prevent fire hazards.
- Ensure proper ventilation, especially when using the tent in enclosed spaces or during hot weather.
- Do not use the tent as a permanent shelter. It is designed for temporary outdoor use.


Setup Instructions

The GOLABS BT1 Pop-Up Beach Tent features a pre-attached pole system for quick and easy setup. Follow these steps

for assembly:

1. **Unpack the Tent:** Remove the tent from its carry bag and lay it flat on the ground.
2. **Lift and Extend:** Grasp the center hub of the tent and gently lift it upwards. The pre-attached poles will begin to extend automatically.
3. **Lock into Place:** Continue lifting until the tent structure fully expands and locks into its open position. You may hear a click as the mechanism engages.
4. **Secure the Corners:** Pull out each corner of the tent to fully extend its footprint.
5. **Fill Sandbags:** For stability, especially in windy conditions, fill the 6 integrated sandbags located around the base of the tent with sand or small rocks. This anchors the tent firmly.
6. **Adjust Ventilation:** Open or close the mesh windows and privacy curtains as desired.

Pop up in Seconds

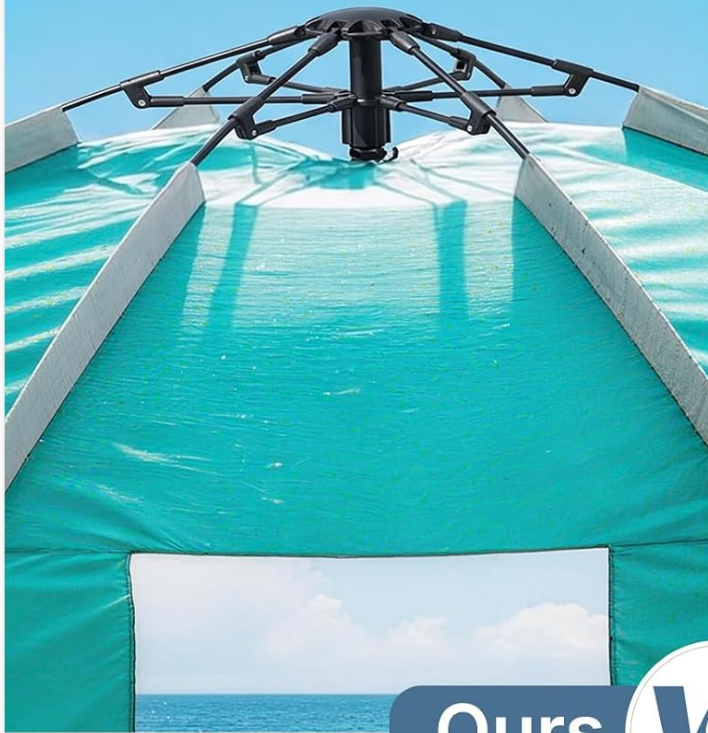

Ours

VS

Others

- Pre-Attached for Easy Setup
- **13mm** Fiberglass Frame for Stability
- Wind-Resistant Design

- Traditional Pole Threading
- 8mm Fiberglass Frame

Image: Visual comparison highlighting the quick pop-up setup of the GOLABS tent.

6 Sandbags Keep the Beach Tent Secure Even in Strong Wind



Image: The GOLABS beach tent demonstrating the use of six sandbags for enhanced stability against wind.

Setup Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the GOLABS beach tent setup and general use, highlighting its ease of assembly.

Operating Instructions

The GOLABS BT1 tent is designed for comfort and versatility. Here's how to utilize its features:

- **UV Protection:** The silver-coated 210T taffeta fabric provides UPF 50+ sun protection, blocking 98% of harmful UV rays. Position the tent to maximize shade throughout the day.
- **Ventilation and Views:** The tent features 3-side mesh windows for optimal airflow and clear views. Roll up the privacy curtains to enjoy the breeze and scenery.
- **Privacy On Demand:** For privacy, such as changing clothes, simply close the zippered door and roll down the privacy curtains on the mesh windows.

- **Detachable Floor Mat:** The tent includes a detachable floor mat with quick-release buckles. Use it inside the tent for a clean surface or detach it for use as a standalone ground sheet.
- **Storage and Hooks:** Utilize the internal storage pockets for small items like phones or keys. The sturdy gear hooks (capacity: 3kg) can hold lightweight accessories.

Block 98% Of Harmful UV

With UPF 50+ & Silver-Lined Fabric



Image: A family enjoying the shade provided by the GOLABS tent, highlighting its UPF 50+ sun protection.

3-Side Mesh Ventilation

Clear Views

Durable 210T Fabric

Airflow



Image: The tent's 3-side mesh ventilation system providing clear views and airflow for occupants.

Detachable Floor Mat with Quick-release Buckles

Designed for kids to Enjoy Sand Play in the Shade

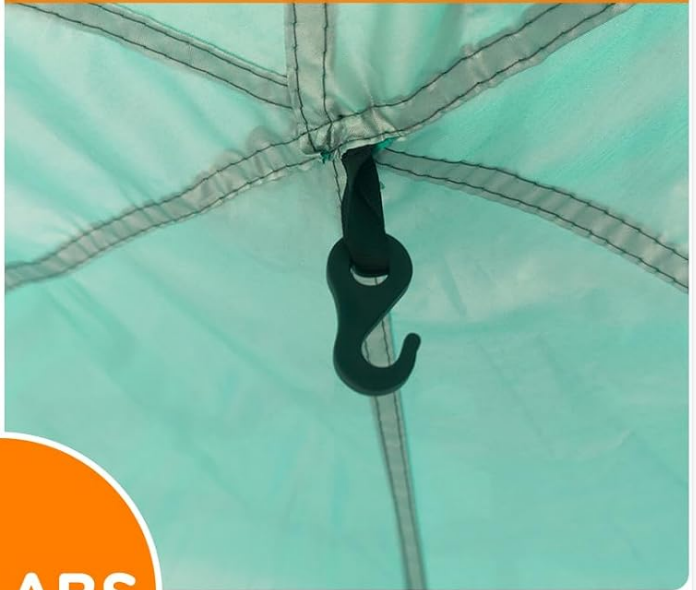


Image: The detachable floor mat in use, showing its versatility for play inside or as a standalone ground sheet.

Storage Pocket



Hook



 GOLABS



High Privacy



Lightweight and Easy Carry

Image: Details of the tent's features including storage pockets, gear hooks, privacy configuration, and its compact, portable form.

Maintenance

- **Cleaning:** Clean the tent with a soft cloth and mild soap. Do not use harsh detergents or abrasive cleaners. Rinse thoroughly with water.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odor. Air dry in a shaded area.
- **Storage:** Fold the tent according to the instructions (reverse of setup) and store it in its original carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Pole Care:** Inspect fiberglass poles for any damage or splinters before and after each use.

Troubleshooting

Tent is not stable in windy conditions:

Ensure all 6 sandbags are fully filled with sand or heavy material. If on grass or hard ground, use tent pegs (not

included) to secure the tent corners. Position the tent with its back facing the strongest wind direction if possible.

Difficulty folding the tent back into the bag:

Folding pop-up tents can sometimes require practice. Ensure all poles are fully collapsed and the fabric is neatly gathered before attempting to roll it tightly. Refer to the video demonstration for visual guidance on folding.

Poles appear bent or damaged:

Avoid excessive force during setup or takedown. If a pole is damaged, contact GOLABS customer support for replacement parts or assistance.

Specifications

Brand	GOLABS
Model Number	BT1
Material	210T Oxford fabric
Frame Material	Fiberglass
Product Dimensions (L x W x H)	83"L x 53"W x 58"H (Exterior: 87.8" L x 57.5" W x 60" H)
Floor Area	4400 square inches
Max Ceiling Height	60 inches
Capacity	3 Person
UV Protection	UPF 50+
Water Resistance Level	Moisture Resistant
Item Weight	7 lbs
UPC	810172573543

3/4 Person

Instant Beach Tent



Image: Detailed dimensions of the GOLABS BT1 Pop-Up Beach Tent.

Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please contact GOLABS customer service. Details regarding specific warranty periods and terms are typically provided with your purchase documentation or can be found on the official GOLABS website.

You can also visit the official GOLABS store on Amazon for more information and to explore other products:

[Visit the GOLABS Store](#)

© 2026 GOLABS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GMH55DKC>

More documents and user manuals: **<https://manuals.plus/>**