

[Manuals.plus](#) /

› [EUHOMY](#) /

› Euhomy 4-in-1 Water Dispenser with Ice Maker User Manual

EUHOMY WC008-X2BS-USZX-01

Euhomy 4-in-1 Water Dispenser with Ice Maker User Manual

Model: WC008-X2BS-USZX-01

INTRODUCTION

Thank you for choosing the Euhomy 4-in-1 Water Dispenser with Ice Maker. This appliance provides hot, cold, and room-temperature water, along with the convenience of an integrated ice maker. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.

Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- This appliance must be properly grounded.
- Do not operate the dispenser with a damaged cord or plug.
- Keep the appliance away from direct sunlight and heat sources.
- Ensure proper ventilation around the unit.
- **Child Safety Lock:** The hot water outlet is equipped with a child safety lock. Always engage this lock to prevent accidental scalding.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the dispenser before cleaning or performing any maintenance.
- Use only potable water in the dispenser.

PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	WC008-X2BS-USZX-01
Brand	EUHOMY
Color	Black & Silver
Material	Plastic, Stainless Steel
Dimensions (D x W x H)	14.76" x 12.2" x 35.63"
Weight	35.5 Pounds
Water Bottle Capacity	3 & 5 Gallons
Hot Water Temperature	185–203°F (85–95°C)
Cold Water Temperature	≤47°F (≤8°C)
Ice Production Capacity	Up to 33 lbs per 24 hours
Ice Production Cycle	9 bullet ice cubes in 7 minutes
Wattage	120 watts
Power Source	Corded Electric
Installation Type	Floor Mounted, Bottom-Loading

SETUP INSTRUCTIONS

- Unpacking:** Carefully remove the dispenser from its packaging. Inspect for any damage.
- Placement:** Place the dispenser on a flat, stable surface in a cool, dry area, away from direct sunlight and heat sources. Ensure there is at least 4 inches of clearance from walls for proper ventilation.
- Initial Cleaning:** Before first use, clean the water reservoir and ice basket according to the "Cleaning and Maintenance" section.
- Install Water Bottle:**
 - Open the bottom cabinet door.
 - Remove the cap from a 3 or 5-gallon water bottle.
 - Insert the probe into the water bottle opening.
 - Slide the water bottle into the cabinet and close the door.



Image: Euhomy 4-in-1 Water Dispenser with a water bottle being loaded into the bottom compartment.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet.
6. **Priming the System:** Before turning on heating or cooling functions, dispense water from both the hot and cold spouts until water flows steadily. This removes air from the system.

OPERATING INSTRUCTIONS

Control Panel and Indicators

The dispenser features clear light indicators for various functions:

- **White Light:** Indicates the unit is powered on.
- **Green Light:** Indicates heating, ice-making, or cooling is complete.
- **Red Light:** Indicates a low water alert, signaling the need to replace the water bottle.

Dispensing Water

- **Cold Water:** Place a cup under the cold water spout. Press the cold water button/lever. The water will dispense at

approximately $\leq 47^{\circ}\text{F}$.

- **Room Temperature Water:** Place a cup under the room temperature water spout. Press the room temperature water button/lever.
- **Hot Water:** Place a cup under the hot water spout. To dispense hot water ($185\text{--}203^{\circ}\text{F}$), first push the child safety lock button, then press the hot water button/lever. Release the child safety lock after dispensing.

Ice Making Function

The integrated ice maker produces 9 bullet-shaped ice cubes in approximately 7 minutes, with a daily capacity of up to 33 lbs.

1. Ensure the water bottle is properly installed and the unit is powered on.
2. Press the "Ice" button (if available, otherwise ice making is automatic).
3. The unit will begin the ice-making cycle. The green light may indicate completion.
4. When the ice basket is full, the unit will pause ice production.
5. **Important:** The ice maker does not have an insulation function. Transfer ice to a freezer promptly once the basket is full to prevent melting.



Image: Close-up of the ice dispensing area showing bullet-shaped ice cubes in the removable basket.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your water dispenser.

1. **Unplug the Unit:** Always unplug the dispenser from the power outlet before cleaning.
2. **Drain Water:** Drain all water from the hot and cold tanks using the drain plugs located at the back of the unit.
3. **Clean Drip Tray and Ice Basket:**
 - The water tray and ice basket are detachable.
 - Remove them and wash with mild soap and warm water.
 - Rinse thoroughly and dry completely before reinserting.



Image: Detachable drip tray and ice basket removed from the dispenser for cleaning.

4. **Clean Exterior:** Wipe the exterior surfaces of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or solvents.
5. **Sanitize Water Tanks (Periodically):**
 - Prepare a sanitizing solution (e.g., a mixture of water and food-grade bleach, following manufacturer's instructions for dilution).
 - Pour the solution into the water reservoir.
 - Let it sit for 5-10 minutes, then drain completely.
 - Rinse the tanks thoroughly with clean water several times to remove any residual solution.
6. **Condenser Cleaning:** Periodically clean the condenser coils at the back of the unit with a soft brush or vacuum cleaner to ensure efficient operation.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
No water dispensing.	Water bottle empty or not properly installed. Air lock in the system.	Replace water bottle. Ensure probe is fully inserted. Prime the system by dispensing water until it flows steadily.
Water not hot/cold enough.	Heating/cooling switch off. Unit recently plugged in. Poor ventilation.	Ensure heating/cooling switches are on. Allow 15-30 minutes for water to reach desired temperature. Check for adequate clearance around the unit.
Ice maker not producing ice.	No water in reservoir. Ice basket full. Ambient temperature too high.	Check water bottle. Empty ice basket. Ensure unit is in a suitable environment.
Red light (low water) is on.	Water bottle is empty.	Replace the water bottle.
Water leakage.	Water bottle cap not sealed properly. Drain plugs loose.	Check water bottle for cracks or improper seal. Tighten drain plugs.

If the problem persists after attempting these solutions, please contact Euhomy Customer Support.

WARRANTY AND CUSTOMER SUPPORT

Your Euhomy 4-in-1 Water Dispenser with Ice Maker is backed by a **1-year warranty** from the date of purchase. For warranty claims, technical assistance, or any questions regarding your product, please contact Euhomy Customer Support. Please have your model number (WC008-X2BS-USZX-01) and proof of purchase ready when contacting support.

Contact Information: Please refer to the contact details provided on the Euhomy official website or your product registration card.

Note: The warranty does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

