

PYY PYYDZJ03BKUS-65

PYY 2-Head Bubble Waffle Maker Instruction Manual

Model: PYYDZJ03BKUS-65

[Safety](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to ensure safe operation and prevent damage.

- **Electrical Safety:** Ensure the power supply matches the voltage requirements (110V). Do not operate with a damaged cord or plug. Keep the appliance away from water or other liquids to prevent electric shock.
- **Heat Safety:** The waffle plates become extremely hot during operation. Always use the anti-scald wooden handles for rotation. Avoid touching hot surfaces directly. Allow the appliance to cool completely before cleaning or storing.
- **Placement:** Place the waffle maker on a stable, heat-resistant, and dry surface. Ensure adequate ventilation around the appliance. Do not place near flammable materials.
- **Supervision:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- **Cleaning:** Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning. Do not immerse the main unit in water.
- **Intended Use:** This appliance is designed for commercial use in preparing bubble waffles. Do not use for any other purpose.

2. PRODUCT OVERVIEW

The PYY 2-Head Bubble Waffle Maker is a high-performance commercial appliance designed for efficient production of Hong Kong style egg waffles. It features two independent heating units, non-stick plates, and precise temperature and timer controls.

EVEN HEATING

Say Goodbye to Uneven Cooking



HEAT SMART
SAVE POWER

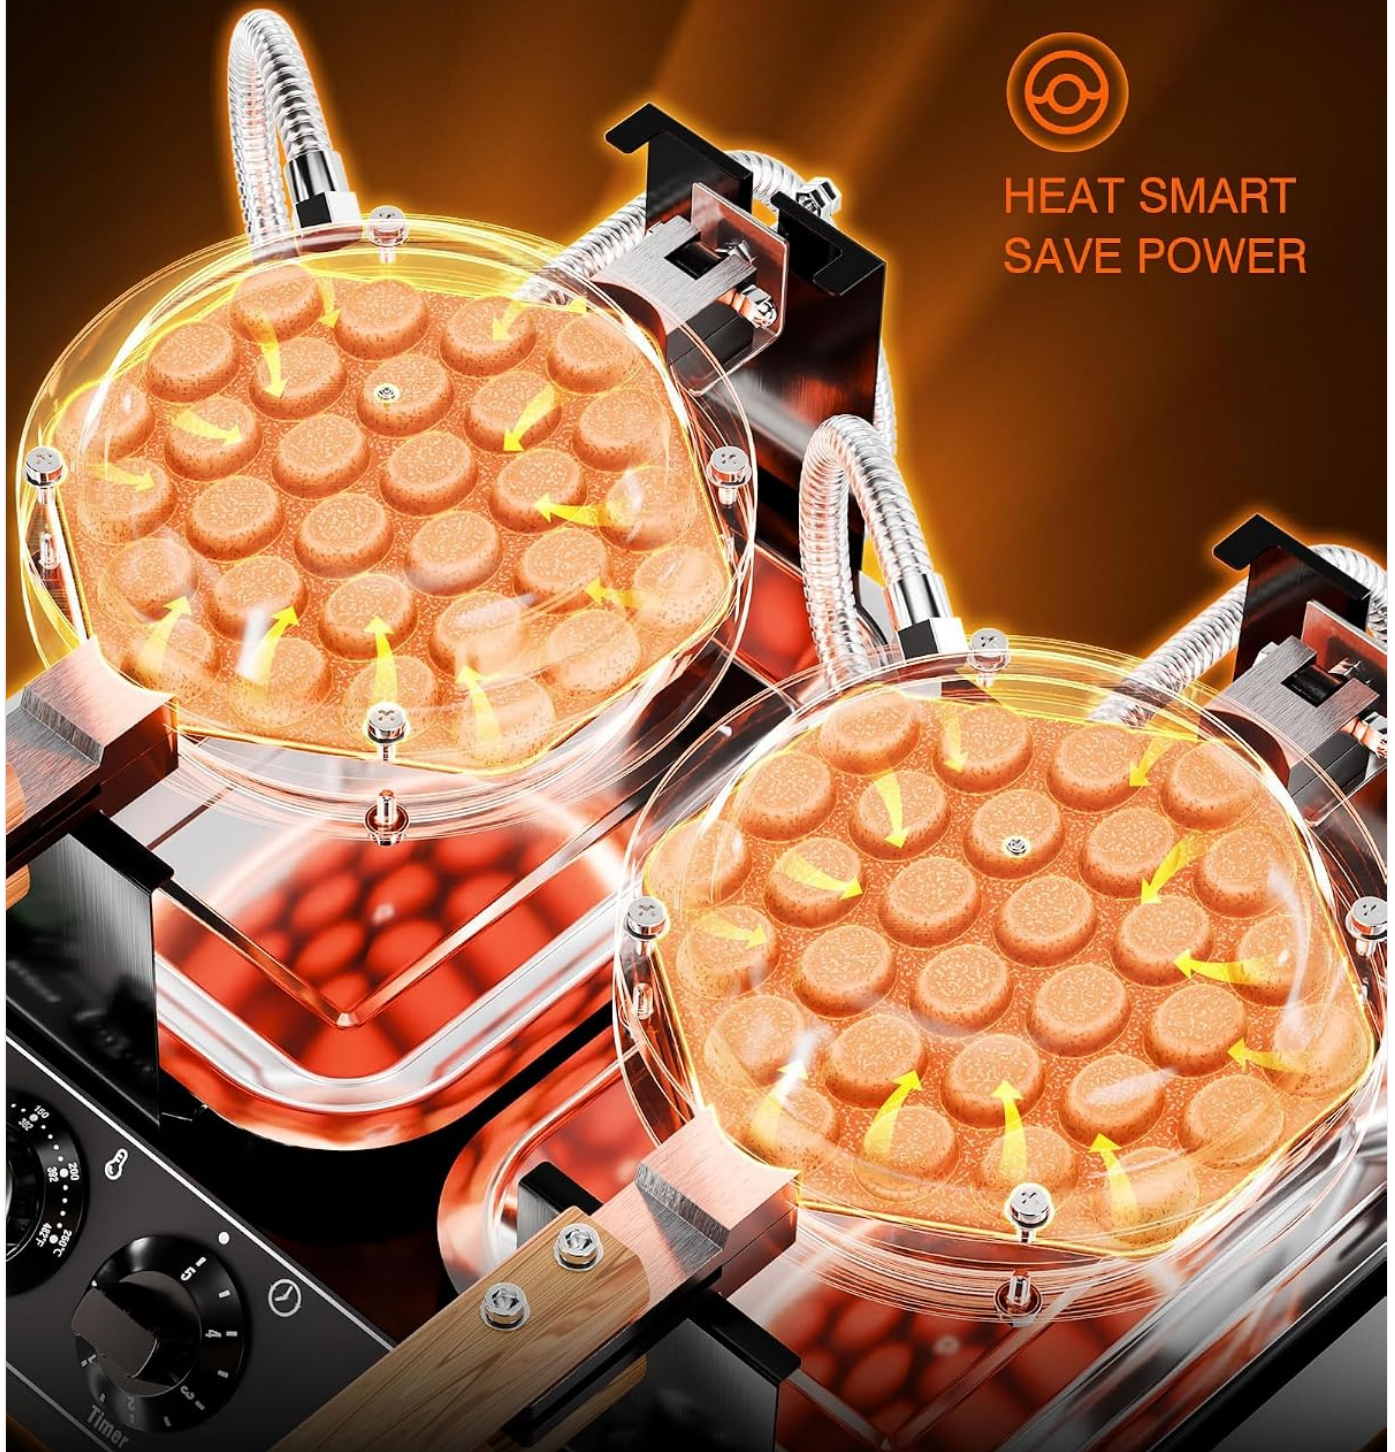


Image: The PYY 2-Head Bubble Waffle Maker, showcasing its dual waffle plates and robust design.

Key Features:

- **Dual Heating Heads:** Allows for simultaneous preparation of two bubble waffles, increasing efficiency.
- **Non-Stick Coating:** High-quality non-stick plates prevent dough from sticking and ensure easy release and cleaning.
- **180° Rotation:** The rotary design ensures even heating on both sides, resulting in perfectly crispy outside and soft

inside waffles.

- **Precise Temperature Control:** Adjustable temperature range from 50°C to 250°C (122°F to 482°F) for optimal cooking.
- **Integrated Timer:** A 0-5 minute timer allows for consistent cooking results.
- **Durable Construction:** Stainless steel shell with heat dissipation ports for extended lifespan.
- **Anti-Scald Handles:** Ergonomically designed wooden handles for safe operation.



Image: Examples of various bubble waffle creations that can be made with the machine, demonstrating its versatility.

3. SETUP

Follow these steps to set up your PYY 2-Head Bubble Waffle Maker before first use.

1. **Unpacking:** Carefully remove the waffle maker and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Inspection:** Check the appliance for any signs of damage during transit. If damaged, do not operate and contact customer support.
3. **Placement:** Place the waffle maker on a clean, dry, stable, and heat-resistant countertop or surface. Ensure there is sufficient space around the appliance for ventilation and safe operation.
4. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Clean the non-stick waffle plates with a soft, damp cloth or sponge. Do not use abrasive cleaners or immerse the unit in water.
5. **Power Connection:** Ensure the power switch is in the 'OFF' position. Plug the power cord into a grounded 110V electrical outlet.

4. OPERATING INSTRUCTIONS

This section details the steps for operating your bubble waffle maker.

PRECISE TEMP & TIMER CONTROL

Master the Heat & Timing



SET TEMPERATURE
122°F → 482°F
(50°C) (250°C)



TIMING FUNCTION
0mins → 5mins



Image: The control panel with temperature and timer settings for precise operation.

1. Preheating:

- Ensure the appliance is plugged in.
- Turn on the power switch for the desired waffle head(s). The 'POWER' indicator light will illuminate.
- Set the desired temperature using the **Temperature Control Knob**. The recommended temperature for bubble waffles is typically between 180°C and 220°C (356°F - 428°F).

- Allow the machine to preheat. The 'HEATING' indicator light will turn on during heating and cycle off once the set temperature is reached. This usually takes 5-10 minutes.

2. **Preparing Waffles:**

- Once preheated, open the waffle plates using the wooden handle.
- Pour the bubble waffle batter evenly onto the lower plate, ensuring it covers the entire surface without overflowing.
- Close the waffle plates gently.
- Immediately rotate the waffle plate 180 degrees using the wooden handle. This helps distribute the batter evenly and ensures balanced heating.
- Set the **Timer Knob** to the desired cooking time, typically 3-5 minutes, depending on your recipe and desired crispiness.

3. **Cooking Process:**

- The 'HEATING' indicator light will cycle on and off during cooking to maintain the set temperature.
- When the timer reaches zero, an audible alert will sound.

4. **Removing Waffles:**

- Open the waffle plates.
- Carefully remove the cooked bubble waffle using a non-metallic utensil (e.g., silicone spatula or wooden tongs) to avoid damaging the non-stick coating.
- Repeat the process for additional waffles.

5. **After Use:**

- Turn off the power switch(es) for both waffle heads.
- Unplug the appliance from the power outlet.
- Allow the waffle maker to cool completely before cleaning.



NONSTICK COATING

Quick Clean, No Sticky Mess

Image: Illustration of the even heating technology, ensuring consistent cooking results.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your PYY 2-Head Bubble Waffle Maker.

1. **Cool Down:** Always ensure the appliance is unplugged and has cooled down completely before attempting any

cleaning.

2. **Waffle Plates:**

- Wipe the non-stick plates with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean, damp cloth.
- Do not use abrasive pads, metal utensils, or harsh chemicals, as these can damage the non-stick coating.
- Ensure the plates are completely dry before closing the unit or storing.

3. **Exterior:** Wipe the stainless steel exterior with a soft, damp cloth. For a polished finish, use a stainless steel cleaner.

4. **Crumb Trays:** If included, remove and empty the crumb trays. Wash them with warm, soapy water, rinse, and dry thoroughly before reinserting.

5. **Storage:** Store the waffle maker in a clean, dry place.

PRODUCT DIMENSION

L:15.7x W:13x H:10 inch
(Collapsed Size)



Image: Demonstrating the ease of cleaning the non-stick waffle plates with a soft sponge.

6. TROUBLESHOOTING

If you encounter issues with your waffle maker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power switch off; No power from outlet.	Ensure power cord is securely plugged in. Turn on the power switch. Check the circuit breaker or try a different outlet.
Waffles are sticking to the plates.	Plates not properly seasoned (first use); Insufficient batter; Damaged non-stick coating.	Ensure plates are clean. For first use, lightly brush with cooking oil. Ensure enough batter is used. Avoid using metal utensils.
Waffles are not cooking evenly.	Insufficient preheating; Uneven batter distribution; Incorrect temperature.	Allow sufficient preheating time until the 'HEATING' light cycles off. Ensure batter is spread evenly. Rotate the waffle plate 180 degrees immediately after closing. Adjust temperature as needed.
Waffles are too soft or too crispy.	Incorrect cooking time or temperature.	Adjust the timer and/or temperature settings according to your recipe and desired texture.

If the problem persists after trying these solutions, please contact customer support.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	PYYDZJ03BKUS-65
Brand	PYY
Power	3100 Watts
Voltage	110 Volts
Temperature Range	50°C - 250°C (122°F - 482°F)
Timer Range	0 - 5 minutes
Material	Stainless Steel (housing), Non-stick (plates)
Product Dimensions (Collapsed)	15.7" (L) x 13" (W) x 10" (H)
Item Weight	11.6 kg
Special Features	Keep Warm Setting, Non-Stick Coating, Scratch Resistant, Temperature Control, 180° Rotate
UPC	740145538081

BUILT FOR BUSINESS



Dessert Shops



Cafés



Food Trucks



Restaurants

Image: Detailed product dimensions for planning counter space and storage.

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical assistance, or any questions regarding your PYY 2-Head Bubble Waffle Maker, please contact the manufacturer or your retailer directly. Please have your model number (PYYDZJ03BKUS-65) and purchase

information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question