

FLEXISPOT Souffle

FLEXISPOT Souffle-Pro Power Swivel Rocker Recliner Chair Instruction Manual

Model: Souffle

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembling or operating your FLEXISPOT Souffle-Pro Power Swivel Rocker Recliner Chair. Failure to follow these instructions may result in injury or damage to the product.

- Always read and follow the instructions provided with the chair.
- Do not use the chair if the power cord is damaged or if the chair has been dropped or damaged.
- Keep the chair away from heat sources and liquids.
- Do not leave the chair unattended while in use, especially with the massage or heat functions activated.
- Always ensure the chair is fully assembled and stable before use.
- The chair has a maximum weight capacity of **250 lbs (113 kg)**.

2. PRODUCT OVERVIEW

The FLEXISPOT Souffle-Pro is a versatile power swivel rocker recliner designed for comfort and functionality. It features a smooth swivel, gentle gliding motion, power recline, massage and heat functions, and an adjustable headrest. Integrated USB and Type-C charging ports, along with side pockets, enhance convenience.



Figure 2.1: FLEXISPOT Souffle-Pro Power Swivel Rocker Recliner Chair.



Figure 2.2: Product dimensions for the Souffle-Pro recliner. The chair measures approximately 35.43 inches deep, 37 inches wide, and 42.25 inches high. It supports up to 300 lbs.

3. ASSEMBLY INSTRUCTIONS

The FLEXISPOT Souffle-Pro recliner is delivered in two compact boxes for easier handling. Assembly is designed to be straightforward. Please follow the detailed instructions provided in the separate assembly guide included with your packaging.

1. Unpack all components from both boxes and verify against the parts list in your assembly guide.
2. Connect the backrest to the seat base, ensuring all connections are secure.
3. Attach any remaining components as per the assembly guide.
4. Connect the power adapter to the chair and then to a wall outlet.



Figure 3.1: The recliner can be adjusted for various activities such as napping, nursing, or reading, indicating its versatile design and ease of assembly.

4. OPERATING INSTRUCTIONS

4.1 Power Recline Function

To recline the chair, locate the control panel on the side of the chair. Press and hold the recline button to smoothly adjust the chair to your desired position. Release the button to stop the recline motion. To return to the upright position, press and hold the opposite button.

4.2 Swivel and Gliding Motion

The chair offers a 270° swivel capability and a gentle 30° gliding motion. These functions operate manually by shifting your weight or gently pushing off the floor. No electronic controls are needed for these movements.

4.3 Massage and Lumbar Heat Functions

Activate the massage and heat functions using the remote control. The chair features a built-in 4-point back massage with 3 vibration modes and soothing lumbar heat. Refer to the remote control's specific buttons for adjusting intensity and modes.



Figure 4.1: Illustration of the massage and lumbar heating zones and control options.

4.4 Adjustable Headrest

The headrest can be manually adjusted to three different height levels to provide personalized neck and head support. Simply lift or push down the headrest to click it into the desired position.

Adjustable Headrest

Three levels of support for personalized comfort



Figure 4.2: The headrest offers three adjustable levels for optimal comfort.

4.5 USB and Type-C Charging Ports

The chair is equipped with USB and Type-C charging ports located on the side control panel. Use these ports to conveniently charge your electronic devices while relaxing in the chair. A side pocket is also available for storing remotes or books.



Figure 4.3: Integrated USB and Type-C charging ports with convenient side pockets.

5. MAINTENANCE AND CARE

To ensure the longevity and appearance of your FLEXISPOT Souffle-Pro recliner, follow these care guidelines:

- **Fabric Care:** The chair is upholstered in OEKO-TEX certified performance fabric, which is stain-resistant and easy to clean. For spills, gently blot with a clean, dry cloth. For tougher stains, use a mild soap solution and a damp cloth, then pat dry. Avoid harsh chemicals.
- **Frame Care:** The FSC-certified solid wood frame requires minimal maintenance. Periodically check all bolts and screws to ensure they are tight.
- **Electrical Components:** Keep the power cord and control panel dry. Do not attempt to repair electrical components yourself; contact customer support if issues arise.
- **General Cleaning:** Vacuum the chair regularly using a soft brush attachment to remove dust and debris.

Soft-Touch OEKO-TEX Certified Fabric

Gentle Touch for Everyday Use



Figure 5.1: The OEKO-TEX certified fabric is designed for durability and easy cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your recliner, please refer to the following common troubleshooting steps:

- **Chair Not Reclining:** Ensure the power cord is securely plugged into both the chair and a functioning wall outlet. Check if the wall outlet is receiving power by testing it with another device.
- **Massage/Heat Not Working:** Verify the power connection. Ensure the remote control is properly connected and its buttons are functioning.
- **Unusual Noises:** Check for any loose components or obstructions around the reclining mechanism. If noises persist, discontinue use and contact customer support.
- **Swivel/Gliding Issues:** Ensure the chair is on a flat, even surface and there are no obstructions beneath the base.

If these steps do not resolve the issue, please contact FLEXISPOT customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Name	Souffle
Color	Light Grey
Material	Chenille Fabric
Frame Material	FSC-Certified Wood
Product Dimensions (D x W x H)	35.43" x 37" x 42.25"
Weight Capacity	250 lbs (113 kg)
Swivel Angle	270°
Gliding Motion	30°
Reclining Positions	Power Recline (Multiple positions)
Massage Features	4-point back massage, 3 vibration modes
Heat Function	Lumbar heat
Headrest	Manually adjustable (3 levels)
Charging Ports	USB, Type-C
Assembly Required	Yes

8. WARRANTY AND SUPPORT

FLEXISPOT is committed to providing quality products and customer satisfaction.

8.1 Return Policy

You are allowed to return or exchange the furniture within **30 days** of when you receive it. Please refer to your purchase platform's specific return policy for detailed instructions.

8.2 Customer Support

For any questions, concerns, or technical assistance, please contact FLEXISPOT customer support:

- **Email:** contact@flexispot.com
- **Phone:** +1 (855) 585-5618

When contacting support, please have your model name (Souffle) and purchase details ready.

ENDORSED BY



GLOBAL CLIENTS



Figure 8.1: FlexiSpot contact information and 30-day return policy.