

IBELL EO40LGDLX

IBELL 40L Electric Oven Toaster Grill (OTG) EO40LGDLX User Manual

Model: EO40LGDLX

1. INTRODUCTION

Thank you for choosing the IBELL 40L Electric Oven Toaster Grill (OTG) model EO40LGDLX. This appliance is designed for versatile cooking, offering baking, grilling, roasting, and toasting functionalities with convection and motorized rotisserie features. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image 1: IBELL 40L Electric Oven Toaster Grill (OTG) EO40LGDLX. This image shows the front view of the black electric oven toaster grill with its control knobs on the right side and a glass door.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar items.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any cooking materials on the oven door when the door is open.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

3. PRODUCT OVERVIEW AND COMPONENTS

The IBELL 40L OTG comes with several components designed for various cooking tasks. Familiarize yourself with these parts before operation.

Included Components:

- 1 Electric Oven
- Tray (Baking/Drip Tray)
- Tray Handle
- Rotisserie Rod
- Rotisserie Handle
- User Manual
- Warranty Card



Image 2: Labeled components of the IBELL OTG. This image highlights the Bottom Door Clip, Rotisserie Handle, Rotisserie Rod, Oven Indicator, Tray, and Tray Handle, showing their positions relative to the oven.

Control Panel:

The control panel features three main knobs for temperature, function, and timer settings.



Image 3: Close-up of the IBELL OTG control knobs. This image details the Operation Selector, Temperature Selector, and Timer & Inside Light Knob, showing their respective markings and settings.

- **Temperature Selector:** Adjusts the cooking temperature from 100°C to 250°C.
- **Operation Selector (Function Knob):** Selects the heating elements to be used (top, bottom, both, convection, rotisserie).
- **Timer & Inside Light Knob:** Sets the cooking time up to 60 minutes and controls the internal oven light.

4. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or labels from the oven.
3. Wipe the exterior of the oven with a damp cloth. Clean the interior and accessories with warm, soapy water, rinse, and dry thoroughly.

Placement:

- Place the oven on a stable, heat-resistant, and level surface.
- Ensure there is adequate ventilation around the oven (at least 10-15 cm clearance on all sides).
- Do not place the oven near flammable materials or heat sources.

Before First Use:

It is recommended to run the oven empty for approximately 15 minutes to burn off any manufacturing residues and odors.

1. Plug the oven into a grounded electrical outlet.
2. Set the Temperature Selector to 250°C.
3. Set the Operation Selector to the "Both Heating Elements" (top and bottom) setting.
4. Set the Timer Knob to 15 minutes. The oven indicator light will turn on.
5. After 15 minutes, the timer will ring, and the oven will turn off.
6. Allow the oven to cool completely, then wipe the interior with a clean, damp cloth. The oven is now ready for use.

5. OPERATING INSTRUCTIONS

This section details how to use the various functions of your IBELL OTG.

General Operation:

1. Place food on the appropriate rack or tray.
2. Close the oven door securely.
3. Set the desired temperature using the Temperature Selector.
4. Select the desired cooking function using the Operation Selector.
5. Set the cooking time using the Timer Knob. The power indicator light will illuminate.
6. When the set time elapses, the timer will ring, and the oven will automatically turn off.
7. To stop cooking before the timer finishes, turn the Timer Knob to "OFF".
8. Always use oven mitts when removing food or accessories from the hot oven.

Convection Function:

The convection fan circulates hot air inside the oven, ensuring more even and faster cooking. This is ideal for baking, roasting, and achieving crispy results.

CONVECTION OVEN



**CONVECTION
FAN**



**ROTISSERIE
FUNCTION**



60 MIN TIMER



**40 LITRE
CAPACITY**



**2000W
POWER**




Image 4: Features of the IBELL Convection Oven. This image highlights the Convection Fan, Rotisserie Function, 60 Min Timer, 40 Litre Capacity, and 2000W Power (note: product specifications state 1800W, please refer to the specifications section for accurate wattage).

- To activate convection, select a function that includes the fan symbol on the Operation Selector.
- When using convection, you may need to reduce cooking time and temperature slightly compared to conventional oven recipes.

Motorized Rotisserie Function:

The motorized rotisserie is perfect for roasting whole chickens or large cuts of meat, ensuring even browning and juicy results.

Convection Oven

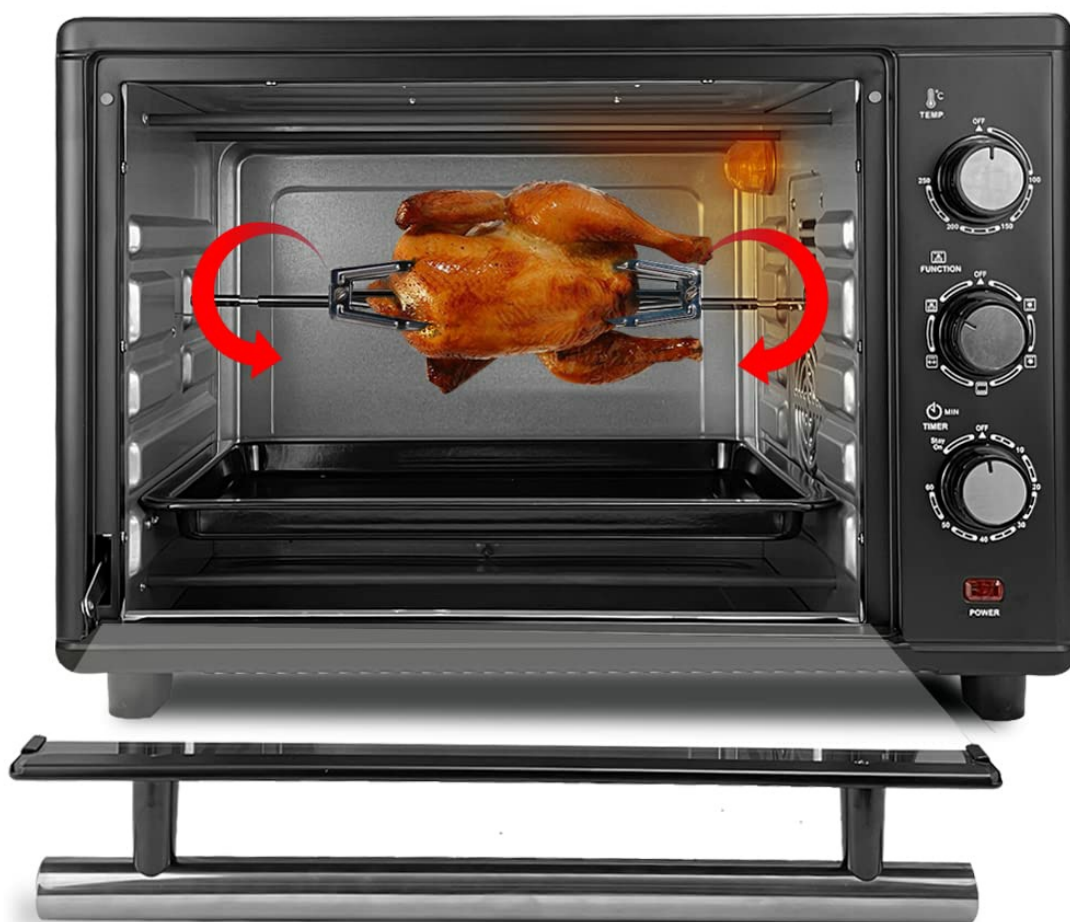

Rotisserie Function

Image 5: IBELL OTG demonstrating the Rotisserie Function. A whole chicken is shown rotating on the rotisserie rod inside the oven, with red arrows indicating rotation.

1. Skewer the food onto the rotisserie rod, ensuring it is balanced and secured with the forks.
2. Insert the pointed end of the rotisserie rod into the drive socket on the right side of the oven interior.
3. Rest the square end of the rod on the support on the left side.
4. Place the drip tray at the bottom of the oven to catch drippings.
5. Set the Temperature Selector to the desired temperature (e.g., 200°C for chicken).
6. Set the Operation Selector to the "Rotisserie" function (usually indicated by a rotating spit symbol).
7. Set the Timer Knob for the desired cooking duration.
8. Once cooking is complete, use the Rotisserie Handle to carefully remove the hot rotisserie assembly from the oven.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your IBELL OTG.

1. **Always unplug the oven** from the power outlet and allow it to cool completely before cleaning.

2. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, but ensure to wipe thoroughly with a clean, damp cloth afterwards to remove all residue.
4. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth.
5. **Accessories:** The baking tray, wire rack, rotisserie rod, and handles can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or reusing.
6. **Heating Elements:** Do not attempt to clean the heating elements. Any food splatters on the elements will burn off during operation.
7. **Never immerse the oven body, cord, or plug in water or any other liquid.**

7. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check household circuit breaker. Turn the Timer Knob to the desired cooking time.
Food not cooking evenly.	Incorrect temperature/time; food placed too close to elements; convection fan not active.	Adjust temperature and time as per recipe. Ensure proper rack position. Use convection function for more even cooking. Rotate food halfway through cooking if necessary.
Excessive smoke during operation.	Food residue or grease buildup; fatty foods.	Clean the oven interior and accessories thoroughly. Use a drip tray for fatty foods. Ensure proper ventilation.
Rotisserie not rotating.	Rotisserie rod not properly seated; rotisserie function not selected.	Ensure the rotisserie rod is correctly inserted into the drive socket and resting on the support. Select the rotisserie function on the Operation Selector.

If the problem persists after attempting these solutions, please contact customer support.

8. PRODUCT SPECIFICATIONS

Brand	IBELL
Model Number	IBLEO40LGDLX
Capacity	40 Litres
Wattage	1800 Watts
Product Dimensions (D x W x H)	33D x 53W x 33H Centimeters
Item Weight	9.1 Kilograms
Control Type	Knob Control

Special Feature	Automatic Shut-Off, Convection, Motorized Rotisserie
Material Type	Iron
Colour	Black
Country of Origin	India



Image 6: IBELL OTG with dimensions. This image shows the oven with its width (51 cm), depth (38 cm), and height (35 cm) clearly marked.

9. WARRANTY AND CUSTOMER SUPPORT

Warranty Information:

Your IBELL OTG comes with a **1 Year standard warranty + 1 Year additional warranty on registration**. Registration should be done within 30 days from the date of purchase to avail the additional warranty.



**1 Year Standard Warranty +
1 Year Additional Warranty
On Free Registration**

Image 7: Warranty details for IBELL products. This image states "1 Year Standard Warranty + 1 Year Additional Warranty On Free Registration".

Customer Support:

For any queries, service requests, or technical assistance, please contact IBELL customer support:

- **Phone:** 1800 2020 260
- **Email:** connect@ibellstore.com
- **Manufacturer Address:** Innovative Technologies, iBELL Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105, India.