

Shark LC156JGY1

Shark EVOPOWER SYSTEM FIT+ LC156JGY1 Cordless Stick Vacuum Cleaner User Manual

Model: LC156JGY1

1. INTRODUCTION

Thank you for purchasing the Shark EVOPOWER SYSTEM FIT+ LC156JGY1 Cordless Stick Vacuum Cleaner. This lightweight and powerful vacuum is designed to fit your lifestyle, featuring an automatic dust collection dock, iQ sensor technology for optimized suction, and a brushless power fin to prevent hair tangles. This manual provides essential information for safe and effective use of your new appliance.

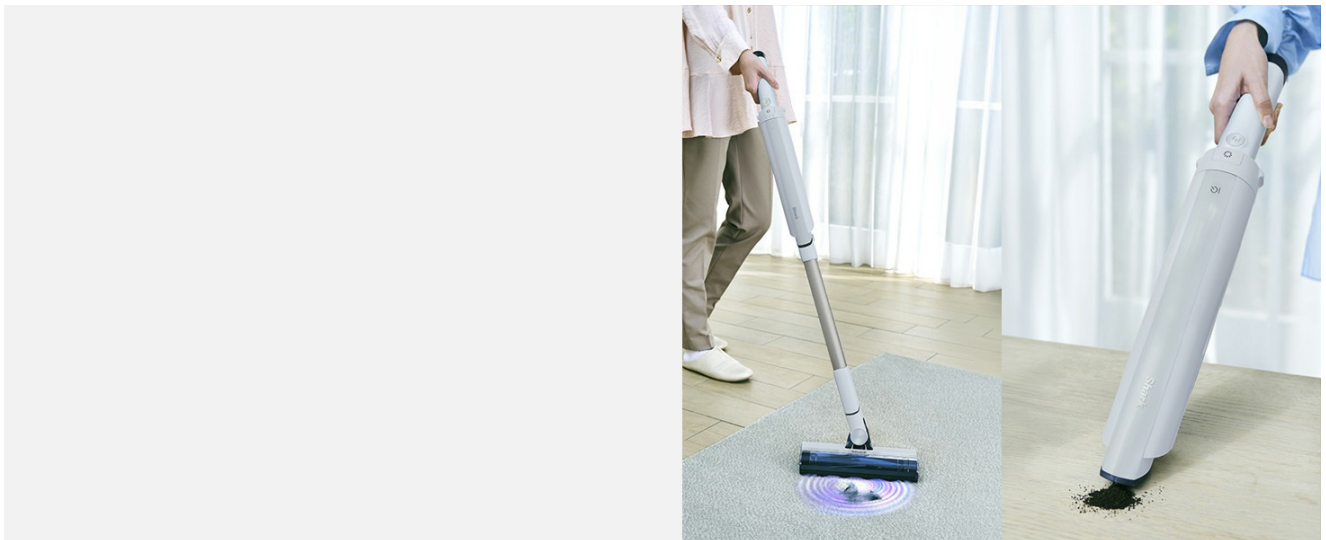 


Image: The Shark EVOPOWER SYSTEM FIT+ LC156JGY1 cordless stick vacuum cleaner with its automatic dust collection dock.

2. SAFETY INFORMATION

Please read all instructions carefully before using your vacuum cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only.
- Do not use outdoors or on wet surfaces.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and filters in place.
- Use only as described in this manual.
- Always turn off the appliance before connecting or disconnecting the motorized nozzle, charging, or performing any maintenance.
- Store the vacuum in a dry indoor area.

3. PACKAGE CONTENTS

Verify that all components are present in your package:

- Main Vacuum Unit
- Automatic Dust Collection Dock (with charging function)
- Lithium-ion Battery (1, pre-installed in main unit)
- User Manual (this document)

4. ASSEMBLY AND SETUP

Follow these steps to assemble your vacuum cleaner and prepare it for first use:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Main Unit:** Connect the wand to the floor nozzle until it clicks into place. Then, connect the handheld vacuum to the top of the wand until it clicks.
3. **Set up the Automatic Dust Collection Dock:** Place the dock on a flat, stable surface near a power outlet.
4. **Charge the Battery:** Place the assembled vacuum cleaner onto the automatic dust collection dock. Ensure the charging contacts align. The battery will begin charging automatically. A full charge takes approximately 3.5 hours.



Image: The Shark EVOPOWER SYSTEM FIT+ LC156JGY1 vacuum cleaner in its assembled state.

5. OPERATION

5.1. Starting and Stopping

- To start the vacuum, press the power button on the handheld unit.
- To stop, press the power button again.

5.2. Cleaning Modes

Your vacuum features two cleaning modes:

- **iQ Mode:** This is the standard mode. The Shark iQ sensor automatically adjusts suction power based on the amount of debris detected, optimizing cleaning efficiency and battery life.
- **Boost Mode:** For stubborn dirt and deep cleaning, press the Boost button on the handheld unit to activate maximum suction power.



Image: The iQ sensor automatically adjusts suction power based on debris levels.

5.3. Handheld Conversion

To convert to a handheld vacuum for cleaning furniture, stairs, or tight spaces:

1. Press the release button on the handheld unit.
2. Pull the handheld unit away from the wand.
3. Attach any desired accessories (not included with this model, but available separately) to the handheld unit.



Image: Converting the stick vacuum to a handheld unit for versatile cleaning.

5.4. Automatic Dust Collection Dock

When you return the vacuum to its dock, the automatic dust collection feature will activate, transferring debris from the vacuum's dust cup to the dock's larger collection bin. This minimizes contact with dust and reduces the frequency of emptying the vacuum's small dust cup.

- The dock can hold approximately 30 days' worth of debris (based on 1 use per day; actual capacity may vary depending on environment).
- To temporarily stop the automatic dust collection process (e.g., at night), press the dedicated button on the dock.

 


Image: The automatic dust collection dock for convenient and hygienic debris disposal.

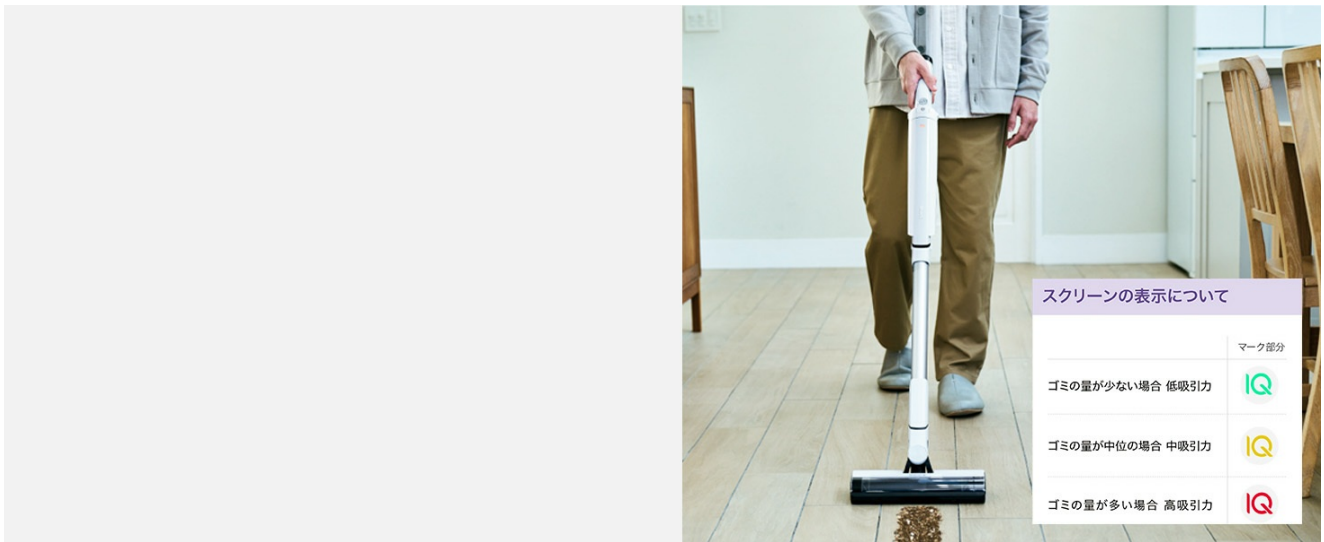 


Image: Comparison of traditional dust emptying (dust flying) versus Shark's automatic, dust-free collection.

6. MAINTENANCE

Regular maintenance ensures optimal performance of your vacuum cleaner.

6.1. Emptying the Dust Collection Dock

- When the dust collection bin on the dock is full, remove it and empty the contents into a trash can.
- The dock's dust box is washable. Rinse with water and allow to air dry completely before reinserting.

6.2. Cleaning Filters

The vacuum's dust cup and filters are washable:

1. Remove the dust cup and filters from the handheld unit.
2. Rinse the dust cup and filters with cold water.
3. Allow all parts to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.

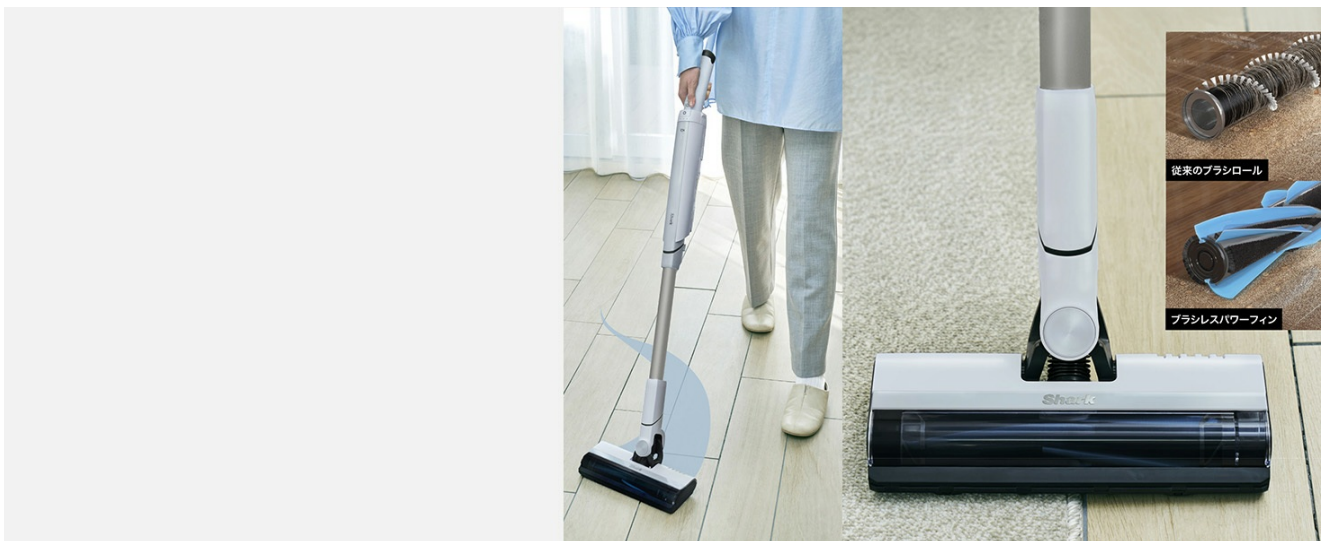


Image: The HEPA filter ensures clean exhaust, trapping fine dust and allergens.



Image: Washable components including the brush roll, dust cup, and filters for easy maintenance.

6.3. Cleaning the Brush Roll

The brushless power fin design minimizes hair tangles. If any debris accumulates:

1. Turn off the vacuum and disconnect it from the dock.
2. Open the brush roll garage on the floor nozzle.
3. Remove any tangled hair or debris from the brush roll.
4. The brush roll can be rinsed with water. Ensure it is completely dry before reinserting.



Image: The brushless power fin effectively captures debris without tangling hair.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not properly inserted.	Ensure battery is fully charged and correctly inserted into the handheld unit.
Loss of suction	Dust cup full, filters clogged, or blockage in nozzle/wand.	Empty dust cup, clean filters, and check for blockages.
Automatic dust collection not working	Dock's dust bin full, or vacuum not properly seated on dock.	Empty the dock's dust bin. Ensure the vacuum is correctly placed on the dock. Check if the automatic collection stop button is activated.
Brush roll not spinning	Blockage in brush roll or brush roll garage.	Turn off the vacuum, remove any obstructions from the brush roll area.

8. SPECIFICATIONS

Feature	Detail
Model Number	LC156JGY1
Color	Lucent Gray
Dimensions (Stick Mode)	104.1 cm (H) x 26.7 cm (W) x 15.2 cm (D)
Weight (Stick Mode)	Approx. 1.8 kg
Battery Type	Lithium-ion
Charging Time	Approx. 3.5 hours
Operating Time (Stick Mode)	iQ Mode: Approx. 8-30 minutes Boost Mode: Approx. 8 minutes
Operating Time (Handheld Mode)	iQ Mode: Approx. 9-40 minutes Boost Mode: Approx. 9 minutes
Dust Collection Dock Capacity	Approx. 30 days of debris (varies by usage)
Manufacturer Warranty	2 years

9. WARRANTY AND SUPPORT

9.1. Manufacturer's Warranty

This Shark EVOPOWER SYSTEM FIT+ LC156JGY1 vacuum cleaner comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For product support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact Shark customer service. Refer to the contact information provided on the official Shark website or your product packaging.

You can also visit the official Shark store on Amazon for additional information and accessories:[Shark Official Store](#)