

B0GPFKYNXL

Zmtf Cordless Paint Sprayer Gun User Manual

Model: B0GPFKYNXL

1. INTRODUCTION

Thank you for choosing the Zmtf Cordless Paint Sprayer Gun. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new paint sprayer. Please read all instructions carefully before use and retain this manual for future reference.

2. SAFETY INSTRUCTIONS

WARNING: Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the equipment.
- **Wear Personal Protective Equipment (PPE):** Always wear safety glasses, a respirator mask, gloves, and protective clothing when operating the paint sprayer.
- **Ventilation:** Ensure adequate ventilation in the work area to prevent the accumulation of hazardous fumes.
- **Flammable Materials:** Do not spray flammable liquids near open flames, pilot lights, or other ignition sources.
- **Electrical Safety:** Keep batteries and charging equipment dry. Do not operate in wet conditions.
- **Children and Bystanders:** Keep children and bystanders away from the operating area.
- **Maintenance:** Disconnect the battery before cleaning, adjusting, or performing maintenance.
- **Proper Disposal:** Dispose of paint, solvents, and batteries according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Zmtf Cordless Paint Sprayer Gun
- 2 x Rechargeable Batteries
- 1 x Detachable Paint Container (800 ml capacity)
- 1 x Battery Charger (not explicitly listed but implied with rechargeable batteries)
- 1 x User Manual

4. SETUP

4.1 Charging the Batteries

1. Insert a rechargeable battery into the provided charger.
2. Plug the charger into a standard electrical outlet.
3. Allow the battery to charge fully before first use. Refer to the charger's indicator lights for charging status.

4.2 Attaching the Paint Container

1. Ensure the sprayer is disconnected from the battery.
2. Twist the paint container onto the base of the sprayer until securely fastened.

4.3 Preparing Paint

1. Consult your paint manufacturer's instructions for recommended thinning ratios for spray application.
2. Thoroughly mix the paint and thin it as necessary to achieve the desired viscosity.
3. Pour the prepared paint into the detachable paint container, ensuring not to overfill.

4.4 Attaching the Battery

1. Align the charged battery with the battery slot on the sprayer handle.
2. Slide the battery into place until it clicks securely.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Spray Patterns

The Zmtf Cordless Paint Sprayer Gun features an adjustable nozzle that allows you to select one of three spray patterns by rotating the nozzle cap.

Adjustable the sprayshape by rotating



Vertical 180°



Horizontal 90°



Circular 45°



This image illustrates how to adjust the spray pattern of the Zmtf Cordless Paint Sprayer Gun by rotating the nozzle. The three available patterns are vertical (180 degrees), horizontal (90 degrees), and circular (45 degrees), allowing for versatile application on different surfaces.

- **Vertical 180°:** Ideal for horizontal surfaces or when spraying up and down.
- **Horizontal 90°:** Suitable for vertical surfaces or when spraying side to side.
- **Circular 45°:** Best for small areas, corners, or detailed work.

5.2 Spraying Technique

1. Hold the sprayer approximately 6-12 inches (15-30 cm) from the surface.
2. Maintain a consistent distance and speed for even coverage.
3. Begin spraying off the workpiece and move across, releasing the trigger off the workpiece to avoid paint buildup.
4. Apply thin, even coats rather than one thick coat to prevent drips and runs.

5.3 Applications

The Zmtf Cordless Paint Sprayer Gun is suitable for a variety of painting tasks:



This image demonstrates the wide range of applications for the Zmtf Cordless Paint Sprayer Gun, including interior wall painting, fence spraying, wood surface painting, and external wall painting, highlighting its versatility for various home improvement projects.

- Interior Painting
- External Wall Painting
- Wood Painting
- Fence Spraying

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your paint sprayer.

6.1 Cleaning After Use

1. **Empty Paint Container:** Remove any remaining paint from the container.
2. **Rinse Container:** Fill the container with an appropriate cleaning solution (water for latex paint, mineral spirits for oil-based paint) and spray it through the gun until clear.
3. **Disassemble and Clean:** Disconnect the battery. Disassemble the nozzle, air cap, and paint

container. Clean all components thoroughly with the appropriate cleaning solution and a brush.

4. **Wipe Down:** Wipe the exterior of the sprayer with a damp cloth.
5. **Dry and Store:** Ensure all parts are completely dry before reassembling and storing the sprayer in a clean, dry place.

6.2 Battery Care

- Store batteries in a cool, dry place away from direct sunlight.
- Do not expose batteries to extreme temperatures.
- Charge batteries fully before long-term storage and recharge every 3-6 months to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No spray or weak spray	Clogged nozzle; paint too thick; low battery.	Clean nozzle; thin paint to recommended viscosity; charge battery.
Uneven spray pattern	Nozzle not properly adjusted; dirty air cap; inconsistent spraying technique.	Adjust nozzle; clean air cap; practice consistent technique.
Paint drips or runs	Too much paint applied; sprayer too close to surface; paint too thin.	Apply thinner coats; increase distance from surface; adjust paint viscosity.
Sprayer not turning on	Battery not inserted correctly; battery discharged; faulty switch.	Ensure battery is secure; charge battery; contact support if switch is faulty.

8. SPECIFICATIONS

- **Brand:** Generic (Manufacturer: Zmtf)
- **Model:** B0GPFKYNXL
- **Power Source:** Cordless, Battery-operated (2 rechargeable batteries included)
- **Paint Container Volume:** 800 Milliliters
- **Spray Patterns:** Vertical 180°, Horizontal 90°, Circular 45°
- **Material Features:** Adjustable Nozzle, Battery Powered, Cordless, Detachable Container, Ergonomic Handle, Lightweight
- **Usage:** Indoor, Outdoor
- **Country of Origin:** China