

LEADZM XQB50-168

LEADZM XQB50-168 Mini Top-Load Washing Machine User Manual

Model: XQB50-168

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the rating label. Do not use extension cords or adapters. Always unplug the machine when not in use, before cleaning, or during maintenance.
- **Water Connection:** Connect the water inlet hose securely to a cold water tap. Ensure the drain hose is properly positioned to prevent water leakage.
- **Hot Water:** This washing machine does not have a built-in heating function. If hot water is desired, manually add water up to a maximum temperature of 60°C (140°F). Exceeding this temperature may damage the appliance or clothing.
- **Child Safety:** This appliance is equipped with a child lock feature. Activate it to prevent accidental operation by children. Keep children and pets away from the machine during operation.
- **Placement:** Place the washing machine on a firm, level surface to prevent vibration and noise. Ensure adequate ventilation around the machine. Do not install in areas exposed to direct sunlight or freezing temperatures.
- **Flammable Materials:** Do not wash items that have been soiled with flammable or explosive substances (e.g., gasoline, oil, alcohol).
- **Maintenance:** Only perform maintenance as described in this manual. For repairs, contact qualified service personnel.

2. PRODUCT OVERVIEW

The LEADZM XQB50-168 is a compact and efficient 5kg top-load washing machine designed for small spaces. It combines washing and spinning functions in one unit, offering convenience and versatility.

Key Features:

- **2-in-1 Functionality:** Washes and spins clothes in a single process.
- **5kg Capacity:** Suitable for daily laundry needs in apartments, dorms, RVs, or small homes.
- **Stainless Steel Drum:** Features a diamond pattern design to reduce wear on clothes and enhance cleaning

performance.

- **8 Wash Modes & 5 Water Levels:** Offers versatile options for different fabric types and soil levels.
- **User-Friendly Touch Controls:** Easy to operate with a clear display.
- **Child Lock:** Enhances safety by preventing accidental changes to settings.
- **Self-Cleaning Function:** Helps maintain the cleanliness of the inner tub.
- **Compact Design:** Ideal for spaces where traditional washing machines are too large.

2-IN-1 LAVAGE ET ESSORAGE



Image 1: The LEADZM XQB50-168 Mini Top-Load Washing Machine, showcasing its compact design.



Lave-linge Entièrement Automatique

Évitez les tracas liés à la lessive et gagnez un temps précieux



Capacité de 5 kg



8 programmes



Écran LED



Réduction du bruit



Utilisation simple



Économie d'énergie



Image 2: Overview of the washing machine's features, including 2-in-1 wash and spin, compact size, water/energy saving, stainless steel drum, and silent operation.

3. INSTALLATION AND SETUP

3.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any shipping damage. Retain packaging materials for future transport if needed.

3.2 Placement

- Place the machine on a flat, stable, and dry surface.
- Ensure there is sufficient space around the machine for ventilation and operation.
- Adjust the leveling feet at the bottom of the machine to ensure it is perfectly stable and does not wobble.

CONVIENT À DIVERSES SCÈNES ET TENUES D'INTÉRIEUR



Appartement



Dortoir



Buanderie



Studio



Tous les jours
Vêtements



Enfants
Vêtements sales



Transpirés
T-shirt de sport

Image 3: Dimensions of the LEADZM XQB50-168 washing machine (51cm D x 47cm W x 86.5cm H).

La révolution dans le domaine de la lessive

Grande capacité de 5 kg pour nettoyer toutes vos tenues en une seule fois !

DRAPS
2 PARTS



CHEMISES
20 PIÈCES



MANTEAUX
3 PIÈCES



T-SHIRTS
20 PIÈCES



PANTALONS
10 PAIRES



RIDEAUX
2 PARTS



Avant



Après

Image 4: The washing machine is suitable for various indoor settings such as apartments, dorms, laundry rooms, and studios.

3.3 Water Connection

- Connect the water inlet hose to a standard cold water tap. Ensure the connection is tight to prevent leaks.
- Place the drain hose into a sink or standpipe. Ensure the drain hose is not kinked and is positioned at an appropriate height for proper drainage.

3.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the power requirements of the machine.

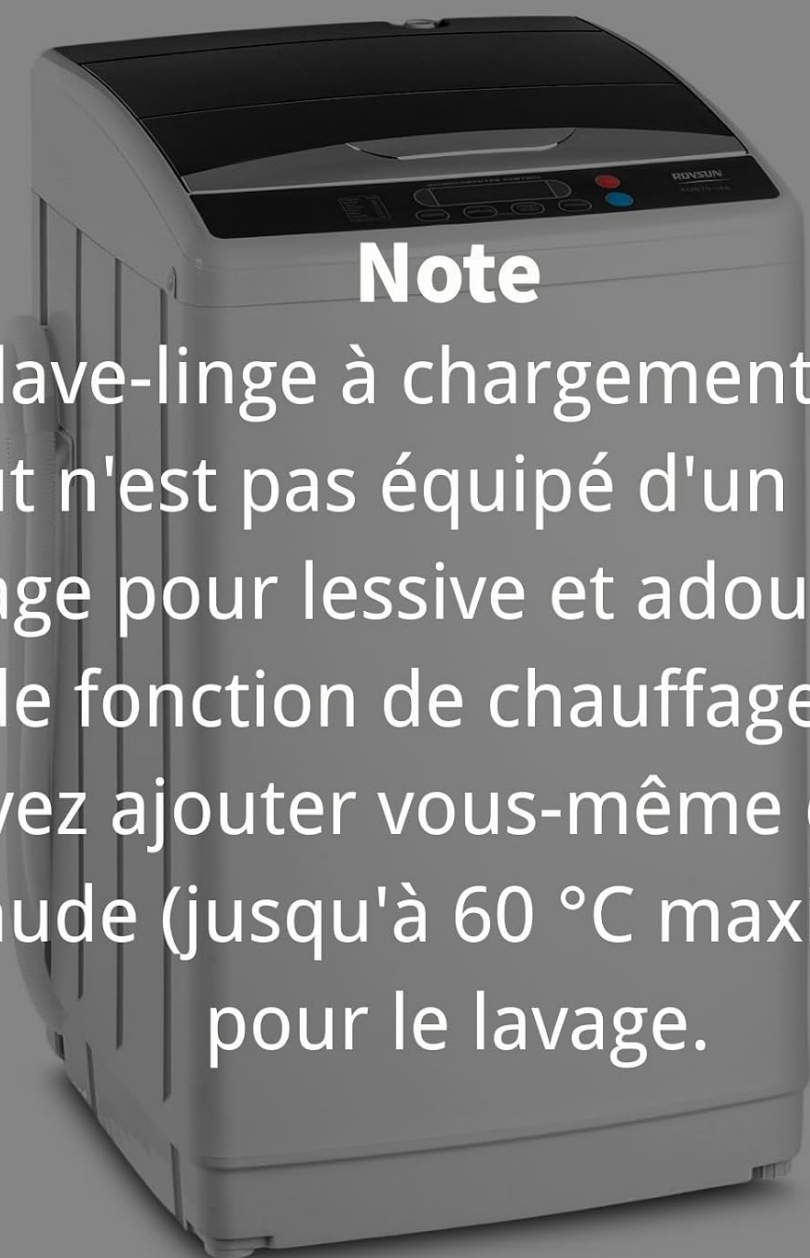
4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

- Open the top lid of the washing machine.
- Load clothes loosely into the drum, ensuring not to exceed the 5kg maximum capacity. Overloading can affect washing performance and damage the machine.

4.2 Adding Detergent and Water

- This model does not have an automatic detergent dispenser. Add the appropriate amount of detergent directly into the drum with the clothes.
- If you wish to use hot water, manually add water up to a maximum of 60°C (140°F) before starting the cycle.

A top-loading washing machine with a control panel on top. The machine is dark grey or black. The control panel features a digital display and several buttons. The brand name 'HDSUN' is visible on the right side of the panel.

Note

Ce lave-linge à chargement par le haut n'est pas équipé d'un bac de dosage pour lessive et adoucissant, ni de fonction de chauffage. Vous pouvez ajouter vous-même de l'eau chaude (jusqu'à 60 °C maximum) pour le lavage.

Image 5: Note regarding manual addition of hot water (up to 60°C) as the machine does not have a heating function or detergent dispenser.

4.3 Control Panel Overview

The control panel features touch buttons for program selection, water level, and start/pause functions.



Image 6: Close-up of the LEADZM XQB50-168 control panel, showing program options, water level, and function buttons.

4.4 Selecting a Wash Cycle

Choose from 8 available wash modes:

- **Normal:** For everyday cottons and mixed fabrics.
- **Jeans:** Optimized for denim and heavier fabrics.
- **Standard:** A balanced cycle for general washing.
- **Quick:** A fast 26-minute cycle for lightly soiled items.
- **Wool:** Gentle cycle for woolens.
- **Delicate:** For fragile garments requiring extra care.
- **Tub Clean:** For cleaning the washing machine drum.
- **Air Dry:** A spin-only cycle with air circulation to aid drying.

Select the desired water level from the 5 available options based on the load size.



Image 7: Illustration of the 8 available wash modes, including Normal, Jeans, Standard, Quick, Wool, Delicate, Tub Clean, and Air Dry.

4.5 Starting a Cycle

- After selecting the program and water level, press the 'Start/Pause' button to begin the wash cycle.
- To pause a cycle, press 'Start/Pause' again. Press it once more to resume.

4.6 Timer Function

The machine features a 24-hour delay start timer. Use this function to set the machine to start a cycle at a later time, for example, to have laundry ready in the morning.



Image 8: Depiction of the 24-hour timer function, allowing users to set a delayed start for washing.

4.7 Child Lock

To activate the child lock, press and hold the designated button (refer to the control panel diagram) for a few seconds until the indicator light appears. This will lock the control panel. Repeat the process to deactivate.



Image 9: Visual representation of the child lock feature, showing a child interacting with the machine safely.

5. MAINTENANCE

5.1 Tub Clean Function

Regularly use the 'Tub Clean' cycle to prevent detergent residue and odors from building up in the drum. This helps maintain hygiene and optimal washing performance.

5.2 Cleaning the Filter

The machine is equipped with a lint filter. Periodically remove and clean the filter to ensure efficient operation and prevent lint transfer to clothes. Refer to the product diagram for filter location and removal instructions.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish.

5.4 Winterization (Storage)

If storing the machine in an unheated area or for an extended period, drain all water from the hoses and pump to prevent freezing and damage.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Lid not closed; Child lock active	Check power connection; Ensure lid is fully closed; Deactivate child lock.
Water not filling	Water tap off; Inlet hose kinked; Water pressure low	Turn on water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Filter clogged	Straighten hose; Clean the lint filter.
Excessive vibration/noise	Machine not level; Overloaded; Shipping bolts not removed (if applicable)	Adjust leveling feet; Reduce load size; Ensure all shipping materials are removed.
Poor washing results	Too much/too little detergent; Incorrect program; Overloaded	Adjust detergent amount; Select appropriate program; Reduce load size.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	LEADZM
Model Number	XQB50-168
Dimensions (D x W x H)	51 cm x 47 cm x 86.5 cm
Capacity	5 Kilograms
Item Weight	20.5 Kilograms
Loading Type	Top-Load
Operating Mode	Fully Automatic
Control Type	Touch
Drum Material	Stainless Steel
Color	White
Special Feature	Anti-rat net (protective mesh)
Recommended Uses	Domestic
Country of Origin	China
Spare Parts Availability	7 Years

8. WARRANTY AND SUPPORT

This product comes with standard legal guarantees and a 30-day return policy from the date of purchase. For specific warranty details, please refer to your purchase documentation or contact the seller.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact the seller or manufacturer directly. Have your model number (XQB50-168) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GPN5L8SM>

More documents and user manuals: <https://manuals.plus/>