

Fastrack 3335NL02

Fastrack Kronos 3 Watch (Model 3335NL02) User Manual

Model: 3335NL02

INTRODUCTION

This manual provides comprehensive instructions for the Fastrack Kronos 3 Watch, Model 3335NL02. Please read this manual carefully to understand the proper setup, operation, maintenance, and troubleshooting procedures for your watch. Retain this manual for future reference.

PRODUCT OVERVIEW

The Fastrack Kronos 3 (Model 3335NL02) is an analog quartz chronograph watch designed for reliable timekeeping and functionality. It features a black dial, black leather strap, and a durable brass case with mineral glass.

Key Features:

- **Movement:** Precision Quartz
- **Display:** Analog with 3D indices
- **Chronograph Function:** Includes retrograde second hand and sub-dials for timing.
- **Water Resistance:** Up to 50 meters (5 ATM)
- **Strap:** Padded black leather with buckle closure
- **Case Material:** Brass
- **Crystal Material:** Mineral Glass

Watch Components:



Figure 1: Front view of the Fastrack Kronos 3 watch. Shows the main dial, sub-dials, and push buttons.

1. **Crown:** Used for setting time and date.
2. **Push Buttons:** Used for operating the chronograph functions.
3. **Main Dial:** Displays hours, minutes, and seconds.
4. **Sub-dials:** Display chronograph measurements (e.g., 60-second, 60-minute).
5. **Retrograde Second Hand:** A unique feature for chronograph seconds.
6. **Leather Strap:** Secures the watch to the wrist.
7. **Case Back:** Contains model and water resistance information.



Figure 2: Side view illustrating the crown and chronograph push buttons.



Figure 3: Rear view displaying the stainless steel case back with engraved details.

SETUP

Setting the Time:

1. Pull the crown out to the second click position. The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into the normal position. The second hand will resume movement.

Setting the Date:

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise (depending on the movement) to set the date.
3. Once the correct date is displayed, push the crown back into the normal position.
4. *Note:* Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

Adjusting the Strap:

The leather strap is equipped with a buckle closure. Adjust the buckle to a hole that provides a comfortable and secure fit on your wrist. It should be snug but not too tight to restrict circulation.

OPERATING INSTRUCTIONS

Using the Chronograph:

The chronograph function allows you to measure elapsed time. Refer to Figure 2 for the location of the push buttons.

- 1. **Start:** Press the upper push button to start the chronograph. The chronograph second hand and minute sub-dial will begin to move.
- 2. **Stop:** Press the upper push button again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
- 3. **Reset:** After stopping, press the lower push button to reset the chronograph hands to their zero positions.

Note: Do not operate the push buttons while the watch is submerged in water, as this can compromise water resistance.

MAINTENANCE

Cleaning Your Watch:

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather strap, avoid excessive moisture. If it gets wet, allow it to air dry naturally, away from direct heat.
- Do not use chemical cleaners or abrasive materials, as these can damage the watch's finish.

Water Resistance:

Your Fastrack Kronos 3 watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, showering, or washing hands. It is **not** suitable for diving, snorkeling, or high-impact water sports. Always ensure the crown is fully pushed in before any contact with water.

Battery Replacement:

The watch is powered by a quartz battery. When the watch stops or the second hand begins to jump irregularly (End-of-Life indicator), it's time for a battery replacement. It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running slow.	Low or dead battery.	Replace the battery at an authorized service center.
Time is incorrect.	Time not set correctly or crown is not fully pushed in.	Refer to "Setting the Time" section. Ensure crown is fully pushed in.
Date is incorrect.	Date not set correctly.	Refer to "Setting the Date" section.
Chronograph hands do not reset to zero.	Requires chronograph reset/calibration.	Consult an authorized service center for calibration if standard reset (lower pusher) does not work.

Problem	Possible Cause	Solution
Moisture under the crystal.	Compromised water resistance.	Immediately take the watch to an authorized service center to prevent further damage.

SPECIFICATIONS



Figure 4: Size reference of the Fastrack Kronos 3 watch, indicating a case size of 44mm.

Feature	Detail
Model Name	Fastrack Kronos 3
Model Number	3335NL02
Display Type	Analog

Feature	Detail
Movement Type	Quartz
Case Material	Brass
Crystal Material	Mineral Glass
Case Diameter	51.3 Millimetres
Case Thickness	10.85 Millimetres
Band Material	Leather
Band Width	1.2 Millimetres
Water Resistance Depth	50 Metres (5 ATM)
Item Weight	200 Grams
Country of Origin	India

WARRANTY INFORMATION

Your Fastrack Kronos 3 watch (Model 3335NL02) comes with a **Two-Year Manufacturer Guarantee** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, normal wear and tear of the strap or battery, or water damage if the watch was not properly sealed (e.g., crown pulled out). To claim warranty service, please retain your proof of purchase and contact an authorized Fastrack service center.

CUSTOMER SUPPORT

For any queries, service requests, or technical assistance regarding your Fastrack Kronos 3 watch, please contact the manufacturer:
Manufacturer: Titan Company Limited
Address: #3, Sipcot Industrial Complex, Hosur, Tamil Nadu - 635126, India
Please visit the official Fastrack website or your local authorized dealer for the most current contact information and service center locations.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question