

Roku H32C2C4

Roku Hiro TV 32-inch 720p HD Smart TV (Model H32C2C4) User Manual

Model: H32C2C4 | Brand: Roku

INTRODUCTION

The Roku Hiro 32-inch 720p HD Smart TV offers an integrated Roku streaming experience. This television features an HD display for clear picture quality and speakers with enhanced audio. It supports Bluetooth for private listening with headphones and includes Wi-Fi for internet connectivity. The Roku operating system provides a customizable home screen, access to numerous streaming channels, and automatic updates, making it suitable for various living spaces.

WHAT'S IN THE BOX



What's in the box

- 32" HD TV
- Roku TV remote
- Two AAA batteries
- TV stand

Diagram showing the dimensions of the Roku Hiro 32-inch TV and a list of included accessories: 32-inch HD TV, Roku TV remote, two AAA batteries, and TV stand.

- Hiro 32" 720p HD Smart TV Flat Screen LED Television with Roku TV
- Remote Control
- TV Stand
- Power Cable
- User Guide

SETUP

1. Stand Installation

Carefully place the TV screen-down on a soft, clean surface to prevent damage. Align the TV stand with the designated slots on the bottom of the TV. Secure the stand using the provided screws. Ensure the stand is firmly attached before proceeding.

2. Connecting Devices



Rear view of the Roku Hiro TV, showing the input/output ports including USB, HDMI, and antenna connections.

- **Power:** Connect the power cable to the TV's power input and then to a wall outlet.
- **HDMI:** Connect external devices such as Blu-ray players, game consoles, or cable boxes to the HDMI ports. This TV features 3 HDMI ports.
- **USB:** Use the USB port for media playback from a USB drive.
- **Optical Audio:** Connect an external sound system using an optical audio cable for enhanced sound.
- **Antenna/Cable:** Connect an antenna or cable TV feed to the RF input for over-the-air or cable channels.

3. Initial Setup

After connecting all necessary cables, power on the TV. Follow the on-screen instructions to:

- Select your language.
- Connect to your Wi-Fi network.
- Activate your Roku account (or create a new one).
- Scan for available channels if an antenna is connected.

Remote Control Functions



Close-up of the Roku TV remote control, highlighting buttons for TV power, volume, mute, sleep timer, instant replay, options, and app shortcuts.

- **Power Button:** Turns the TV on or off.
- **Directional Pad (D-Pad):** Navigates menus and selects items.
- **OK Button:** Confirms selections.
- **Home Button:** Returns to the Roku home screen.
- **Back Button:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV sound.
- **App Shortcut Buttons:** Direct access to popular streaming services (e.g., Netflix, Disney+, Apple TV+, Prime Video).
- **Sleep Timer:** Sets a timer for the TV to turn off automatically.
- **Instant Replay:** Jumps back a few seconds in supported content.
- **Options:** Accesses additional settings or information for the current content.



The Roku TV home screen interface, showing recommended content and various streaming applications.

The Roku home screen provides access to all your streaming channels, inputs, and settings. Use the D-Pad on your remote to navigate through the menu options on the left and the app grid on the right. You can customize the order of your channels by highlighting an app, pressing the * (Options) button, and selecting 'Move channel'.

Streaming Content

Roku TV™

Unbelievably free live TV

Enjoy 500+ channels with live news and weather, sports coverage, and more—totally free.



The image displays three promotional cards for Roku TV channels. The first card on the left features two women, with the ABC News Live logo at the bottom. The middle card shows a strawberry cake on a stand, with the Roku Original logo and 'THE GREAT AMERICAN BAKING SHOW' text below. The third card on the right shows sushi rolls with flowers, with the Roku Original logo and 'MORIMOTO'S SUSHI MASTER' text below. At the bottom of the entire graphic, the text '24/7 streaming channels' is written in white on a purple background.

Roku TV interface promoting free live TV channels, featuring examples like ABC News Live, The Great American Baking Show, and Morimoto's Sushi Master.

Access a wide range of streaming services and free content through the Roku Channel Store. The Roku platform offers over 500 free channels, including live television, movies, and news. Use the 'Search' function on the home screen to find specific titles or channels.

Audio Features

Booms, whispers, and everything in between

With enhanced audio quality and features, your shows and movies will be extra pleasing to the ears.



Roku Hiro TV displaying the home screen with various streaming apps, emphasizing enhanced audio quality.

The TV features enhanced audio quality. For private listening, you can pair Bluetooth headphones directly with the TV. Navigate to **Settings > Remotes & devices > Bluetooth devices > Pair new device** to connect your headphones.

MAINTENANCE

Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, abrasive pads, or solvents.

Software Updates

The Roku TV automatically checks for and installs software updates when connected to the internet. To manually check for updates, go to **Settings > System > Software update**

TROUBLESHOOTING

Problem	Solution
No power	Ensure the power cable is securely connected to both the TV and a working electrical outlet. Try a different outlet.
No picture, but sound is present	Check the input source. Press the Home button on the remote and select the correct input. Ensure all HDMI cables are securely connected.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. If using external audio, verify connections and settings.
Cannot connect to Wi-Fi	Verify your Wi-Fi password. Restart your router and modem. Go to Settings > Network > Set up connection to reconfigure.
Remote control not working	Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.

SPECIFICATIONS

Model Name	H32C2C4
Screen Size	32 Inches
Display Technology	LED
Resolution	720p
Refresh Rate	60 Hz
Operating System	Roku OS
Connectivity Technology	Bluetooth, HDMI, Optical Audio, USB, Wi-Fi
Total Number of HDMI Ports	3
Total USB Ports	1
Product Dimensions (D x W x H)	3.2"D x 28.3"W x 16.9"H
Item Weight	7.5 Pounds
Voltage	120 Volts (AC)
Mounting Type	Table Mount
Color	Black

WARRANTY INFORMATION

This Roku Hiro TV is covered by a **90-day Replacement Warranty**. Please retain your proof of purchase for any warranty claims. For detailed terms and conditions, refer to the warranty documentation included with your product or visit the official Roku support website.

SUPPORT

For further assistance, troubleshooting guides, or to contact customer support, please visit the official Roku support website. You can find comprehensive FAQs and contact information there.