

COOCHEER COOCH-5111G

COOCHEER 58CC 4-in-1 Gas Powered Weed Eater Brush Cutter

MODEL: COOCH-5111G

Instruction Manual

1. Safety Information

- Always prioritize safety when operating power tools. Failure to follow safety instructions can result in serious injury or death.
- **Read the Manual:** Thoroughly read and understand this entire instruction manual before assembly, operation, or maintenance.
 - **Personal Protective Equipment (PPE):** Always wear appropriate safety gear, including safety glasses or goggles, hearing protection, heavy-duty gloves, long pants, and sturdy, non-slip footwear.
 - **Clear Work Area:** Ensure the work area is clear of bystanders, children, and pets. Remove any debris or obstacles that could be thrown by the cutting head.
 - **Fuel Handling:** Handle gasoline with extreme care. Store fuel in an approved container, away from ignition sources. Mix fuel outdoors in a well-ventilated area. Do not smoke while fueling.
 - **Inspect Before Use:** Before each use, inspect the unit for loose parts, damaged components, or fuel leaks. Do not operate if damaged.
 - **Proper Grip:** Maintain a firm grip on both handles during operation.
 - **Avoid Kickback:** Be aware of potential kickback, especially when using blade attachments.
 - **Engine Hot:** The engine and muffler become very hot during operation and can cause burns. Allow the engine to cool before touching or storing.

2. Package Contents

- Verify that all items are present and undamaged upon opening the package.
- 58CC Gas Powered Engine Unit
 - Main Shaft Assembly
 - Adjustable U-Handle

- Shoulder Strap
- String Trimmer Head (2 units)
- 3-T Blade (for dense grass)
- 40-T Circular Blade (for heavy brush)
- Safety Guard
- Fuel Mixing Bottle
- Tool Kit (wrenches, screwdriver)
- User Manual

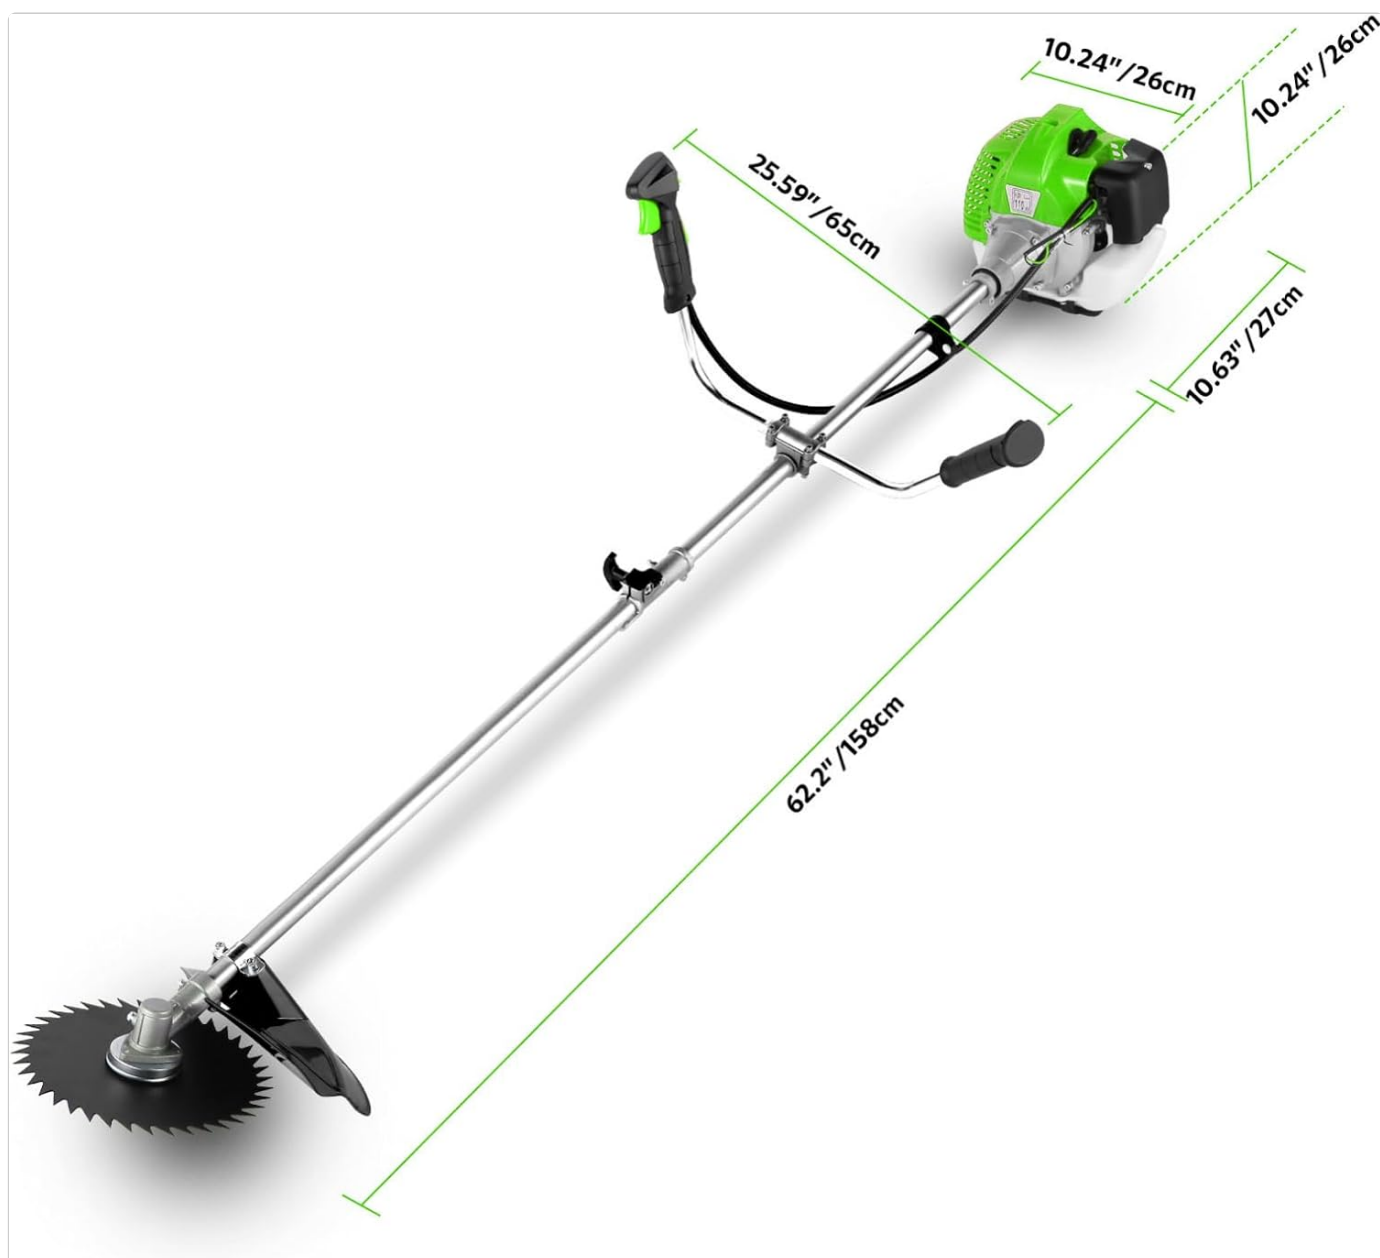 


Image: All components included in the package, laid out for inspection.

3. Assembly

 
Follow these steps to assemble your 4-in-1 Gas Powered Weed Eater Brush Cutter.

1. **Attach the U-Handle:** Secure the adjustable U-handle to the main shaft using the provided clamps and bolts. Ensure it is

positioned comfortably for balanced operation.



Brush Cutter

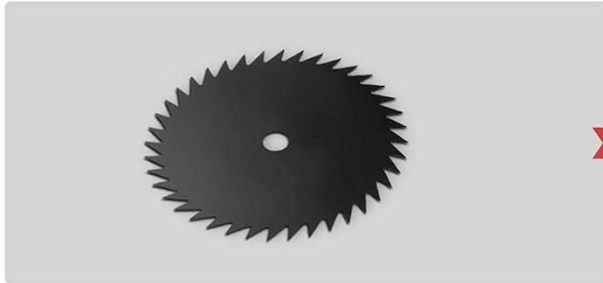

Blade for Dense Grass



2 x Dual Line for Lawn Grass



4 in 1

Suitable for a variety of plants to

Image: Close-up of the adjustable U-handle attachment point on the shaft.

2. **Install the Safety Guard:** Attach the safety guard to the lower part of the shaft, above the cutting head. This guard protects against flying debris.



**SPECIAL ERGONOMIC DESIGN
GOLDEN ANGLE PROVIDE MAXIMUM COMFORT**

STRAIGHT SHAFT & ADJUSTABLE U-HANDLE

Image: Close-up of the safety guard attached to the lower shaft.

3. Attach the Desired Trimming Head:

- Disassemble the screw with the tool.
- Fix shaft and align holes.
- Install the blade (if using a blade).
- Put on the washer.
- Put on the cover.
- Tighten the screw securely.



Upgrade the product detail to ensure stability and improve safety & reliability

Image: Step-by-step visual guide for installing the various trimmer heads.

4. Setup

Proper setup ensures optimal performance and safety.

1. **Fuel Mixing:** This unit requires a 2-cycle engine oil and gasoline mixture at a ratio of **25:1** (25 parts gasoline to 1 part 2-cycle engine oil). Use fresh, unleaded gasoline with an octane rating of 87 or higher. Mix thoroughly in the provided fuel mixing bottle.



Upgrade the product detail to ensure stability and improve safety & reliability

Image: Step-by-step visual guide for the engine starting procedure.

5. Operating Instructions

This 4-in-1 tool is designed for various landscaping tasks. Always wear appropriate PPE and maintain a safe distance from others.

- **Ergonomic Design:** The unit features an ergonomic design with an adjustable two-hand control for balance and reduced effort. The adjustable shoulder strap provides maximum comfort and weight distribution.
- **Throttle Control:** The high safety valve throttle protection switch prevents accidental starts. Familiarize yourself with the throttle and stop switch before operation.


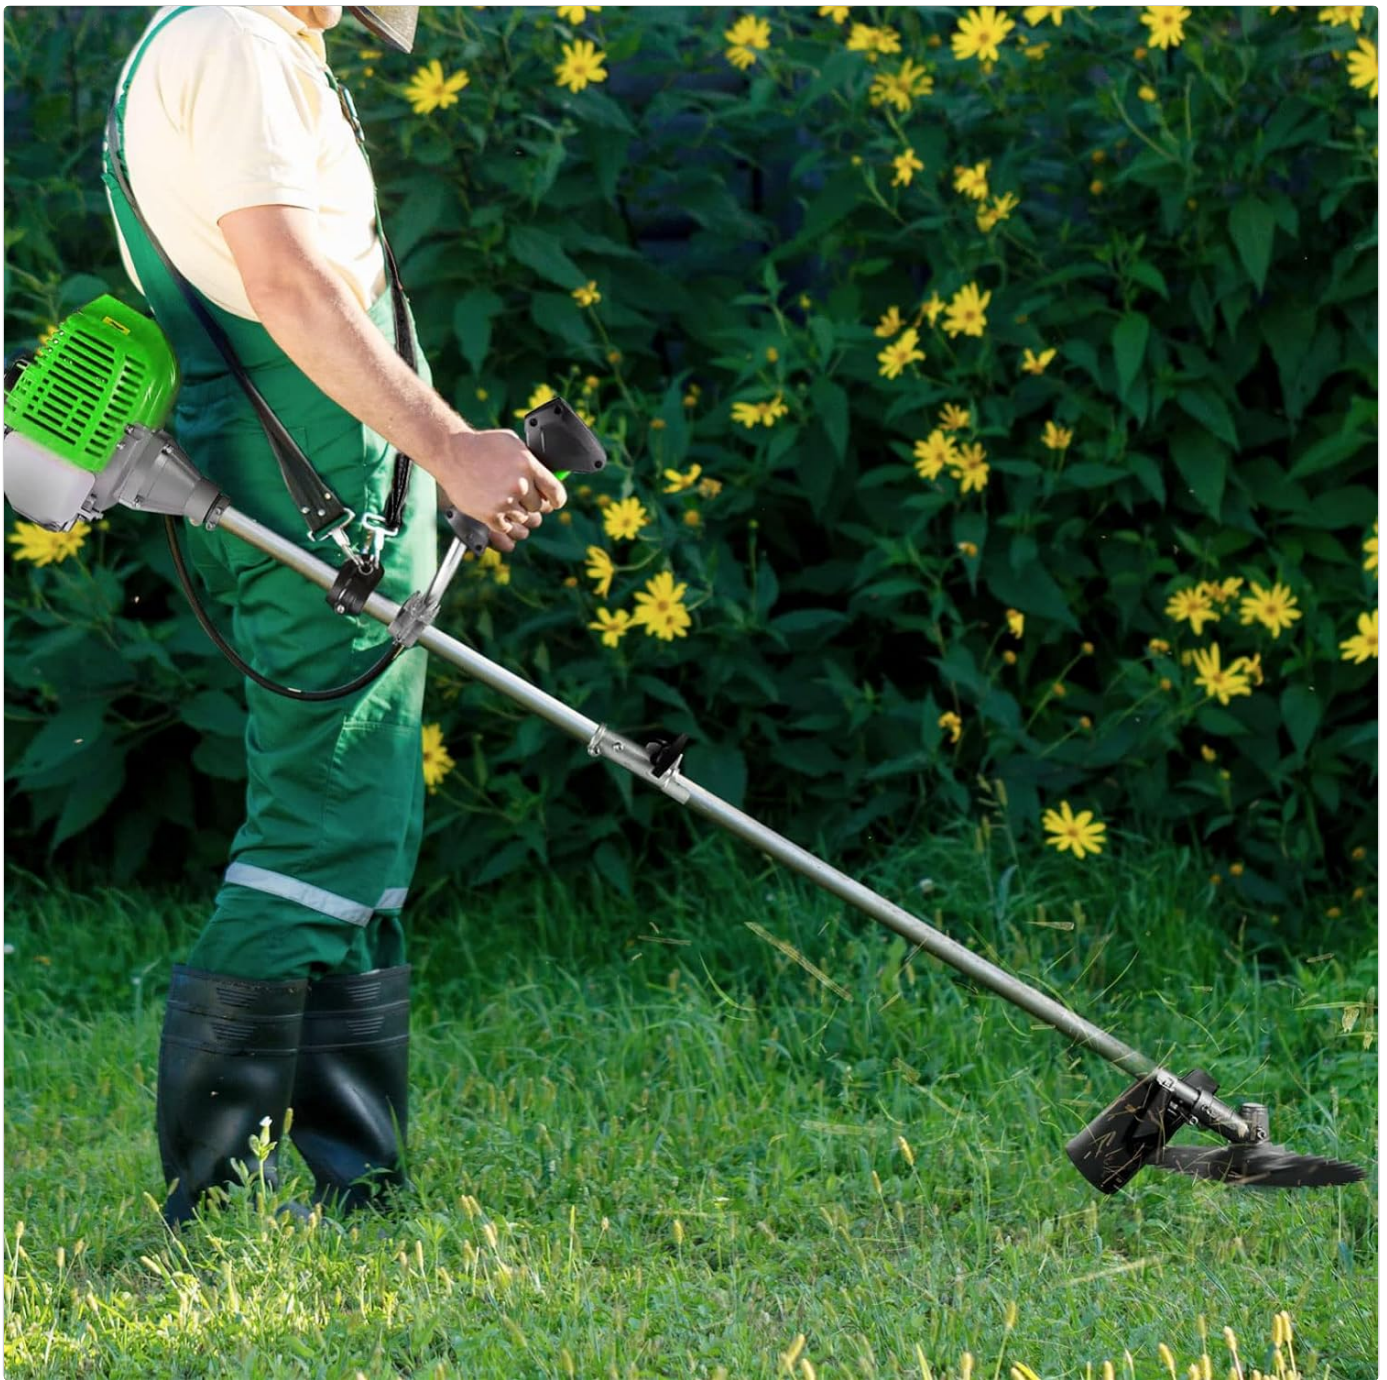 


Image: Operator using the brush cutter with ergonomic U-handle and shoulder strap, demonstrating proper posture.

Using the Attachments:

 - **String Trimmer Head (9.8-inch cutting width):** Ideal for trimming grass and light weeds around obstacles, fences, and garden beds. Move the trimmer in a sweeping motion.

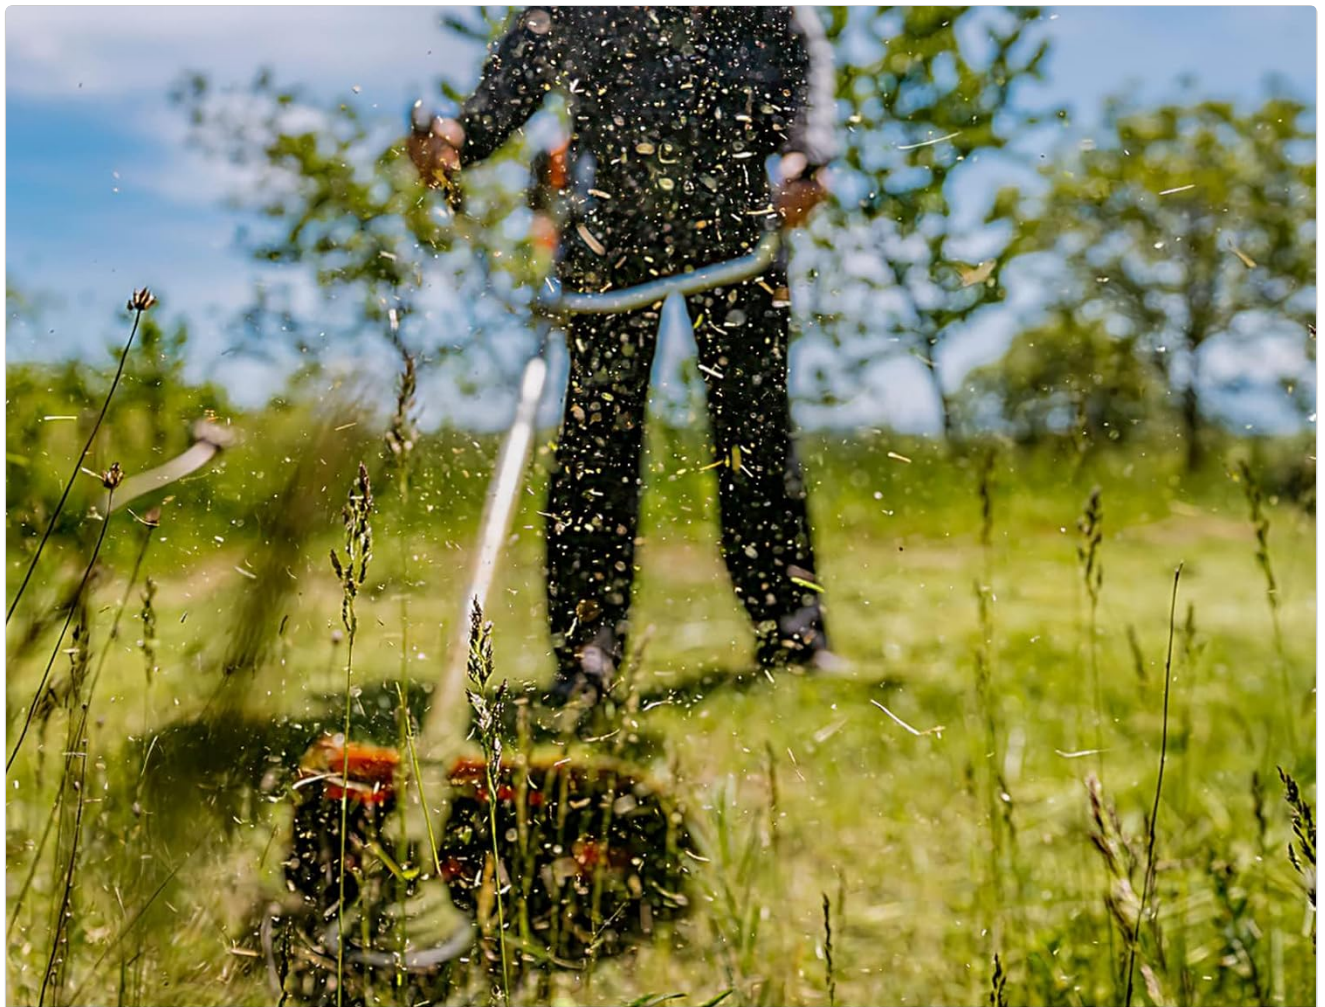

58CC 2-STROKE GAS WEED EATER

MAXIMUM SPEED UP TO 9300r/min

POWERFUL & EASY TO START & STABLE & LESS VIBRATION

Image: Operator using the string trimmer attachment to clear tall grass.

- **3-T Blade (18.5-inch cutting width):** Suitable for cutting dense grass and thicker weeds. Use a steady, controlled motion, allowing the blade to do the work.
- **40-T Circular Blade (18.5-inch cutting width):** Designed for heavy brush, small saplings, and overgrown areas. Exercise extreme caution when using this blade. Maintain a firm grip and be aware of potential kickback.



Image: Visual comparison of cutting results using different trimmer heads on various types of vegetation.



Image: Operator using the brush cutter in a field, demonstrating the product's reach and application.

Official Product Videos:

Your browser does not support the video tag.

Video: A demonstration of the COOCHEER gas-powered weed eater in action, showcasing its versatility with different attachments on various types of vegetation.

Your browser does not support the video tag.

Video: A detailed demonstration of the 58cc gas-powered weed eater, highlighting its 4-in-1 brush cutter capabilities and effectiveness on different terrains.

6. Maintenance

Regular maintenance ensures the longevity and safe operation of your tool.

- **Cleaning:** After each use, clean the cutting head, guard, and engine housing to remove grass, dirt, and debris.
- **Spark Plug:** Inspect the spark plug periodically. Clean or replace if fouled or worn.
- **Air Filter:** Clean the air filter regularly, especially in dusty conditions. A clogged air filter can reduce engine performance.
- **Fuel Filter:** Check and replace the fuel filter as needed to prevent fuel system blockages.
- **Blade Maintenance:** Inspect blades for sharpness and damage. Sharpen or replace dull/damaged blades. Always wear heavy gloves when handling blades.
- **Fuel Storage:** When storing the unit for extended periods, drain the fuel tank or use a fuel stabilizer to prevent fuel degradation.

7. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Engine won't start	No fuel, incorrect fuel mix, fouled spark plug, clogged air filter	Check fuel level and mix. Clean/replace spark plug. Clean air filter. Follow starting procedure carefully.
Loss of power during operation	Clogged air filter, incorrect fuel mix, dull blade/line, engine overheating	Clean air filter. Verify fuel mix. Replace/sharpen cutting attachment. Allow engine to cool.
Excessive vibration	Loose cutting head, damaged blade/line, bent shaft	Tighten cutting head. Replace damaged blade/line. If shaft is bent, contact customer service.

8. Specifications

- **Brand:** COOCHEER
- **Model Number:** COOCH-5111G
- **Power Source:** Gas Powered
- **Engine Displacement:** 58CC
- **Cutting Width (String Trimmer):** 9.8 Inches
- **Cutting Width (Blades):** 18.5 Inches
- **Product Dimensions (L x W):** 73"L x 10.2"W
- **Fuel Mix Ratio:** Gasoline:Engine oil 25:1
- **Required Assembly:** Yes

9. Warranty and Support

Your satisfaction with COOCHEER products is our priority. If you encounter any issues with your gas brush cutter, our customer service team is available to assist you.

For support, please refer to the contact information provided on the product packaging or the official COOCHEER website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GPVJLM4J>

More documents and user manuals: <https://manuals.plus/>