



Manuals.plus /

- › SENIX /
- › SENIX 201cc 22" Variable Speed Self-Propelled Gas Lawn Mower Instruction Manual

## SENIX R-H6

# SENIX 201cc 22" Variable Speed Self-Propelled Gas Lawn Mower Instruction Manual

Model: R-H6

[Safety Information](#)   [Setup](#)   [Operation](#)   [Maintenance Support](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty &](#)

## INTRODUCTION

---

This manual provides essential instructions for the safe assembly, operation, maintenance, and troubleshooting of your SENIX 201cc 22" Variable Speed Self-Propelled Gas Lawn Mower. Please read this manual thoroughly before using the product to ensure proper function and safety.



The SENIX 201cc 22" Variable Speed Self-Propelled Gas Lawn Mower, shown with an included oil bottle and a view of the mower folded for storage.

## Key Features:

- **201cc Powerful Engine:** Equipped with a robust 201cc four-stroke OHV engine for efficient cutting.
- **3-in-1 Cutting System:** Offers side discharge, mulching, and rear bagging options.
- **Adjustable Cutting Height:** Features 6-position height adjustment from 1.25 to 4 inches.
- **Foldable Design:** Folds for upright storage, saving up to 70% of floor space without fuel or oil leaks.
- **Self-Propelled Variable Speed:** Rear-wheel drive adjusts speed for effortless maneuvering across varied terrain.

## SAFETY INFORMATION

Always prioritize safety when operating power equipment. Failure to follow safety instructions can result in serious injury or death.

- Read the entire manual before operation.

- Wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and sturdy footwear.
- Ensure the work area is clear of debris, children, and pets.
- Never operate the mower in wet conditions or on excessively steep slopes.
- Turn off the engine and disconnect the spark plug wire before performing any maintenance or clearing blockages.
- Handle fuel with extreme care. Store fuel in approved containers and refuel in a well-ventilated area with the engine off and cool.
- Do not modify the mower or its safety features.

## SETUP AND ASSEMBLY

---

The mower requires minimal assembly. Follow these steps before first use:

1. **Unboxing:** Carefully remove the mower from its packaging. It is recommended to have assistance due to the weight of the unit.
2. **Handlebar Assembly:** Attach the handlebar to the mower body. Secure it using the provided hardware, typically two hand knobs that screw onto bolts. Ensure all connections are tight.
3. **Add Engine Oil:** Locate the oil fill cap, which often has an integrated dipstick. Fill the engine with the supplied motor oil until the dipstick indicates the correct level. Do not overfill.
4. **Add Fuel:** Fill the fuel tank with fresh, unleaded gasoline. Ensure the engine is cool and the area is well-ventilated. Do not fill the tank completely; leave space for fuel expansion.

# EASY TO STORE

Save up to **70%** floor space by storing the mower upright, with no fuel or oil leaks.



Ensure engine oil is added before starting the mower. The oil fill cap often includes a dipstick for checking levels.

## OPERATING INSTRUCTIONS

### Starting the Engine:

1. Ensure the fuel tank is adequately filled and the oil level is correct.
2. Prime the engine if necessary (refer to engine specific instructions if a primer bulb is present).
3. Engage the safety bail lever on the handlebar.
4. Pull the starter cord firmly and smoothly until the engine starts. Allow the engine to warm up for a few moments.

### Adjusting Cutting Height:

The mower features a single lever for 6-position height adjustment, ranging from 1.25 inches to 4 inches. Adjust the lever to your desired cutting height before starting the mowing operation.



**SIDE DISCHARGE**



**MULCHING**



**BAGGING**

The single lever allows for quick and easy adjustment of the cutting height across 6 positions, from 1.25 to 4 inches.

### **Using the Self-Propelled Feature:**

This mower is equipped with variable speed rear-wheel self-propulsion. To engage, simply squeeze the self-propel lever on the handlebar. The speed can be adjusted to match your walking pace and terrain conditions, reducing effort during operation.



The variable speed self-propelled feature assists in maneuvering the mower, especially on uneven terrain or inclines.

### 3-in-1 Cutting System:

Your mower offers three versatile cutting modes:

- **Side Discharge:** For areas where grass clippings do not need to be collected. Attach the side discharge chute.
- **Mulching:** Recycles grass clippings back into the lawn as natural fertilizer. Ensure the mulching plug is installed and the side discharge chute is removed.
- **Rear Bagging:** Collects grass clippings in the attached grass bag for easy disposal. Ensure the grass bag is properly installed and the mulching plug is removed.



# **VARIABLE SPEED & REAR WHEEL DRIVE SELF PROPELLED**

It Saves You Effort And Makes Your Work Easier

Choose between side discharge, mulching, or rear bagging based on your lawn care needs.



# 6

## POSITION-ADJUSTABLE MOWING HEIGHT

1.25inch



4 inch



The mower features a large capacity grass bag for efficient collection of clippings.

### MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

- **Engine Maintenance:** Refer to the engine manufacturer's manual for specific oil change intervals, air filter cleaning/replacement, and spark plug maintenance.
- **Blade Care:** Regularly inspect the cutting blade for sharpness and damage. Sharpen or replace as needed. Always disconnect the spark plug wire before working on the blade.
- **Cleaning:** After each use, clean grass clippings and debris from the mower deck and chassis.



For quick cleaning, connect a garden hose to the wash port (if equipped) to rinse grass clippings from the chassis and blades.

### **Storage:**

For long-term storage, especially during off-season, prepare the mower as follows:

- Drain the fuel or add a fuel stabilizer.
- Change the engine oil.
- Clean the mower thoroughly.
- Store in a dry, protected area. The mower's foldable design allows for upright storage, saving significant floor space without risk of fuel or oil leaks.



# QUICK CLEANING

Simply turn on the water hose to easily rinse the grass clippings off the chassis and blades

The mower can be folded and stored upright to save up to 70% of floor space, preventing fuel or oil leaks.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Engine does not start	No fuel, old fuel, spark plug issue, low oil.	Check fuel level, use fresh fuel, inspect/replace spark plug, ensure oil is at correct level.
Self-propel feature not working	Drive belt dislodged or damaged.	Inspect the drive belt. If dislodged, carefully re-seat it around the pulleys. If damaged, replace it. Contact customer service if unsure.
Poor cutting performance / Grass clogs under deck	Dull blade, excessive grass height, wet grass, cutting deck clogged.	Sharpen or replace blade. Avoid mowing excessively tall or wet grass. Clean the underside of the deck regularly. Ensure the correct cutting mode (mulching plug/bag/chute) is set.
Engine sputters or runs rough	Stale fuel, clogged air filter, dirty spark plug.	Drain old fuel and refill with fresh. Clean or replace air filter. Clean or replace spark plug.

## SPECIFICATIONS

---

<b>Brand</b>	SENIX
<b>Model Number</b>	R-H6
<b>Engine Displacement</b>	201cc
<b>Power Source</b>	Gas Powered
<b>Cutting Width</b>	22 Inches
<b>Cutting Height Adjustment</b>	6 Positions (1.25 to 4 Inches)
<b>Operation Mode</b>	Automatic (Self-Propelled)
<b>Drive Type</b>	Rear Wheel Drive, Variable Speed
<b>Material</b>	Metal
<b>Item Weight</b>	66 Pounds
<b>Product Dimensions (D x W x H)</b>	37.5" x 23.75" x 15.87"
<b>Assembly Required</b>	Yes

## WARRANTY AND SUPPORT

---

SENIX products are designed for durability and performance. For warranty information and customer support, please refer to the documentation included with your product or visit the official SENIX website.

### Protection Plans:

Extended protection plans may be available for your product:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly renewal policy)

For specific details on coverage and terms, please consult the plan provider.

### Customer Service:

Should you encounter any issues or require assistance with parts, contact SENIX customer service. They are available to help with inquiries and support.