

[Manuals.plus](#) /

› [Skyworth](#) /

› SKYWORTH SS532 3.1CH Soundbar User Manual

Skyworth SS532

SKYWORTH SS532 3.1CH Soundbar User Manual

Model: SS532

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your SKYWORTH SS532 3.1CH Soundbar System. Please read this manual thoroughly before using the product and retain it for future reference. The SKYWORTH SS532 is a 3.1 channel soundbar system designed to enhance your audio experience. It features a soundbar with three satellite drivers and a wireless subwoofer, delivering a maximum output of 630W. Key features include Dolby Audio support, Bluetooth 5.3 connectivity, and multiple input options.



Image 1.1: The SKYWORTH SS532 Soundbar and its wireless subwoofer.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent electric shock, fire, or damage to the product:

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Ensure the power cord is not pinched or walked on.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.
- Keep the product away from direct sunlight, heat sources, and strong magnetic fields.

3. PACKAGE CONTENTS

Verify that all items are included in the package:

- SKYWORTH SS532 Soundbar
- Wireless Subwoofer
- Remote Control
- Aux Cable
- Power Cable
- Wall Mounting Kits
- User Manual (this document)
- Warranty Card

4. PRODUCT FEATURES

The SKYWORTH SS532 Soundbar System offers a range of features for an enhanced audio experience:

- **630W Max Output:** Delivers powerful sound suitable for various entertainment needs.
- **3.1 Channel Audio:** Features three satellite drivers and a 6.5-inch subwoofer for clear highs, rich mids, and deep bass.
- **Dolby Audio Support:** Integrated Dolby Digital Plus and Dolby Digital for cinema-quality sound.
- **Bluetooth 5.3:** Provides stable wireless audio streaming from compatible devices up to 10 meters.
- **Multiple Input Options:** Supports USB (MP3), AUX, HDMI ARC, and Optical inputs for versatile connectivity.
- **Selectable EQ Modes:** Optimize sound performance with modes for Music, Movie, News, and Sport.
- **Integrated RGB Lighting:** Dynamic lighting on the soundbar to complement your listening environment.



Image 4.1: Overview of the soundbar's main features.

Bluetooth 5.3

Stable Connection

Long Range up to 10m



Image 4.2: The soundbar and subwoofer providing 3.1 channel audio.



Image 4.3: Information regarding Dolby Audio support.

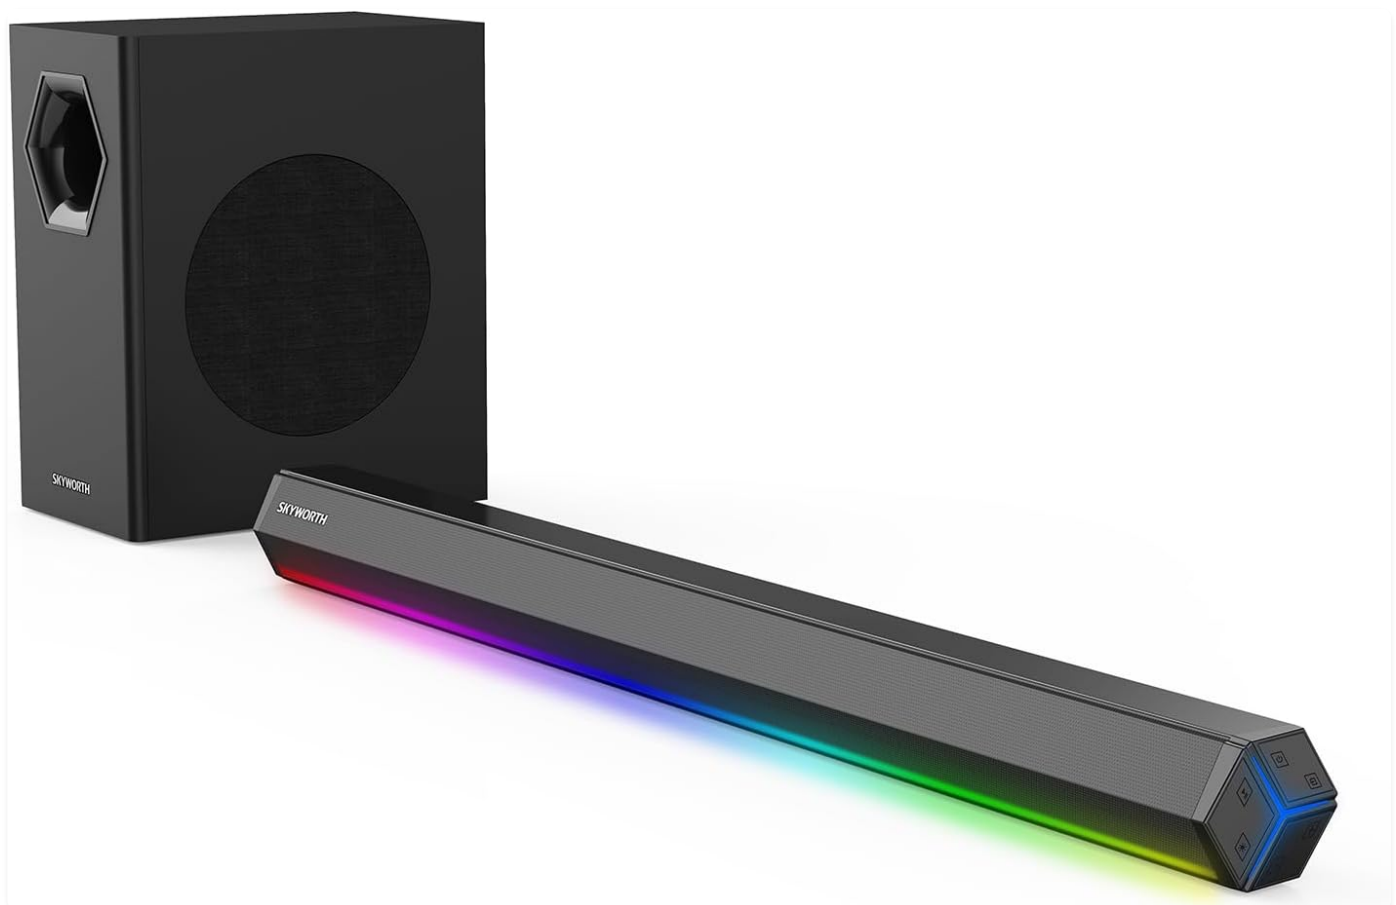


Image 4.4: The soundbar's Bluetooth 5.3 connectivity.



Image 4.5: The soundbar features integrated RGB lighting.

5. SETUP AND CONNECTIONS

5.1 Initial Placement

Place the soundbar on a stable, flat surface in front of your TV or mount it on the wall using the provided wall-mounting kit. Position the wireless subwoofer in a suitable location within the room, ensuring it is within range of the soundbar for wireless connection.

5.2 Power Connection

1. Connect the power cable to the AC IN port on the soundbar.
2. Connect the other end of the power cable to a wall outlet.
3. Repeat the process for the wireless subwoofer.

5.3 Audio Connections

Choose one of the following methods to connect the soundbar to your audio source (e.g., TV, DVD player):

- **HDMI ARC:** Connect an HDMI cable from the soundbar's HDMI ARC port to your TV's HDMI ARC port. This allows audio to be sent from the TV to the soundbar and often enables TV remote control of the soundbar volume.
- **Optical:** Connect an optical cable from the soundbar's OPTICAL IN port to your TV's optical digital audio output.
- **AUX:** Connect the provided AUX cable from the soundbar's AUX IN port to the audio output (headphone jack or RCA stereo output) of your device.
- **USB:** Insert a USB drive containing MP3 audio files into the soundbar's USB port.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the Power button on the soundbar or remote control to turn the unit on or off.

6.2 Source Selection

Press the Source button on the soundbar or remote control repeatedly to cycle through the available input sources (HDMI ARC, Optical, AUX, USB, Bluetooth).

6.3 Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the soundbar or remote control to adjust the volume level.

6.4 Bluetooth Pairing

1. Select Bluetooth mode on the soundbar. The LED display will indicate "BT".
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "SKYWORTH SS532" from the list.
4. Once paired, the soundbar will emit an audible confirmation, and you can stream audio from your device.

6.5 EQ Modes

Press the EQ button on the remote control to switch between preset equalizer modes:

- **Music:** Optimized for music playback.
- **Movie:** Enhanced for cinematic audio.
- **News:** Clearer voice reproduction for news and broadcasts.
- **Sport:** Optimized for sports broadcasts.



Image 6.1: The four selectable EQ modes.

6.6 Remote Control

The included remote control allows full functionality from a distance. Familiarize yourself with the button layout for convenient operation.



Image 6.2: The remote control for the soundbar system.

7. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar system, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar and subwoofer. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure that the ventilation openings are not blocked to prevent overheating.
- **Storage:** If storing the unit for an extended period, disconnect it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cables are securely connected to both the soundbar/subwoofer and a working power outlet.
No sound	Incorrect input source selected; Volume too low; Audio cable not connected properly	Select the correct input source. Increase volume. Check audio cable connections (HDMI ARC, Optical, AUX).
Bluetooth pairing failure	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in Bluetooth mode. Move device closer. Restart both devices.
Subwoofer not connecting wirelessly	Subwoofer not powered on; Out of range	Ensure subwoofer is powered on. Move subwoofer closer to the soundbar.
Remote control not working	Batteries depleted; Obstruction between remote and soundbar	Replace remote control batteries. Remove any obstructions. Ensure remote is pointed at the soundbar's sensor.

9. SPECIFICATIONS

Detailed technical specifications for the SKYWORTH SS532 Soundbar System:

Feature	Specification
Model Name	SS532
Speaker Type	Soundbar with Wireless Subwoofer
Audio Output	3.1 Channel, Dolby Audio
Speaker Maximum Output Power	630 Watts
Frequency Response	20 KHz (Soundbar: 45Hz-20KHz)
Connectivity Technology	Auxiliary, Bluetooth, HDMI ARC, Optical, USB
Bluetooth Version	5.3 (Range up to 10m)

Feature	Specification
Driver Unit	Soundbar: 3 x (58x90mm); Subwoofer: 1 x 6.5"
Input Impedance	6Ω*3 + 3Ω*1
Signal-to-Noise Ratio (S/N)	≥72dB
Distortion	≤1% (1K/1W)
Power Supply	110V-240V ~ 50/60Hz
Dimensions (Soundbar)	960L x 87D x 78H mm
Dimensions (Subwoofer)	190W x 367H x 306D mm
Item Weight	6.5 Kilograms
Color	Black
Special Features	Dolby Enabled, Stereo Pairing, USB Port, RGB Lighting
Included Components	Aux Cable, Power Cable, Remote, User Manual, Wall Mounting Kits, Warranty Card
Country of Origin	China

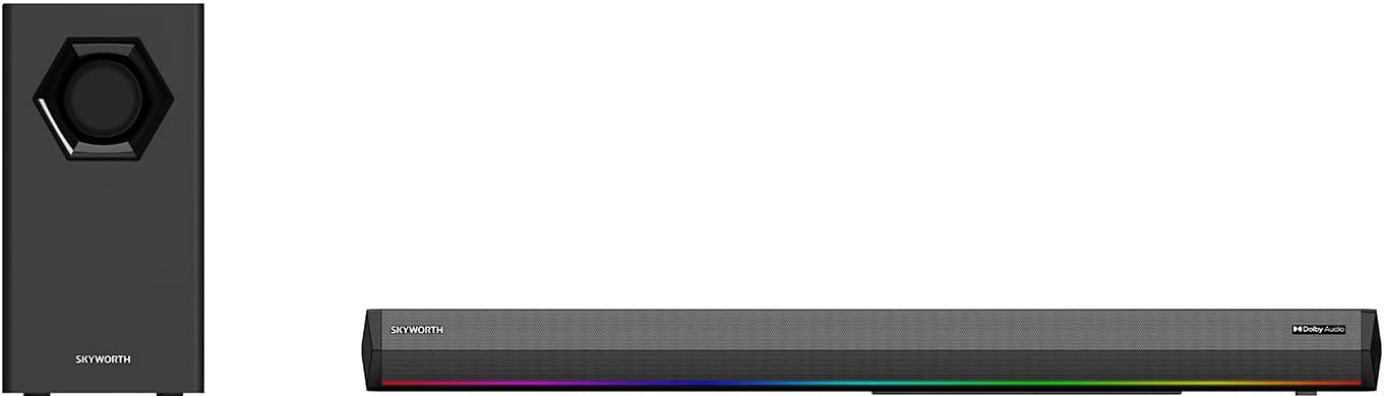


Image 9.1: Visual representation of product parameters.

10. WARRANTY AND SUPPORT

This SKYWORTH SS532 Soundbar System comes with a **1-Year Manufacturer's Warranty**. Please refer to the included Warranty Card for detailed terms and conditions.

For technical support, service inquiries, or warranty claims, please contact your local Skyworth customer service or authorized dealer. Keep your purchase receipt and warranty card as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I fix the wireless subwoofer on my Skyworth SS532 3.1CH Soundbar if it is no longer pairing?

If your Skyworth SS532 wireless subwoofer is failing to pair with the soundbar, please follow these troubleshooting steps based on the user manual: Check Power: Ensure the power cable is securely connected to both the...

[Read full answer](#)