

Silonn SLICM63ST-US

Silonn Nugget Ice Maker SLICM63ST-US User Manual

Model: SLICM63ST-US | Brand: Silonn

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Silonn Nugget Ice Maker. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your ice maker, follow these basic precautions:

- Read all instructions before use.
- Connect to properly grounded outlets only.
- Do not immerse cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Use only potable water.
- Do not use for other than intended use.

3. WHAT'S IN THE BOX

- Ice Maker
- Ice Basket
- Ice Scoop

4. SPECIFICATIONS

Feature	Detail
Brand	Silonn
Model Name	SLICM63ST-US
Product Dimensions	16.38"D x 6.69"W x 13.46"H
Capacity	1.8 Liters (Water Tank)
Wattage	145 watts
Voltage	120 Volts
Refrigerant	R600a
Material Type	Stainless Steel
Daily Ice Production	Up to 40 lbs/24H
First Ice Cycle	8 minutes

5. SETUP

1. **Unpacking:** Carefully remove the ice maker from its packaging. Ensure all components listed in "What's in the Box" are present. Remove any protective film or tape.
2. **Placement:** Place the ice maker on a flat, stable surface away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit. The ultra-slim design (6.69"W) allows it to fit on most countertops.

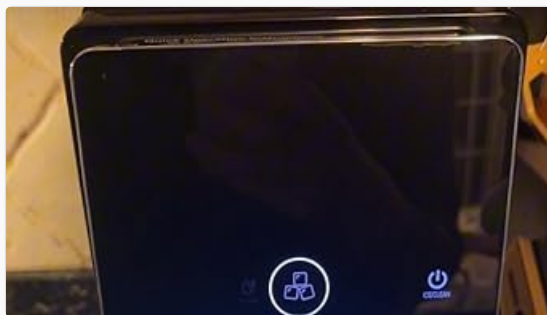


Figure 5.1: The Silonn Nugget Ice Maker's compact dimensions, ideal for countertop placement.

3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance" section for detailed cleaning instructions.
4. **Fill Water Tank:** Pull out the removable water tank located at the front. Fill it with potable water up to the MAX line. Distilled or purified water is recommended to prevent mineral buildup.



Figure 5.2: Refilling the removable 1.8L water tank.

5. **Connect Power:** Plug the ice maker into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

1. **Control Panel Overview:** The ice maker features an ergonomic, large control panel with intuitive icons for easy operation.

Simple Operation

Intuitive interface for easy control



Figure 6.1: Intuitive control panel for the Silonn Nugget Ice Maker.

2. Making Ice:

- Ensure the water tank is filled.
- Press the "ICE" button once to activate the ice-making function. The indicator will illuminate white.
- The first batch of nugget ice will be ready in approximately 8 minutes. The machine can produce up to 40 lbs of ice per day.
- The "ICE FULL" indicator will light up when the 1.2L ice storage bin is full.
- The "ADD WATER" indicator will light up when the water tank needs refilling.

3. Dispensing Ice:

- Place your cup under the ice dispenser.
- Press the ice dispensing button (cup icon) once to start dispensing ice automatically.
- Press the button again to stop dispensing. This auto-drop ice technology ensures hygienic ice access without scooping.



Figure 6.2: Hygienic ice dispensing directly into your cup.

7. MAINTENANCE

1. Self-Cleaning Function:

- Ensure the water tank is filled with clean water (or a vinegar solution for descaling).
- Press and hold the "Clean" button (power button for 5 seconds) for 5 seconds to activate the 20-minute self-cleaning process. The cleaning indicator will light up.
- After the cycle, drain the water from the machine using the drainage tubes located at the back.

SELF-CLEANING FUNCTION

No hassle, always clean



Figure 7.1: Internal view highlighting the self-cleaning mechanism.

2. Manual Cleaning:

- Unplug the appliance.
- Remove the water tank and top cover for easy access to the interior.
- Clean all accessible parts with a soft cloth and mild detergent. Rinse thoroughly.
- Ensure all parts are dry before reassembling and operating.

3. Draining the Machine:

- Locate the drainage tubes at the back of the unit.
- Place a container under the tubes or direct them into a sink.
- Remove the plugs from the tubes to drain the water.
- Once drained, replace the plugs securely.

8. TROUBLESHOOTING

If you encounter any issues with your Silonn Nugget Ice Maker, please refer to the following common troubleshooting steps before contacting customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Ice maker not producing ice.	Water tank empty.	Refill the water tank.
"ADD WATER" indicator is on.	Water level is low.	Add water to the tank.
"ICE FULL" indicator is on.	Ice bin is full.	Remove ice from the bin.
Ice is not dispensing.	Ice bin is empty or dispenser is jammed.	Check ice level, clear any obstructions, or restart dispensing.
Unusual noise during operation.	Normal operation sounds (compressor, water pump) or unit not level.	Ensure unit is on a level surface. If noise persists and is abnormal, contact support.

9. OFFICIAL PRODUCT VIDEOS

Silonn Ice Maker: Exploring All Your Ice Types

Your browser does not support the video tag.

This video demonstrates the various types of ice that Silonn ice makers can produce, including nugget, bullet, and clear ice, showcasing their versatility for different beverages.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Silonn website. Keep your purchase receipt as proof of purchase.

Contact Information:

- Website: [Silonn Official Store](#)
- Customer Service: Refer to your product packaging or the official website for the most current contact details.