

## **BILT HARD THA-0364**

# **BILT HARD 2465 PSI Electric Pressure Cleaner Instruction Manual**

## **INTRODUCTION**

---

Welcome to your new BILT HARD 2465 PSI Electric Pressure Cleaner. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting. Please read this manual thoroughly before using the product and retain it for future reference.

## **IMPORTANT SAFETY INSTRUCTIONS**

---

- Always wear appropriate personal protective equipment, including eye protection, during operation.
- Ensure the GFCI safety plug is functioning correctly before each use. The plug is designed to cut power within 0.1 seconds if a leakage is detected.
- Keep children and pets away from the operating area.
- Never point the spray gun at people or animals.
- Do not operate the pressure washer in an enclosed space.
- Always disconnect power before performing any maintenance or cleaning.
- Do not use with flammable liquids.
- Ensure all connections are secure to prevent leaks.

## **PACKAGE CONTENTS**

---

### **Main Unit and Accessories**

- BILT HARD Electric Pressure Cleaner Unit
- Spray Gun
- Stainless Steel Wand
- 20-ft High-Pressure Hose
- 35-ft GFCI-Protected Power Cord
- 0.9L Built-in Detergent Tank
- Nozzle Set (15°, 25°, 40°, Soap, and Turbo Nozzles)
- Nozzle Holder



**IPX5** Waterproof  
**2465 PSI** Pressure Washer

Depth	Width	Height	Weight
<b>15.07"</b>	<b>12.59"</b>	<b>33.67"</b>	<b>21.56 LBS</b>

An overview of the pressure cleaner's key components, highlighting the carry handle, on/off switch, flat-free wheels, spray gun, 20-foot high-pressure hose, 35-foot power cord with GFCI plug, and stainless steel wand.

## ASSEMBLY INSTRUCTIONS

### Step 1: Attach the High-Pressure Hose

Connect one end of the 20-ft high-pressure hose to the outlet on the pressure washer unit. Ensure it is securely tightened. Connect the other end of the high-pressure hose to the spray gun.

### Step 2: Install the Spray Wand and Nozzle

Attach the stainless steel wand to the spray gun. Push and twist until it locks into place. Select the desired quick-connect nozzle (e.g., 25° green nozzle for general cleaning) and insert it into the end of the spray wand until it clicks securely.



Illustration of the various quick-connect nozzles and their corresponding spray patterns: 15° for high pressure, 25° for medium pressure, 40° for low pressure, and the black nozzle for soap application.

### Step 3: Connect Water Supply

Connect a standard garden hose (not included) to the water inlet on the pressure washer unit. Ensure the connection is tight to prevent leaks. Turn on the water supply completely before starting the unit.

### Step 4: Fill Detergent Tank (Optional)

If using detergent, remove the cap from the 0.9L built-in detergent tank and fill it with an appropriate pressure washer detergent. Replace the cap securely.



## Built-In Soap Tank

0.9L Capacity  
Easy Soap Application

The built-in 0.9-liter detergent tank, designed for easy soap application during cleaning tasks.

### OPERATING THE PRESSURE CLEANER

---

#### Before Starting

- Ensure all connections are secure and the water supply is fully open.
- Plug the 35-ft GFCI-protected power cord into a suitable grounded outlet. Press the "RESET" button on the GFCI plug.

#### Starting the Unit

- Hold the spray gun firmly and point it in a safe direction.
- Squeeze the trigger on the spray gun to release any trapped air and allow water to flow steadily.
- Turn the On/Off switch on the pressure washer unit to the "ON" position.
- The motor will start, and pressure will build.

#### Using Nozzles

The pressure cleaner includes five quick-connect nozzles for various tasks:

- **15° (Yellow):** High-pressure, narrow spray for stubborn dirt on hard, non-delicate surfaces.

- **25° (Green):** Medium-pressure, wider spray for general cleaning of decks, patios, and vehicles.
- **40° (White):** Low-pressure, wide spray for delicate surfaces or rinsing.
- **Soap (Black):** For applying detergent at low pressure. Activates the detergent tank.
- **Turbo Nozzle:** Provides a rotating stream for intense cleaning of heavily soiled areas.

To change nozzles, turn off the pressure washer and release any residual pressure by squeezing the spray gun trigger. Pull back the collar on the wand and insert the desired nozzle until it clicks.



## Stainless Steel Lance

### With 1/4" Quick Connector

The stainless steel lance with a 1/4-inch quick connector, providing extended reach and precise control for various cleaning applications.

### Applying Detergent

- Ensure the detergent tank is filled.
- Attach the black "Soap" nozzle to the spray wand.
- Start the pressure washer. Detergent will be drawn from the tank and mixed with the water at low pressure.
- Apply detergent to the desired surface, allowing it to soak for a few minutes (refer to detergent instructions).
- Switch to a high-pressure nozzle (e.g., 25° or 15°) to rinse the surface thoroughly.

### Stopping the Unit

- Release the spray gun trigger.
- Turn the On/Off switch on the pressure washer unit to the "OFF" position.
- Turn off the water supply.
- Squeeze the spray gun trigger to release any remaining pressure in the system.
- Disconnect the garden hose and power cord.



The BILT HARD Electric Pressure Cleaner delivering a powerful spray, demonstrating its effectiveness for vehicle cleaning.

## MAINTENANCE AND STORAGE

---

### After Each Use

- Flush the system with clean water to remove any detergent residue.
- Disconnect all hoses and accessories.
- Clean the nozzles and spray wand to prevent blockages.
- Wipe down the unit with a damp cloth.

### Long-Term Storage

- Store the pressure washer in a dry, frost-free location.

- Ensure all water is drained from the pump and hoses to prevent freezing damage.
- Utilize the onboard storage for hoses, cords, and nozzles to keep everything organized.
- The corrosion-resistant pump ensures low-maintenance, long-lasting performance.

## TROUBLESHOOTING GUIDE

---

Problem	Possible Cause	Solution
Unit does not start	Power cord not plugged in or GFCI tripped	Plug in power cord, press GFCI "RESET" button.
No water pressure	Water supply off or restricted	Ensure water supply is fully open and hose is not kinked. Check water inlet filter for blockages.
Pulsating pressure	Air in pump or clogged nozzle	Bleed air from pump by running unit with trigger open until steady flow. Clean or replace nozzle.
Water leaks	Loose connections or damaged O-rings	Tighten all hose connections. Inspect and replace any damaged O-rings.

## PRODUCT SPECIFICATIONS

---

- **Model Number:** THA-0364
- **Maximum Pressure:** 2465 PSI
- **Maximum Flow Rate:** Up to 1.76 GPM
- **Detergent Tank Capacity:** 0.9 Liters
- **Hose Length:** 20 Feet (High-Pressure)
- **Power Cord Length:** 35 Feet (GFCI Protected)
- **Waterproof Rating:** IPX5
- **Product Dimensions (L x W x H):** 17.17" x 14.88" x 20.87"
- **Manufacturer:** BILT HARD

## WARRANTY AND CUSTOMER SUPPORT

---

BILT HARD provides customer support and responds to any issues within 24 hours. For warranty claims or technical assistance, please contact the manufacturer directly.

The product includes a GFCI safety plug designed to cut power within 0.1 seconds if leakage is detected, ensuring a worry-free experience.