

[Manuals.plus](#) /

› [Decofy](#) /

› Decofy Fluted 6-Drawer Dresser (Model DC-DG08) Instruction Manual

Decofy DC-DG08

Decofy Fluted 6-Drawer Dresser Instruction Manual

Model: DC-DG08

1. PRODUCT OVERVIEW

The Decofy Fluted 6-Drawer Dresser (Model DC-DG08) is a modern storage solution designed for bedrooms and living spaces. It features a unique fluted wave-style drawer front design, rounded corners, and gold-finished handles. This dresser provides six spacious drawers for organized storage and a wide top surface for display items.



Image 1.1: Front view of the Decofy Fluted 6-Drawer Dresser.

Key Features:

- **Fluted Drawer Design:** Textured wave-style drawer fronts with rounded corners.
- **Six Spacious Drawers:** Provides ample storage for clothing, blankets, and other essentials.
- **Compact Design:** Measures 47 inches wide, suitable for various room sizes.
- **Sturdy Construction:** Crafted from engineered wood for durability.
- **Modern Gold Handles:** Minimalist gold metal handles complement the natural wood finish.

Your browser does not support the video tag.

Video 1.1: Overview of the Fluted 6-Drawer Dresser for Bedroom, showcasing its design and features.

2. SAFETY INFORMATION

To prevent serious or fatal crushing injuries from furniture tip-over, this product must be permanently secured to the wall with the included anti-tip device. Always follow the installation instructions carefully. Never allow children to climb or hang on drawers, doors, or shelves.

Anti-Tip Device Installation:

1. Locate the anti-tip kit provided in the package.
2. Position the dresser in its desired location.
3. Attach the anti-tip bracket to the back of the dresser using the provided screws.
4. Mark the corresponding position on the wall, ensuring it aligns with a wall stud if possible.
5. Drill a pilot hole in the wall and secure the wall bracket using the appropriate hardware (e.g., wall anchors for drywall, screws for studs).
6. Connect the dresser bracket to the wall bracket with the strap or cable provided, ensuring it is taut.



Image 2.1: Illustration of the anti-tipping device securing the dresser to the wall.



Image 2.2: Dual Anti-Tip Design for enhanced stability.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the parts list in your assembly guide. If any parts are missing or damaged, contact customer support immediately.

Typical Components Include:

- Dresser panels (top, bottom, sides, back, drawer fronts, drawer sides/back)
- Drawer slides and runners
- Gold-finished handles
- Assembly hardware (screws, dowels, cam locks, etc.)
- Anti-tip kit
- Instruction manual

4. SETUP AND ASSEMBLY

Assembly is required for this dresser. It is recommended that two adults assemble this unit. An electric screwdriver may expedite the process. All components are labeled for easier identification. Follow the step-by-step instructions provided in the included assembly guide.

Preparation:

- Clear a spacious, clean, and flat work area.
- Lay out all parts and hardware, matching them against the parts list.
- Gather necessary tools: Phillips head screwdriver, hammer (optional), and an electric drill/screwdriver (recommended).

Assembly Steps:

1. Begin by assembling the main frame of the dresser, connecting the side panels to the bottom and back supports.
2. Install the drawer slides onto the interior of the dresser frame. Ensure they are level and securely fastened.
3. Assemble each drawer box. Attach the drawer sides, back, and bottom to the drawer front.

4. Attach the gold handles to the drawer fronts.
5. Insert the assembled drawers into the dresser frame, ensuring smooth operation.
6. Install the anti-tip device as described in the Safety Information section.

Your browser does not support the video tag.

Video 4.1: Detailed installation video for the 6-Drawer Dresser, demonstrating assembly steps.

5. OPERATION

The Decofy Fluted 6-Drawer Dresser is designed for easy and functional use. Each drawer operates on smooth glides for quiet and effortless opening and closing.

Using the Drawers:

- To open a drawer, gently pull the gold handle.
- To close a drawer, push it firmly until it is fully seated within the dresser frame.
- Avoid overloading drawers. Each drawer has a weight capacity of approximately 33 lbs (15 kg).
- Distribute weight evenly within the drawers to maintain balance and prevent strain on the glides.

Spacious Storage

Thoughtfully Designed



25+ Toys



40+ Shirt



70+ Socks



40+ Snacks



50+ Underwear



30+ Tissue



Image 5.1: Example of spacious storage within the dresser.

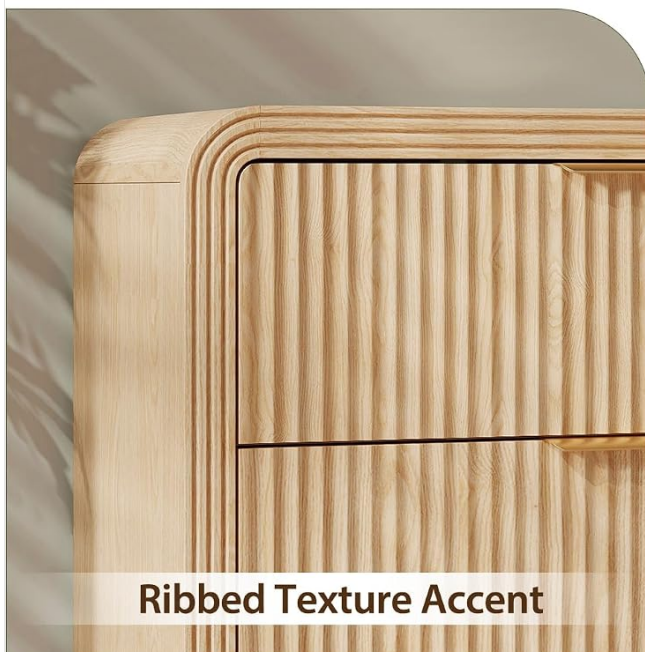


Image 5.2: Details of the dresser's smooth curved edges, quiet drawer glides, ribbed texture, and secure handles.

6. MAINTENANCE

Proper care and maintenance will help preserve the appearance and longevity of your Decofy dresser.

Cleaning Instructions:

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the lacquered finish.
- Promptly wipe up spills to prevent staining or water damage.

General Care:

- Keep the dresser away from direct sunlight and heat sources to prevent warping or fading.

- Avoid placing hot items directly on the surface; use coasters or protective pads.
- Periodically check all hardware and tighten if necessary to ensure stability.

7. TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned drawer slides, loose screws, or obstruction.	Check that drawer slides are correctly installed and all screws are tight. Ensure no items are blocking the drawer's path.
Dresser feels wobbly.	Loose assembly hardware or uneven floor.	Tighten all assembly screws. Ensure the dresser is on a level surface. Verify the anti-tip device is securely installed.
Gaps between drawer fronts.	Incorrectly installed drawer fronts or frame components.	Review assembly instructions for drawer front attachment. Ensure all frame components are flush.

If these solutions do not resolve the issue, please contact Decofy customer support.

8. SPECIFICATIONS

- **Brand:** Decofy
- **Model Name:** DC-DG08
- **Material:** Engineered Wood
- **Finish Type:** Lacquered
- **Product Dimensions (D x W x H):** 15.75" x 47.24" x 31.5" (40cm x 120cm x 80cm)
- **Number of Drawers:** 6
- **Item Weight:** 95.7 Pounds (43.4 kg)
- **Assembly Required:** Yes
- **Color:** Natural Oak

PRODUCT DIMENSION

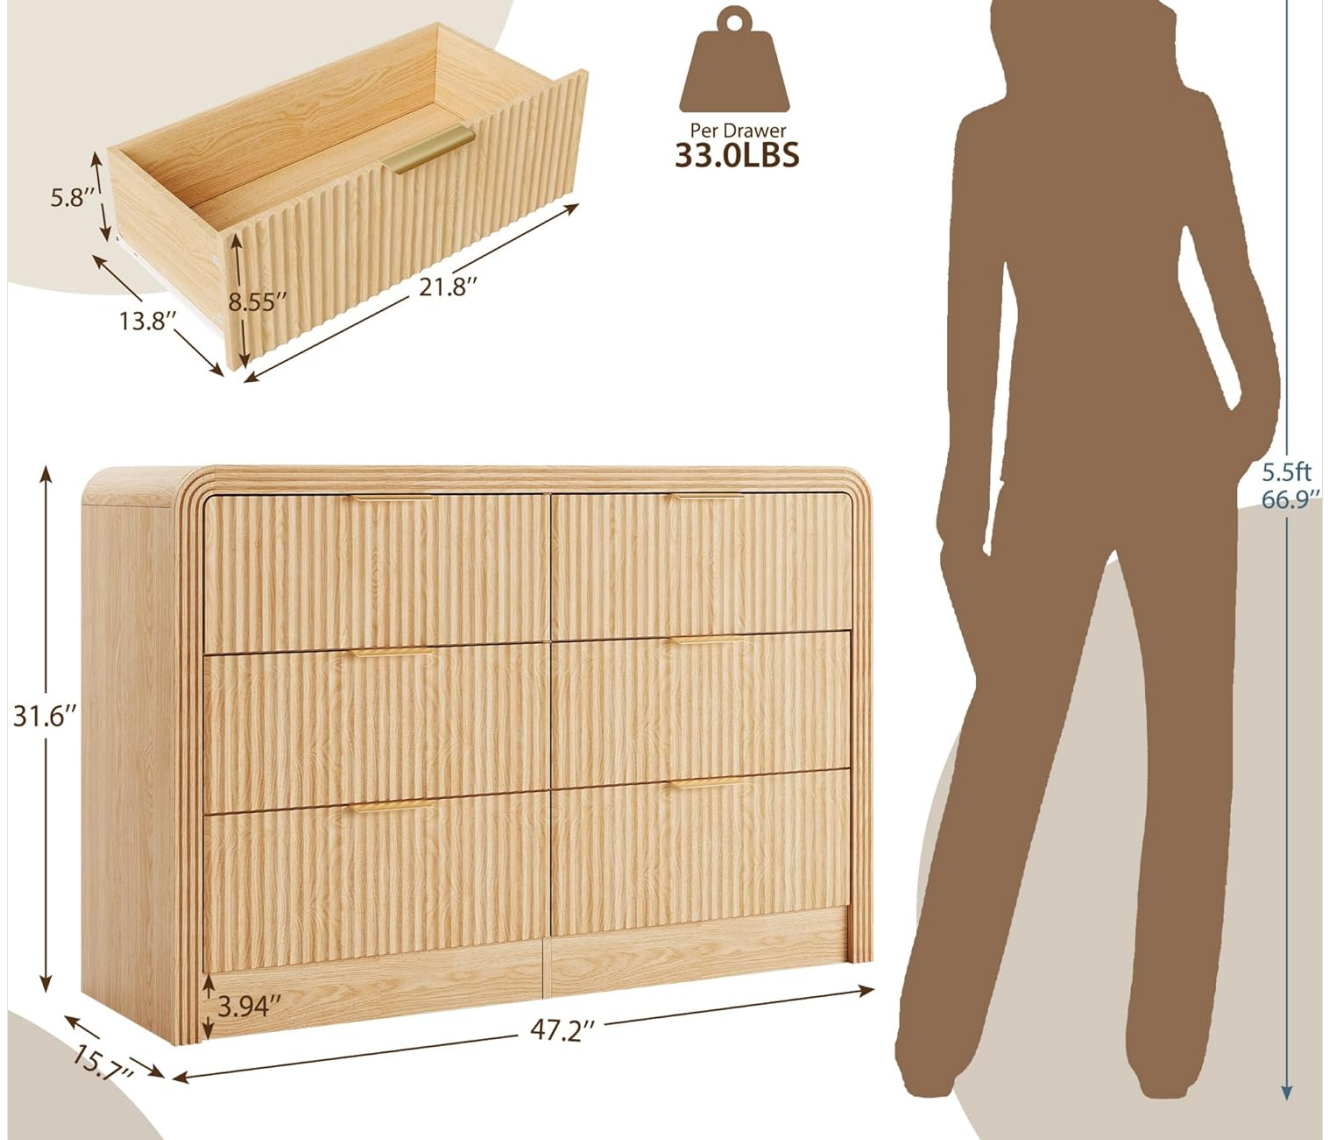


Image 8.1: Product dimensions and individual drawer capacity.

9. WARRANTY AND SUPPORT

Decofy products are manufactured with quality and care. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Decofy website. If you require assistance with assembly, missing parts, or have any questions regarding your dresser, please contact Decofy customer support through the retailer where the product was purchased or via the contact information provided on the Decofy brand store.

For additional information and support, visit the [Decofy Store on Amazon](#).

