

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige Air Duo 12L Air Fryer Instruction Manual

Prestige Air Duo

Prestige Air Duo 12L Air Fryer

INSTRUCTION MANUAL

Product Overview

The Prestige Air Duo is a 12-liter dual-basket air fryer designed for efficient and healthier cooking. It features a space-saving vertically stacked design, a foldable control panel, and a see-through glass window for monitoring food. This appliance utilizes rapid air circulation technology to cook food with significantly less oil.



Image: The Prestige Air Duo 12L Air Fryer, showcasing its sleek black design, dual cooking baskets (one open), and the digital control panel on the side. The top basket is closed, and the bottom basket is pulled out, revealing the cooking grate.

Setup

1. **Unpacking:** Carefully remove the air fryer and all packaging materials from the box. Ensure all components are present.
2. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it near flammable materials or heat sources.
3. **Initial Cleaning:** Before first use, clean the cooking baskets and the interior of the appliance with a damp cloth and mild detergent. Rinse thoroughly and dry completely. Do not immerse the main unit in water.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230V AC).

Included Components:

- 1 Air Fryer Unit
- User Manual (this document)

- Warranty Card

Operating Instructions

Control Panel:

The Prestige Air Duo features a digital touch control panel that can be folded away when not in use for a sleek appearance. It includes separate displays for each basket's time and temperature, along with various preset menu options.

Basic Operation:

1. **Power On:** Plug in the appliance. The control panel will illuminate.
2. **Basket Selection:** Select Basket 1 or Basket 2 to set its cooking parameters independently.
3. **Temperature Adjustment:** Use the temperature controls (up/down arrows) to set the desired cooking temperature between 100°C and 200°C.
4. **Time Adjustment:** Use the time controls (up/down arrows) to set the desired cooking duration.
5. **Start/Pause:** Press the Start/Pause button to begin or temporarily stop the cooking process.

Using Preset Menu Options:

The air fryer comes with 12 convenient preset menu options for common dishes. To use a preset:

1. Select the desired basket.
2. Press the 'Menu' button repeatedly or use the dedicated preset icons to cycle through the 12 options. The display will show the default time and temperature for the selected preset.
3. You can adjust the time and temperature manually even after selecting a preset, if needed.
4. Press the Start/Pause button to begin cooking.

Dual Basket Functionality (Match & Sync):

The Prestige Air Duo allows for independent cooking in its two 6L baskets or synchronized cooking.

- **Independent Cooking:** Set different temperatures and times for Basket 1 and Basket 2 to cook two different dishes simultaneously.
- **Match Function:** Use the 'Match' button to quickly apply the settings (time and temperature) from one basket to the other, ensuring both baskets cook identically.
- **Sync Function:** The 'Sync' function allows both baskets to finish cooking at the same time, even if they started at different times or with different cooking durations. This is useful for coordinating meal readiness.

The see-through glass window allows you to monitor the cooking progress without opening the baskets, helping to maintain consistent cooking temperatures.

Maintenance

Cleaning:

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The cooking baskets and nonstick grates should be cleaned with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.

3. *Note: The baskets are not dishwasher safe.*
4. Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. The air fryer features smoke-free technology for cleaner cooking, reducing the need for extensive cleaning of surrounding areas.

Storage:

Ensure the appliance is clean and dry before storing. The foldable control panel can be tucked away to maintain a clutter-free and sleek look, optimizing counter space.

Troubleshooting

- Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household's circuit breaker.
- Food Not Cooking Evenly:** Ensure not to overfill the baskets. Shake or flip food items halfway through cooking for best results. Verify the correct temperature and time settings are applied.
- White Smoke from Appliance:** This may occur if fatty foods are cooked or if there is residual grease from previous use. Clean the baskets and heating element thoroughly. If smoke persists, unplug immediately.
- Unusual Odor:** A slight odor may be present during the first few uses. This is normal and will dissipate. Ensure proper ventilation.
- Control Panel Not Responding:** Unplug the appliance, wait a few minutes, then plug it back in to reset the system.

Specifications

Model Name	Air Duo
Model Number	8901365414230
Capacity	12 Liters (6L per basket)
Output Wattage	2850 Watts
Voltage	230 Volts (AC)
Control Method	Digital Touch
Min Temperature Setting	100 Degrees Celsius
Max Temperature Setting	200 Degrees Celsius
Product Dimensions (D x W x H)	48.5D x 32.5W x 39.5H Centimeters
Item Weight	12 Kilograms
Material	Plastic
Nonstick Coating	Yes
Dishwasher Safe	No
Air Frying Technology	Rapid Air Circulation

Warranty and Support

Your Prestige Air Duo Air Fryer comes with a **1 Year Warranty** from the date of purchase.

For warranty claims, technical assistance, or customer support, please contact:

- **Customer Care Number:** 080-46824000
- **Email:** Customercare@tkprestige.com
- **Manufacturer:** TTK Prestige Ltd, Registered Office: Plot No. 38, SIPCOT Industrial Complex, Hosur-635 126, India.