

[Manuals.plus](#) /

› [EAST OAK](#) /

› EAST OAK 1.3L Cordless Electric Lunch Box User Manual

EAST OAK 1.3L

EAST OAK 1.3L Cordless Electric Lunch Box User Manual

Model: 1.3L | Brand: EAST OAK

1. INTRODUCTION

The EAST OAK 1.3L Cordless Electric Lunch Box is designed to provide warm meals without the need for external power outlets. It features a high-performance 59.2Wh lithium battery, offering approximately 2 hours of continuous heating followed by 1 hour of automatic heat preservation. This manual details the proper use and care of your electric lunch box.



Image: The EAST OAK Cordless Electric Lunch Box, highlighting its battery-powered operation for heating meals anywhere.

Key features include dual heating modes (Smart Reservation and Instant-On), a memory function for settings, and a spacious 1.3L capacity. The inner container is made of food-grade 304 stainless steel, and components are designed for easy cleaning.

2. SETUP

2.1 Initial Charging

Before first use, fully charge the lunch box using the provided charger. The numeric display will indicate the battery level. A full charge ensures optimal performance.

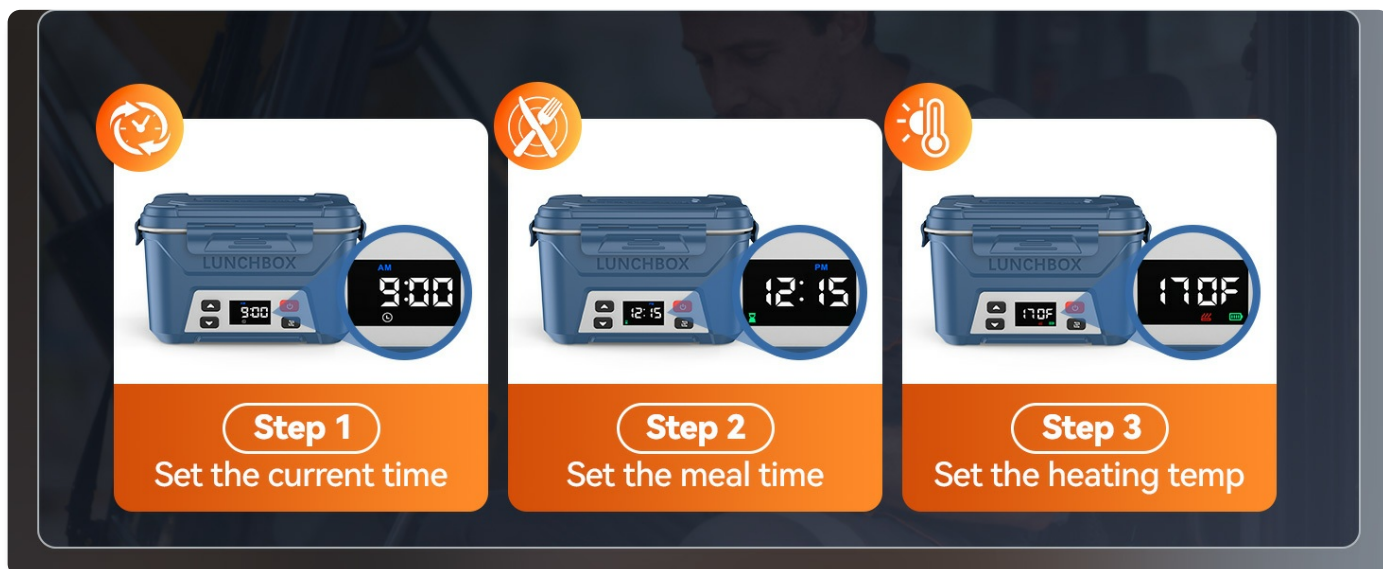


Image: The lunch box display showing battery level and charging status indicators.

2.2 Setting Current Time

Upon first use, calibrate the internal clock to the actual current time. This is essential for the Smart Reservation Mode to function correctly.

1. **Step 1:** Set the current time.
2. **Step 2:** Set your desired meal time.
3. **Step 3:** Set the heating temperature.



Image: Visual guide for setting the current time, meal time, and heating temperature on the lunch box.

3. OPERATING INSTRUCTIONS

3.1 Smart Reservation Mode

This mode allows you to set a target meal time. The lunch box will automatically calculate and begin heating approximately 2 hours in advance to ensure your food is warm when needed. Ensure the lunch box is turned on at least 2 hours before your set meal time for the preheating cycle to initiate.



Image: Illustrates the convenience of setting a specific mealtime rather than calculating a countdown.



Image: The lunch box automatically preheating 2 hours before the scheduled meal time.

3.2 Instant Heating Mode

For immediate heating, activate the Instant Heating mode with a single tap. This mode initiates a full 2-hour heating cycle, adapting to spontaneous meal schedules.

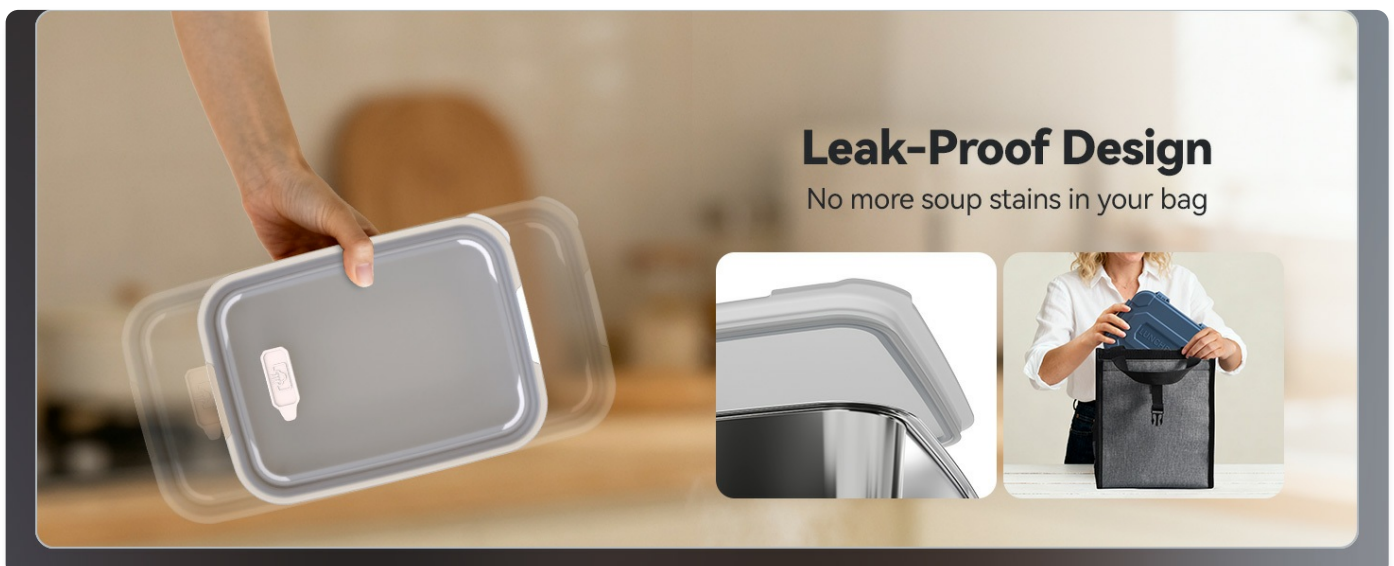 


Image: The lunch box displaying 'HEAT' in Immediate Heating Mode.

3.3 Memory Function

The lunch box saves your last set meal time and temperature. When powered on again, these settings are automatically loaded, eliminating the need for repeated input.

Memory Function

No re-setting, saves last settings



Current time



Mealtime



Temperature

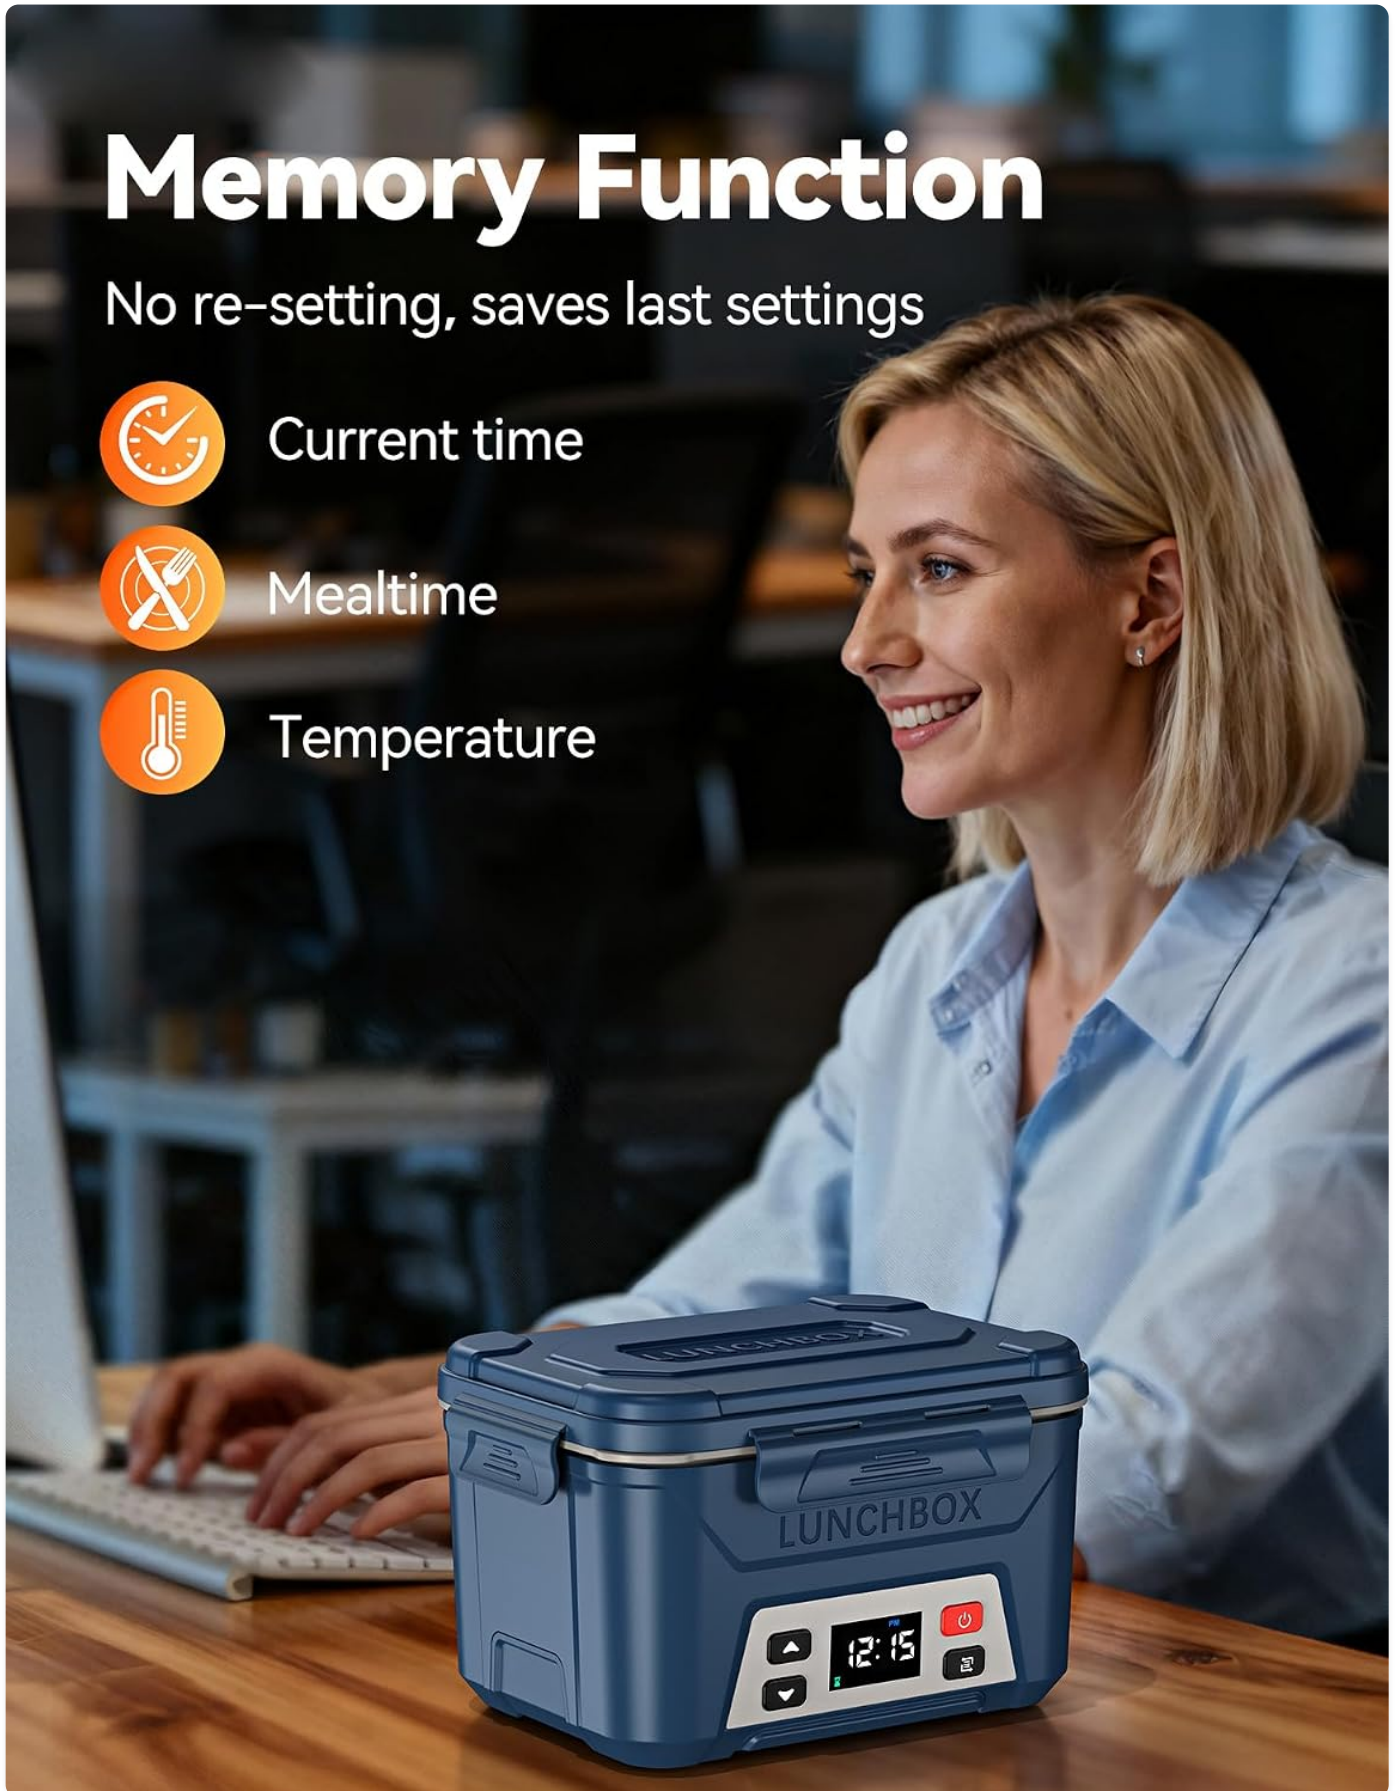 


Image: The lunch box's memory function retains previous settings for current time, mealtime, and temperature.

3.4 Heating Tips for Optimal Results

- **Temperature Display:** The screen shows the heating plate's temperature. The food's core temperature will be slightly lower, designed to prevent overheating and preserve taste.
- **Boost Efficiency:** Use the included insulation bag to improve heating speed and heat retention.
- **Even Heating:** For drier foods, add a small amount of water to create steam. Ensure food is in contact with the bottom of the container. For large items, adding a small amount of sauce or water can promote thermal circulation.
- **Thorough Heating:** If more thorough heating is desired, moderately increase the temperature or set the reservation time 20-30 minutes earlier.
- **Frozen Foods:** For best results, thaw frozen food in the refrigerator overnight before heating.

Max Temp 220°F

Heats food thoroughly



Image: The lunch box heating food, demonstrating thorough and even heat distribution up to 220°F.

Automatic Keep Warm

Stays warm after heating

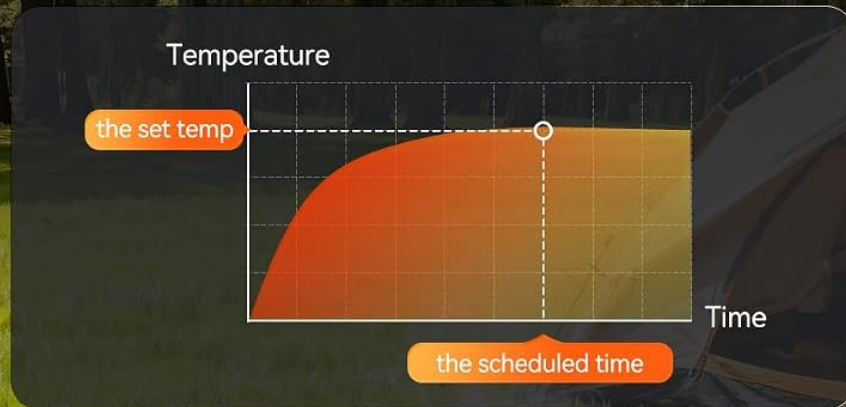


Image: The automatic keep warm function maintains food temperature after the heating cycle is complete.

4. MAINTENANCE AND CARE

4.1 Cleaning

The inner container, removable divider, and utensils are dishwasher safe for convenient cleaning. Ensure all components

are dry before reassembly.

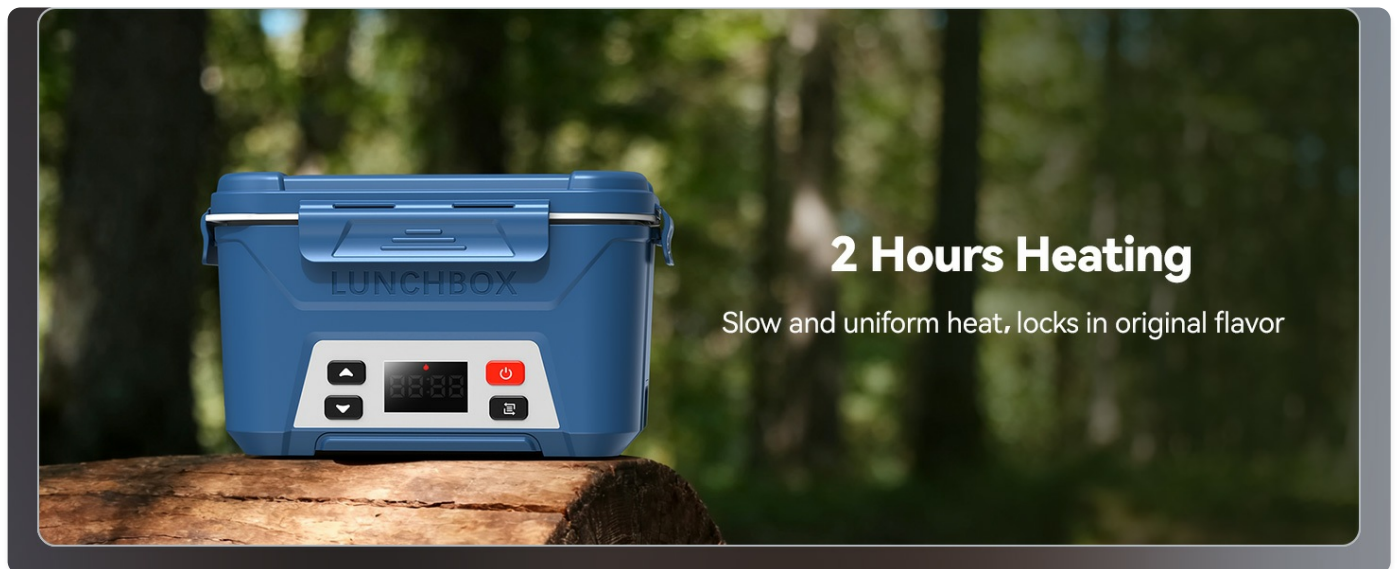


Image: Dishwasher-safe components of the lunch box, including the inner container and divider.

4.2 Leak-Resistant Design

The lunch box is designed with a silicone seal ring to prevent leaks during transport. Ensure the lid is properly secured to maintain the seal.

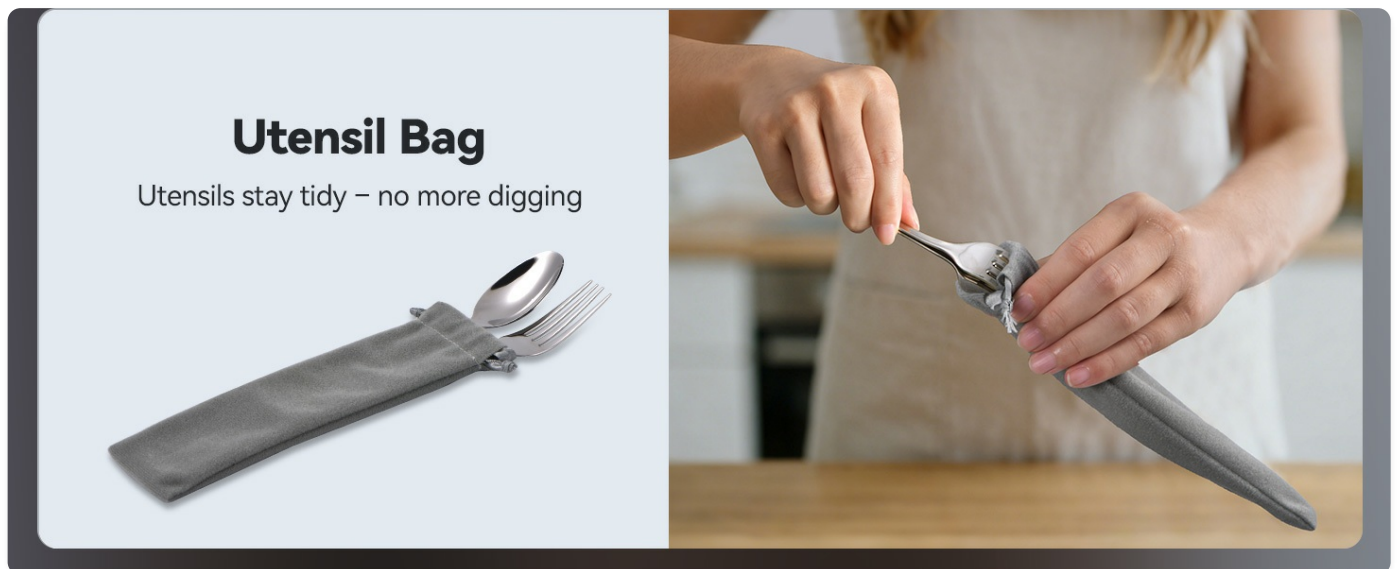


Image: Detail of the leak-proof silicone seal on the lunch box lid.

5. TROUBLESHOOTING

5.1 Error Code E1

If the E1 error code appears, follow these steps for a potential self-repair:

1. **Remove & Open:** Remove the four screws and gently pry open the left and right clips.
2. **Disconnect Battery:** Remove the battery cover, then pull out and completely disconnect the battery connector.
3. **Discharge Key:** With the screen black, press the power button several times.
4. **Reassemble:** Put the device back together.

Note: This operation involves disassembly. Proceed with caution. If you are unsure, contact official customer service for guidance.

6. SPECIFICATIONS

Feature	Specification
Model	1.3L Cordless Electric Lunch Box
Capacity	1.3 Liters (5.5 Cups)
Color	Navy Blue
Material	Food-grade 304 Stainless Steel (inner container), Steel
Battery	59.2Wh Lithium Battery
Heating Time	Approx. 2 hours continuous heating + 1 hour automatic keep warm
Max Heating Plate Temp	220°F (104°C)
Special Features	Dishwasher Safe (removable parts), Leak-Resistant Seal, Memory Function, Automatic Keep Warm
Included Components	Lunch box, inner container, removable divider, utensils, insulated bag
UPC	850079821873
ASIN	B0GQH1Q545

30% More Capacity



Image: The 1.3L (5.5 cups) capacity of the EAST OAK lunch box compared to a smaller competitor.

6.1 Important Safety Notes

- **Allergy Notice:** The material contains trace amounts of nickel. Not suitable for individuals with a nickel allergy.
- **Low-Temperature Environment:** To prevent temperature sensor reading errors, avoid powering on or storing the unit in extremely low-temperature environments.

7. WARRANTY INFORMATION

EAST OAK products are manufactured to high-quality standards. For specific warranty details regarding your 1.3L Cordless Electric Lunch Box, please refer to the documentation included with your purchase or contact customer support.

8. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue, please contact EAST OAK customer service through the official channels provided on the product packaging or the brand's official website. When contacting support, please have your product model (1.3L) and ASIN (B0GQH1Q545) available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GQH1Q545>

More documents and user manuals: <https://manuals.plus/>