

## T4TREAM ILSC6DRSC-NO

# T4TREAM 6-Drawer Dresser User Manual

Model: ILSC6DRSC-NO

## INTRODUCTION

Thank you for choosing the T4TREAM 6-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

## SAFETY INFORMATION

Your safety and the safety of others are paramount. Please observe the following safety precautions:

- **Anti-Tip Device:** Always install the included anti-tip device to prevent serious injury from furniture tip-over. Secure the dresser to a wall stud using the provided hardware.
- **Weight Limits:** Do not exceed the maximum weight capacity for the top surface or individual drawers. Overloading can cause instability and damage.
- **Child Safety:** Keep small parts and assembly hardware away from children. Do not allow children to climb on or play with the dresser.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all fasteners are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- **Placement:** Place the dresser on a level surface to ensure stability.

## PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present. If any parts are missing or damaged, please contact customer support.

*Note: Specific part names and quantities will be detailed in the included assembly guide.*

- Dresser Panels (Top, Bottom, Sides, Back)
- Drawer Panels (Fronts, Sides, Back, Bottoms)
- Drawer Slides/Rails

- Gold Metal Handles
- Legs/Base Frame
- Assembly Hardware (screws, dowels, cam locks, anti-tip kit)
- Assembly Tool (e.g., Allen wrench)

## SETUP AND ASSEMBLY

Assembly is required for this dresser. Follow the detailed step-by-step instructions provided in the separate assembly guide included with your product. The process generally involves:

1. **Unpacking:** Carefully unpack all components and lay them out on a clean, soft surface to prevent damage.
2. **Identify Parts:** Match each part to the corresponding label in the assembly guide.
3. **Assemble Frame:** Construct the main dresser frame by attaching side panels, bottom panel, and back panel.
4. **Install Drawer Slides:** Secure the drawer slides to the interior of the dresser frame.
5. **Assemble Drawers:** Build each drawer by attaching the side, back, and bottom panels to the drawer front. Install drawer slides to the assembled drawers.
6. **Attach Handles:** Secure the gold metal handles to the drawer fronts.
7. **Install Legs/Base:** Attach the support legs or base frame to the bottom of the dresser.
8. **Insert Drawers:** Carefully slide the assembled drawers into the dresser frame.
9. **Install Anti-Tip Kit:** Securely attach the anti-tip device to the back of the dresser and to a wall stud. This step is critical for safety.

 


Image: Detailed dimensions of the dresser and a single drawer, including overall width (54\"), height (32\"), depth (15.7\"), and drawer internal measurements.

## OPERATING INSTRUCTIONS

The T4TREAM 6-Drawer Dresser is designed for smooth and efficient storage.

- **Opening/Closing Drawers:** Gently pull the gold metal handles to open the drawers. Push them back in until they are fully closed. The drawers feature smooth-gliding rails for easy operation.
- **Weight Distribution:** Distribute items evenly within the drawers to prevent strain on the slides and maintain balance. Avoid placing excessively heavy items in a single drawer.
- **Top Surface Use:** The top surface can be used for decorative items or as a TV stand. Ensure any items placed on top do not exceed the dresser's weight capacity and are stable.

## Keep Your Bedroom Neat and Organized



*Image: The dresser with several drawers partially open, illustrating the storage capacity and how items can be organized within.*



**Gold Metallic Handle**  
- finished in a striking gold tone

**The panels are adorned with vertical flutes** provides a tactile and visual texture

**Hi-Q Sliding Rail**

*Image: A detailed view of an open drawer, showcasing the fluted texture of the drawer front, the gold metallic handle, and the smooth-gliding rail mechanism.*

## MAINTENANCE

Proper care will extend the life and appearance of your T4TREAM dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or excessive moisture, which can damage the natural oak finish.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain stability.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.

## Troubleshooting

If you encounter any issues with your dresser, refer to the following common solutions:

| Problem                              | Possible Cause                                       | Solution                                                                                                                                                                           |
|--------------------------------------|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Drawers do not slide smoothly.       | Misaligned drawer slides, loose screws, obstruction. | Check that drawer slides are correctly installed and aligned. Ensure all screws on the slides are tight. Remove any obstructions from the drawer path.                             |
| Dresser feels wobbly or unstable.    | Loose assembly fasteners, uneven floor.              | Ensure all assembly screws and cam locks are fully tightened. Verify the dresser is on a level surface; use shims if necessary. Confirm the anti-tip device is securely installed. |
| Drawer handles are loose.            | Screws attaching handles are loose.                  | Tighten the screws from the inside of the drawer front that secure the handles.                                                                                                    |
| Scratches or minor damage to finish. | Accidental impact, abrasive cleaning.                | For minor scratches, a wood repair kit or furniture marker matching the natural oak finish may be used. Avoid abrasive materials for cleaning.                                     |

## Specifications

| Feature                      | Detail                        |
|------------------------------|-------------------------------|
| Brand                        | T4TREAM                       |
| Model Name                   | ILSC6DRSC-NO                  |
| Material                     | FSC-Certified Engineered Wood |
| Finish Type                  | Painted (Natural Oak)         |
| Product Dimensions (Overall) | 15.75"D x 54"W x 32"H         |
| Number of Drawers            | 6                             |
| Item Weight                  | 120 pounds                    |
| Included Components          | Hardware, Anti-tip kit        |
| Color                        | Natural Oak                   |
| Style                        | Modern, Fluted                |

## Warranty and Support

For warranty information, missing parts, or further assistance, please contact T4TREAM customer support. Refer to your purchase documentation for specific warranty terms and contact details.

You can often find support information on the official T4TREAM website or through the retailer where the product was purchased.

**Online Support:** [Visit the T4TREAM Store on Amazon](#)

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question