

[Manuals.plus](#) /

› [Pipishell](#) /

› Pipishell Power Recliner Chair (Model MSSS10) User Manual

Pipishell MSSS10

Pipishell Power Recliner Chair User Manual

Model: MSSS10 | Brand: Pipishell

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all connections are secure before operating the recliner.
- Keep children and pets away from the moving parts of the recliner.
- Do not allow anyone to sit or stand on the footrest when it is extended.
- Avoid placing hands or feet near the reclining mechanism to prevent injury.
- Do not expose the power cord or adapter to water or excessive heat.
- The maximum weight capacity for this recliner is 300 pounds (136 kg). Do not exceed this limit.
- Unplug the recliner from the power outlet before cleaning or performing any maintenance.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Backrest (1)
- Seat Base (1)
- Arm Pads (2)
- Power Adapter (1)
- Remote Control (1)
- Hardware Pack (screws, washers, Allen wrench) (1)

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Pipishell Power Recliner Chair. Assembly typically takes approximately 15-20 minutes.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent damage.
2. **Attach Arm Pads:** Slide the arm pads onto the metal brackets on the sides of the seat base until they click securely into place. Ensure they are firmly attached.
3. **Connect Backrest:** Align the backrest with the metal receivers on the seat base. Push down firmly until the backrest locks into position. You should hear a click.
4. **Connect Power:** Locate the power cable extending from the chair and connect it to the power adapter. Plug the power adapter into a standard electrical outlet.
5. **Remote Connection:** Connect the remote control cable to the corresponding port on the side of the chair. The remote can be stored in the side pocket when not in use.



Figure 3.1: Product Dimensions. This diagram illustrates the overall dimensions of the recliner, including seat width, depth, and height, which can be helpful during assembly and placement.



Figure 3.2: Assembled Recliner. A front view of the fully assembled recliner, showing its compact design and the remote control connected and ready for use.

4. OPERATING INSTRUCTIONS

The Pipishell Power Recliner Chair features an electric reclining system controlled by a user-friendly remote.

4.1 Remote Control Functions

- **Recline Button (Up Arrow):** Press and hold to smoothly recline the backrest and extend the footrest. Release the button to stop at your desired position.
- **Upright Button (Down Arrow):** Press and hold to smoothly return the backrest to an upright position and retract the footrest. Release the button to stop at your desired position.
- **Reset Button (Hand Icon):** Press this button to return the chair to its fully upright, closed position.

Remote Recline Made Easy



Figure 4.1: Remote Control. This image highlights the intuitive remote control, making it easy to adjust the chair's position for personalized comfort.

4.2 Infinite Reclining System

Unlike traditional recliners with fixed positions, this power recliner offers an infinite reclining system. You can adjust the backrest from 105° to 150° and the footrest from 0° to 90°, allowing you to find your perfect angle for reading, watching TV, napping, or relaxing.

Seamless Recline for Comfort



Figure 4.2: Seamless Recline. The chair's ability to adjust to various angles provides comfort for different activities, from upright seating to a gentle recline.

4.3 Product Features

- **Spacious Design:** The chair features a generous 19.7" wide seat and a 62.6" extended recline, providing ample space for full-body relaxation.
- **Premium Materials:** Constructed with high-density foam, plush cotton padding, and independent springs for durability and comfort. The soft chenille fabric offers a cozy feel.
- **Sturdy Construction:** Built with a solid steel frame for long-term stability and reliable support.

Why Choose US?

PIPIHELL ✓




Wider & Deeper Seating



Extended Footrest

Others ✗

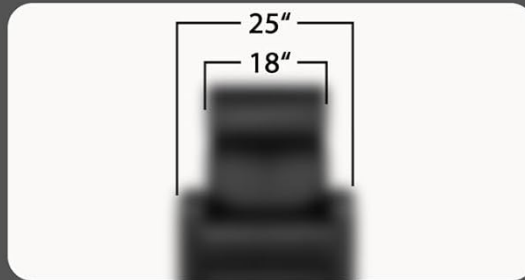

Narrow Seating



Shorter Footrest

Figure 4.3: Enhanced Seating. This image illustrates the wider and deeper seating area and the extended footrest, designed for superior comfort compared to standard recliners.

Comfort You Can Feel

- 1 Velvety Chenille Fabric
- 2 Plush Cotton Padding
- 3 High-Density Foam
- 4 Independent Spring System



Figure 4.4: Comfort Layers. A detailed view of the internal construction, highlighting the quality materials used for optimal support and comfort.

4.4 Product Video

Your browser does not support the video tag.

Video 4.1: Power Recliner Chair Overview. This video demonstrates the assembly process, various reclining positions, and key features of the Pipishell Power Recliner Chair, including the remote control operation and comfortable design.

5. MAINTENANCE

Proper care and maintenance will extend the life of your recliner.

- **Cleaning Fabric:** For general cleaning, use a soft brush or vacuum cleaner with an upholstery attachment to remove dust and loose debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild upholstery cleaner according to the product instructions, testing on an inconspicuous area first.
- **Mechanism Care:** Periodically check all bolts and screws to ensure they are tight. Do not lubricate the reclining mechanism unless specifically instructed by the manufacturer.

- **Electrical Components:** Ensure the power cord and adapter are free from damage. Do not attempt to repair electrical components yourself.

6. TROUBLESHOOTING

If you encounter any issues with your recliner, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not operate.	No power supply or loose connection.	Check if the power adapter is securely plugged into both the chair and the wall outlet. Ensure the wall outlet is functional. Verify the remote control cable is firmly connected.
Recliner makes unusual noises.	Loose hardware or obstruction in mechanism.	Inspect for any loose bolts or screws and tighten them. Check for any objects obstructing the reclining mechanism.
Footrest does not extend/retract fully.	Obstruction or mechanism issue.	Ensure there are no obstructions under or around the footrest. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Pipishell
Model Name	MSSS10
Color	Grey
Material	Metal (Frame), Chenille Fabric (Upholstery)
Product Dimensions (D x W x H)	26.2"D x 27.6"W x 37.4"H
Item Weight	80 Pounds (36.3 kg)
Maximum Weight Recommendation	300 Pounds (136 kg)
Recline Angle Range	105° to 150°
Footrest Angle Range	0° to 90°
Included Components	Arm Pad, Backrest, Cushion, Hardware
Assembly Required	Yes

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Pipishell customer service directly. Keep your purchase receipt for any warranty claims.

© 2026 Pipishell. All rights reserved.