

MAHOMICO Loveseat Recliner

MAHOMICO Power Lift Recliner Chair User Manual

Model: Loveseat Recliner

1. INTRODUCTION

Thank you for choosing the MAHOMICO Power Lift Recliner Chair. This electric recliner is designed to provide comfort and support, featuring a power lift mechanism for easy standing, vibration massage, lumbar heating, a USB charging port, and convenient side pockets. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your chair.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the chair.
- Keep children and pets away from the chair, especially during operation.
- Ensure the power cord is not pinched or damaged. Do not operate the chair with a damaged cord or plug.
- Do not place hands or feet near the moving parts of the lift mechanism.
- Avoid spilling liquids on the chair, especially near electrical components.
- Do not sit on the footrest when it is extended.
- Ensure the chair is placed on a level surface and has sufficient clearance from walls or other furniture during operation.
- Maximum weight capacity for this chair is 350 pounds (158 kg). Do not exceed this limit.
- Unplug the chair from the power outlet before cleaning or performing any maintenance.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Recliner Backrest
- Recliner Seat Base with Armrests
- Power Adapter
- Remote Control
- User Manual

4. SETUP AND ASSEMBLY

Assembly typically requires two adults. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent damage.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat base. Slide the backrest down firmly until it locks into place. You should hear a click.
3. **Connect Power:** Locate the power cable extending from the chair. Connect it to the power adapter, then plug the adapter into a standard wall outlet.
4. **Connect Remote Control:** Plug the remote control cable into the designated port on the side of the chair.
5. **Test Functions:** Before use, test all functions (lift, recline, massage, heat) using the remote control to ensure proper operation.

MASSAGE & HEATING



Image: Detailed view of chair components including padded headrest, sturdy metal frame, and armrest with pockets.

5. OPERATING INSTRUCTIONS

Your MAHOMICO Power Lift Recliner Chair is operated using the included remote control.

5.1 Power Lift Function

The power lift function assists users in standing up or sitting down effortlessly.

- To **lift** the chair: Press and hold the 'UP' button on the remote. The chair will slowly tilt forward and lift, assisting you to a standing position. Release the button to stop at any desired height.
- To **lower** the chair: Press and hold the 'DOWN' button on the remote. The chair will slowly lower and tilt back to a seated position. Release the button to stop at any desired position.

5.2 Reclining Function

The chair offers multiple reclining positions for various activities.

- To **recline**: While seated, press and hold the 'DOWN' button. The backrest will recline, and the footrest will extend. Release the button when you reach your desired angle for reading, watching TV, or napping.
- To **return to upright position**: Press and hold the 'UP' button. The footrest will retract, and the backrest will return to the upright position.

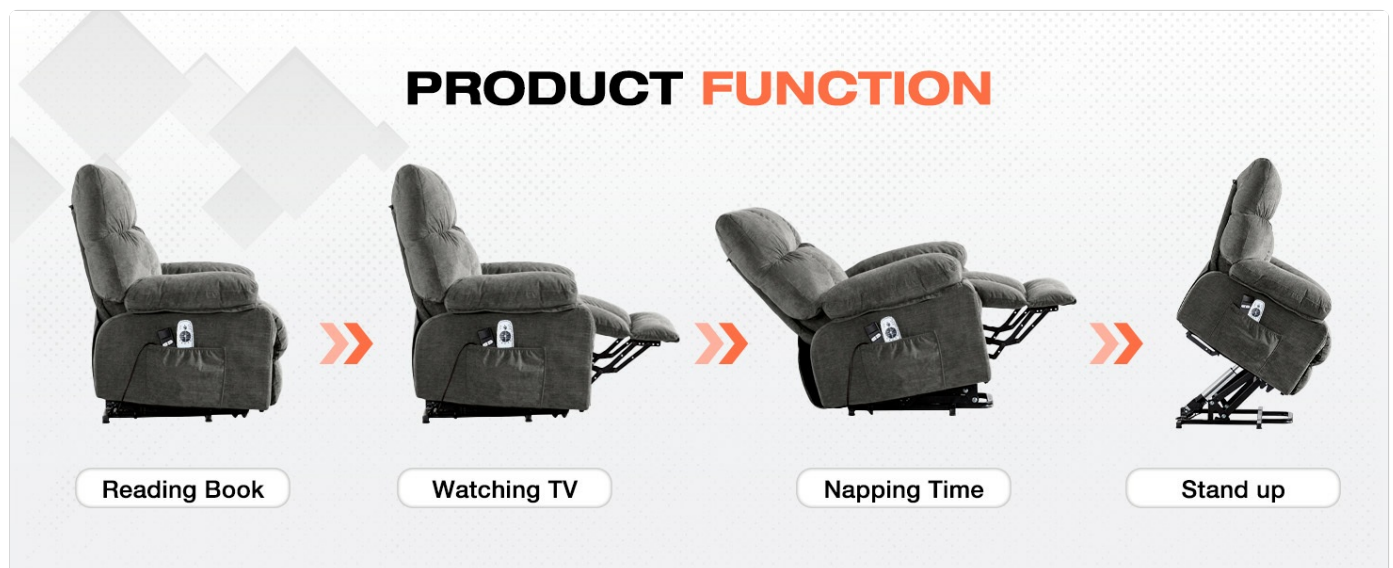


Image: Chair functions demonstrating reading, watching TV, napping, and stand-up positions.

5.3 Vibration Massage and Lumbar Heating

The chair features 8-point vibration massage and lumbar heating for enhanced relaxation.

- **Massage Activation**: Use the 'MASSAGE' button on the remote to cycle through 5 massage modes.
- **Intensity Adjustment**: Adjust massage intensity using the dedicated buttons on the remote.
- **Lumbar Heating**: Press the 'HEAT' button to activate or deactivate the lumbar heating function.
- **Timer**: Set a massage/heat duration using the 'TIMER' button.

POWER LIFT CHAIR



Image: Diagram illustrating 8-point massage and lumbar heating zones with remote control.

5.4 USB Charging Port

A USB charging port is located on the side of the chair for convenient device charging.

- Plug your USB charging cable into the port to charge compatible electronic devices.
- Note: The USB port is for charging only and does not support data transfer.

6. CARE AND MAINTENANCE

Proper care will extend the life of your recliner.

- **Cleaning:** Wipe clean with a damp cloth. For stubborn stains, use a mild fabric cleaner and test on an inconspicuous area first. Do not use harsh chemicals or abrasive cleaners.
- **Vacuuming:** Regularly vacuum the fabric to remove dust and debris.
- **Power Cord:** Periodically inspect the power cord and plug for any signs of damage.

- **Moving the Chair:** When moving the chair, lift it rather than dragging it to prevent damage to the base and flooring.

7. TROUBLESHOOTING

If you encounter issues, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Chair does not operate (no lift, recline, massage, or heat)	1. Power cord unplugged. 2. Power outlet not working. 3. Remote control not connected or faulty.	1. Ensure power cord is securely plugged into the chair and wall outlet. 2. Test the outlet with another device. 3. Check remote connection. If still not working, contact support.
Lift or recline mechanism is noisy or jerky	1. Loose connections or components. 2. Obstruction in the mechanism.	1. Check for any loose bolts or connections (do not attempt to disassemble the mechanism). 2. Inspect for any objects obstructing the moving parts.
Massage or heating function not working	1. Remote control issue. 2. Internal wiring issue.	1. Ensure the remote is functioning for other operations. Try pressing the massage/heat buttons firmly. 2. If other functions work but massage/heat do not, contact customer support.
USB charging port not working	1. Device not compatible. 2. Chair not powered on. 3. Faulty USB port.	1. Try charging a different device. 2. Ensure the chair is plugged in and receiving power. 3. Contact customer support if the issue persists.

If the problem persists after attempting these solutions, please contact MAHOMICO customer support.

8. SPECIFICATIONS

Refer to the following table for detailed product specifications:

POWER LIFT RECLINER CHAIR

Stand easily without increasing pressure on their back or knees



Have a **Napping**



Watching TV



Stand Up Easily



Image: Product dimensions diagram.

Feature	Detail
Brand	MAHOMICO
Model Name	Loveseat Recliner
Color	Grey
Material	Textile and Sponge
Frame Material	Metal
Product Dimensions (D x W x H)	35"D x 32"W x 29"H
Item Depth	40 inches

Feature	Detail
Maximum Weight Recommendation	350 pounds
Reclining Position Count	3
Additional Features	Power Lift, Reclining, Vibration Massage, Lumbar Heating, USB Charging Port, Side Pocket
Included Components	Remote Control
Indoor/Outdoor Usage	Indoor
Product Care Instructions	Wipe Clean

9. WARRANTY INFORMATION

MAHOMICO products are manufactured to high-quality standards. For specific warranty details regarding your Power Lift Recliner Chair, please refer to the warranty card included with your purchase or contact MAHOMICO customer support directly. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need troubleshooting support not covered in this manual, please contact MAHOMICO customer service.

- **Website:** Visit the official MAHOMICO website for support resources.
- **Email:** Refer to your product packaging or warranty card for customer service email.
- **Phone:** Refer to your product packaging or warranty card for customer service phone number.

Please have your model name (Loveseat Recliner) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question