

[Manuals.plus](#) /

› [Lenovo](#) /

› Lenovo IdeaPad Slim 3 15.3-inch Copilot+ PC Notebook User Manual

Lenovo IdeaPad Slim 3 15Q8X10 (83N30076IX)

Lenovo IdeaPad Slim 3 Copilot+ PC Notebook User Manual

Model: IdeaPad Slim 3 15Q8X10 (83N30076IX)

1. PRODUCT OVERVIEW

The Lenovo IdeaPad Slim 3 15Q8X10 is a portable notebook designed for work, study, and multitasking. It features a 15.3-inch IPS display, a Snapdragon X X1-26-100 processor, 16GB of LPDDR5X RAM, and a 512GB SSD. This manual provides essential information for setting up, operating, and maintaining your device.



Figure 1: Front view of the Lenovo IdeaPad Slim 3 Notebook.

2. SETUP

2.1 Unpacking

Carefully remove the notebook and any included accessories from the packaging. The package contents typically include the laptop user manual. Please note that the charger is not included in the box, in compliance with Directive (EU) 2022/2380.



Figure 2: Information regarding the charger not being included. The notebook requires a compatible USB-C Power Delivery charger.

2.2 Connecting Power

Since the charger is not included, you will need a compatible USB-C Power Delivery charger. Connect the USB-C charger to one of the USB-C ports on the notebook. It is recommended to fully charge the battery before initial use.

2.3 Initial Power On

Press the power button to turn on the notebook. Follow the on-screen instructions to complete the initial setup of Windows 11.

2.4 Ports and Connectors

Familiarize yourself with the available ports on your IdeaPad Slim 3:

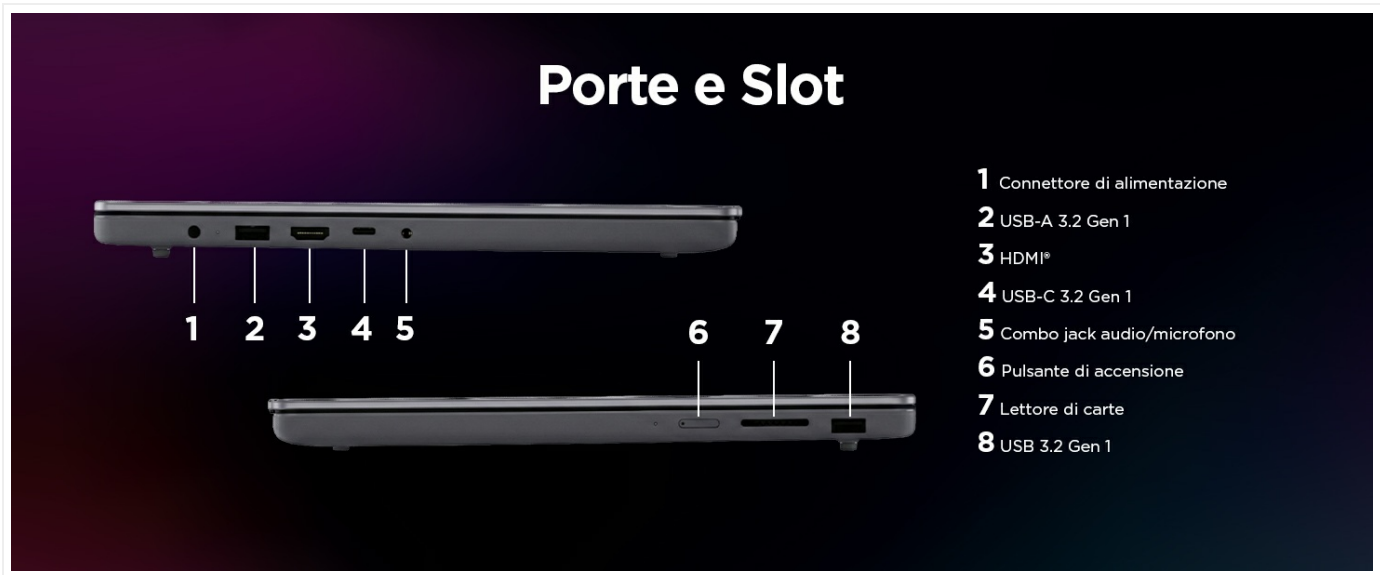


Figure 3: Diagram illustrating the various ports and slots on the Lenovo IdeaPad Slim 3.

1. Power Connector
2. USB-A 3.2 Gen 1 Port
3. HDMI Port
4. USB-C 3.2 Gen 1 Port
5. Combo Audio Jack (headphone/microphone)
6. Power Button
7. Card Reader
8. USB 3.2 Gen 1 Port

3. OPERATING INSTRUCTIONS

3.1 Using the Keyboard and Touchpad

The notebook features a QWERTY keyboard and a multi-touch touchpad for navigation. Refer to the Windows 11 documentation for specific gestures and shortcuts.

3.2 Performance and Multitasking

The Snapdragon X X1-26-100 processor with 8 cores and 16GB LPDDR5X RAM provides fluid performance for daily tasks, including browsing, document editing, and video calls. The 512GB M.2 PCIe 4.0 SSD ensures fast boot times and quick application loading.

3.3 Display Features

The 15.3-inch WUXGA (1920x1200) IPS display offers a comfortable viewing experience with 300 nits brightness and an anti-glare finish. Dolby Audio enhances the sound experience.

3.4 Connectivity

- **Wi-Fi 6E:** For high-speed wireless internet access.
- **Bluetooth 5.2:** For connecting wireless peripherals such as headphones and mice.
- **USB Ports:** Multiple USB-A and USB-C ports for connecting external devices.
- **HDMI:** For connecting to external monitors or projectors.

3.5 Battery Management

The notebook is equipped with a 50Wh battery. It supports Rapid Charge Boost technology, allowing for quick recharges. Battery life can vary based on usage and settings.

4. MAINTENANCE

4.1 Cleaning the Notebook

Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display and exterior surfaces. Avoid harsh chemicals or abrasive materials.

4.2 Software Updates

Regularly check for and install operating system updates (Windows Update) and driver updates from the Lenovo support website to ensure optimal performance and security.

4.3 Battery Care

To prolong battery life, avoid exposing the notebook to extreme temperatures. It is recommended to occasionally discharge the battery below 20% and then fully recharge it.

5. TROUBLESHOOTING

5.1 Power Issues

- **Notebook does not turn on:** Ensure the battery is charged. Connect a compatible USB-C Power Delivery charger and try again.
- **Battery not charging:** Verify the charger is properly connected and functional. Try a different compatible USB-C charger if available.

5.2 Display Issues

- **No image on screen:** Check if the notebook is powered on. Connect an external monitor via HDMI to test if the issue is with the internal display.

5.3 Connectivity Problems

- **Wi-Fi not connecting:** Ensure Wi-Fi is enabled in Windows settings. Restart your router and the notebook.
- **Bluetooth device not pairing:** Ensure the Bluetooth device is in pairing mode and within range. Check Bluetooth settings on the notebook.

For further assistance, refer to the official Lenovo support website or contact customer service.

6. SPECIFICATIONS

Lenovo IdeaPad Slim 3 15Q8X10 Key Specifications

Feature	Detail
Brand	Lenovo
Model Name	IdeaPad Slim 3 15Q8X10
Model Number	83N30076IX
Screen Size	15.3 Inches
Native Monitor Resolution	1920 x 1200 pixels (WUXGA)
Display Technology	IPS, LED, Anti-glare
Maximum Display Brightness	300 Nits
CPU Model	Snapdragon X X1-26-100
Processor Cores	8
Installed RAM Memory	16 GB LPDDR5X-8448
Hard Drive Size	512 GB SSD (M.2 PCIe 4.0)
Operating System	Windows 11
Connectivity Technology	Wi-Fi 6E (802.11ax), Bluetooth 5.2, USB, HDMI
Total USB Ports	3 (USB-A 3.2 Gen 1, USB-C 3.2 Gen 1)
Total HDMI Ports	1
Battery Type	Lithium Ion, 50 Watt-hours
Item Dimensions (LxWxT)	34.3L x 23.9W x 1.7H cm
Weight	1.55 kg
Webcam Features	Yes, Front-facing
Audio Output Type	Speakers, Headphones (2W x2 Dolby Audio)

7. WARRANTY AND SUPPORT

7.1 Product Warranty

This Lenovo IdeaPad Slim 3 notebook comes with **a2-year product warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty information provided with your product or visit the official Lenovo support website.

7.2 Customer Support

For technical assistance, driver downloads, or service requests, please visit the official Lenovo support website. You can find contact information for customer service in your region on the website.

Lenovo Support Website: support.lenovo.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question